



INSPECTION

INSPECT STABILIZER BAR LINK

Rotate the ball joint stud in all directions.

If the movement is not smooth and free, replace the stabilizer link.