


REAR WHEEL HUB BOLT REPLACEMENT

SA06D-01

1. REMOVE WHEEL AND BRAKE DRUM
2. REMOVE HUB BOLT

Using SST, remove the hub bolt.

SST 09650-1701 1

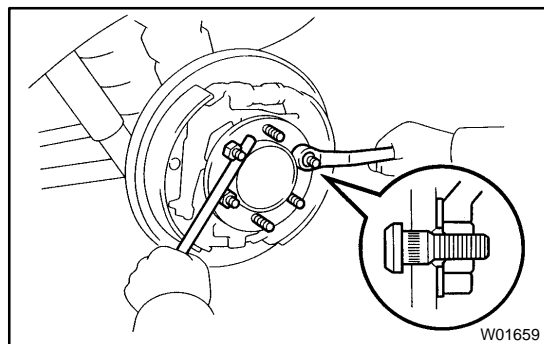

3. INSTALL HUB BOLT

Install a washer and nut to a new hub bolt, as shown in the illustration, and install the hub bolt with torquing the nut.

4. INSTALL BRAKE DRUM AND WHEEL
- Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)