

TIRE AND WHEEL INSPECTION

SA04T-02

1. INSPECT TIRE


- (a) Check the tires for wear and for the proper inflation pressure.

Cold tire inflation pressure:

Tire size	Front kPa (kgf/cm ² , psi)	Rear kPa (kgf/cm ² , psi)
P225/75R15	200 (2.0, 29)	200 (2.0, 29)
P265/70R16	220 (2.2, 32)	220 (2.2, 32)

- (b) Check the tire runout.


Tire runout: 3.0 mm (0.118 in.) or less

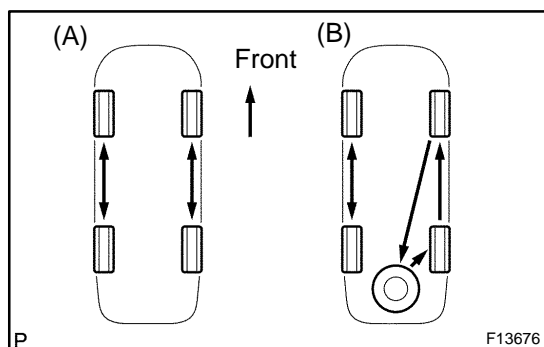

2. ROTATE TIRE

HINT:

- Rotate tires as shown in the illustration.
- Rotate as shown in (B) if the spare tire is included in the rotation.

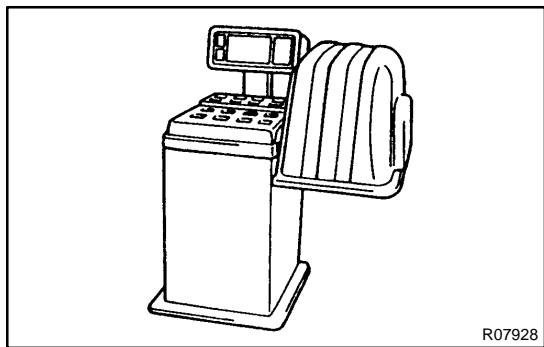

3. INSPECT WHEEL BALANCE

Using the Off-the-car balance, check and adjust the wheel balance.

Unbalance after adjustment: 14.0 g (0.031 lb) or less

- CHECK FRONT SUSPENSION FOR LOOSENESS**
- CHECK STEERING LINKAGE FOR LOOSENESS**
- CHECK BALL JOINT FOR LOOSENESS**

(See page [SA-71](#))

7. CHECK SHOCK ABSORBER WORKS PROPERLY

- Check for oil leak.
- Check the mounting bushings for wear.
- Bounce front and rear of the vehicle.