



## AIR-FUEL RATIO (A/F) SENSOR INSPECTION

SF15E-03

### 1. INSPECT HEATER RESISTANCE OF A/F SENSOR

- Disconnect the A/F sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT

#### Resistance:

At 20°C ( 68°F)	0.8 - 1.4 Ω
At 800°C ( 1,472°F)	1.8 - 3.2 Ω

If the resistance is not as specified, replace the sensor.

**Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)**

- Reconnect the A/F sensor connector.
- ### 2. INSPECT OPERATION OF A/F SENSOR (See page [DI-122](#) )