


INSPECTION

1. REMOVE CIRCUIT OPENING RELAY

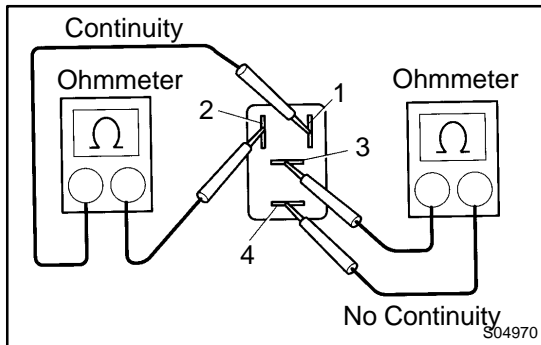

2. INSPECT CIRCUIT OPENING RELAY


(a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 3 and 4.

If there continuity, replace the relay.

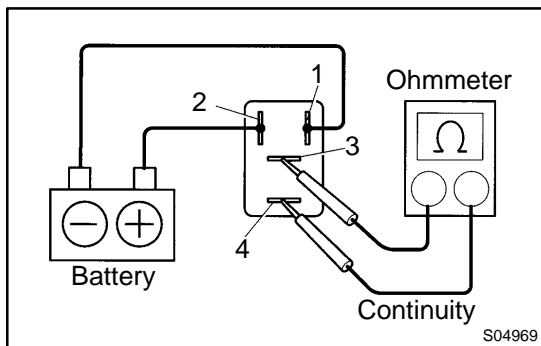

(b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 2.

- (2) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

3. REINSTALL CIRCUIT OPENING RELAY