

INSPECTION

1. REMOVE ECM
2. INSPECT ECM (See page [DI-18](#))
3. REINSTALL ECM