


## EFI MAIN RELAY INSPECTION

SF01B-05

### 1. REMOVE EFI MAIN RELAY (Marking: EFI)

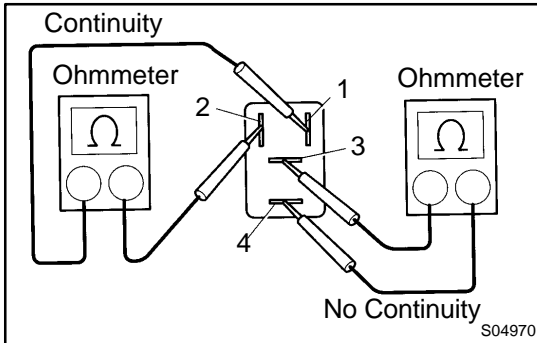

### 2. INSPECT EFI MAIN RELAY


#### (a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

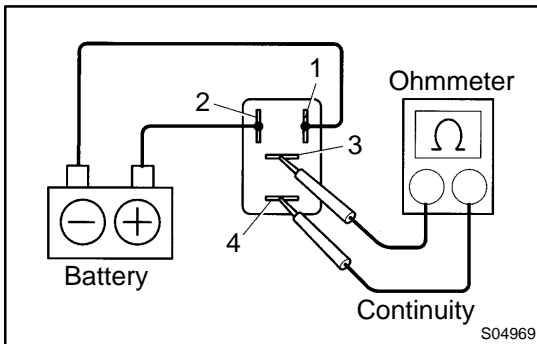

#### (b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 2.
- (2) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

### 3. REINSTALL EFI MAIN RELAY