


FUEL TANK AND LINE COMPONENTS

SF00V-05

CAUTION:

- Always use new gaskets when replacing the fuel tank or component parts.
- Apply the proper torque to all parts tightened.

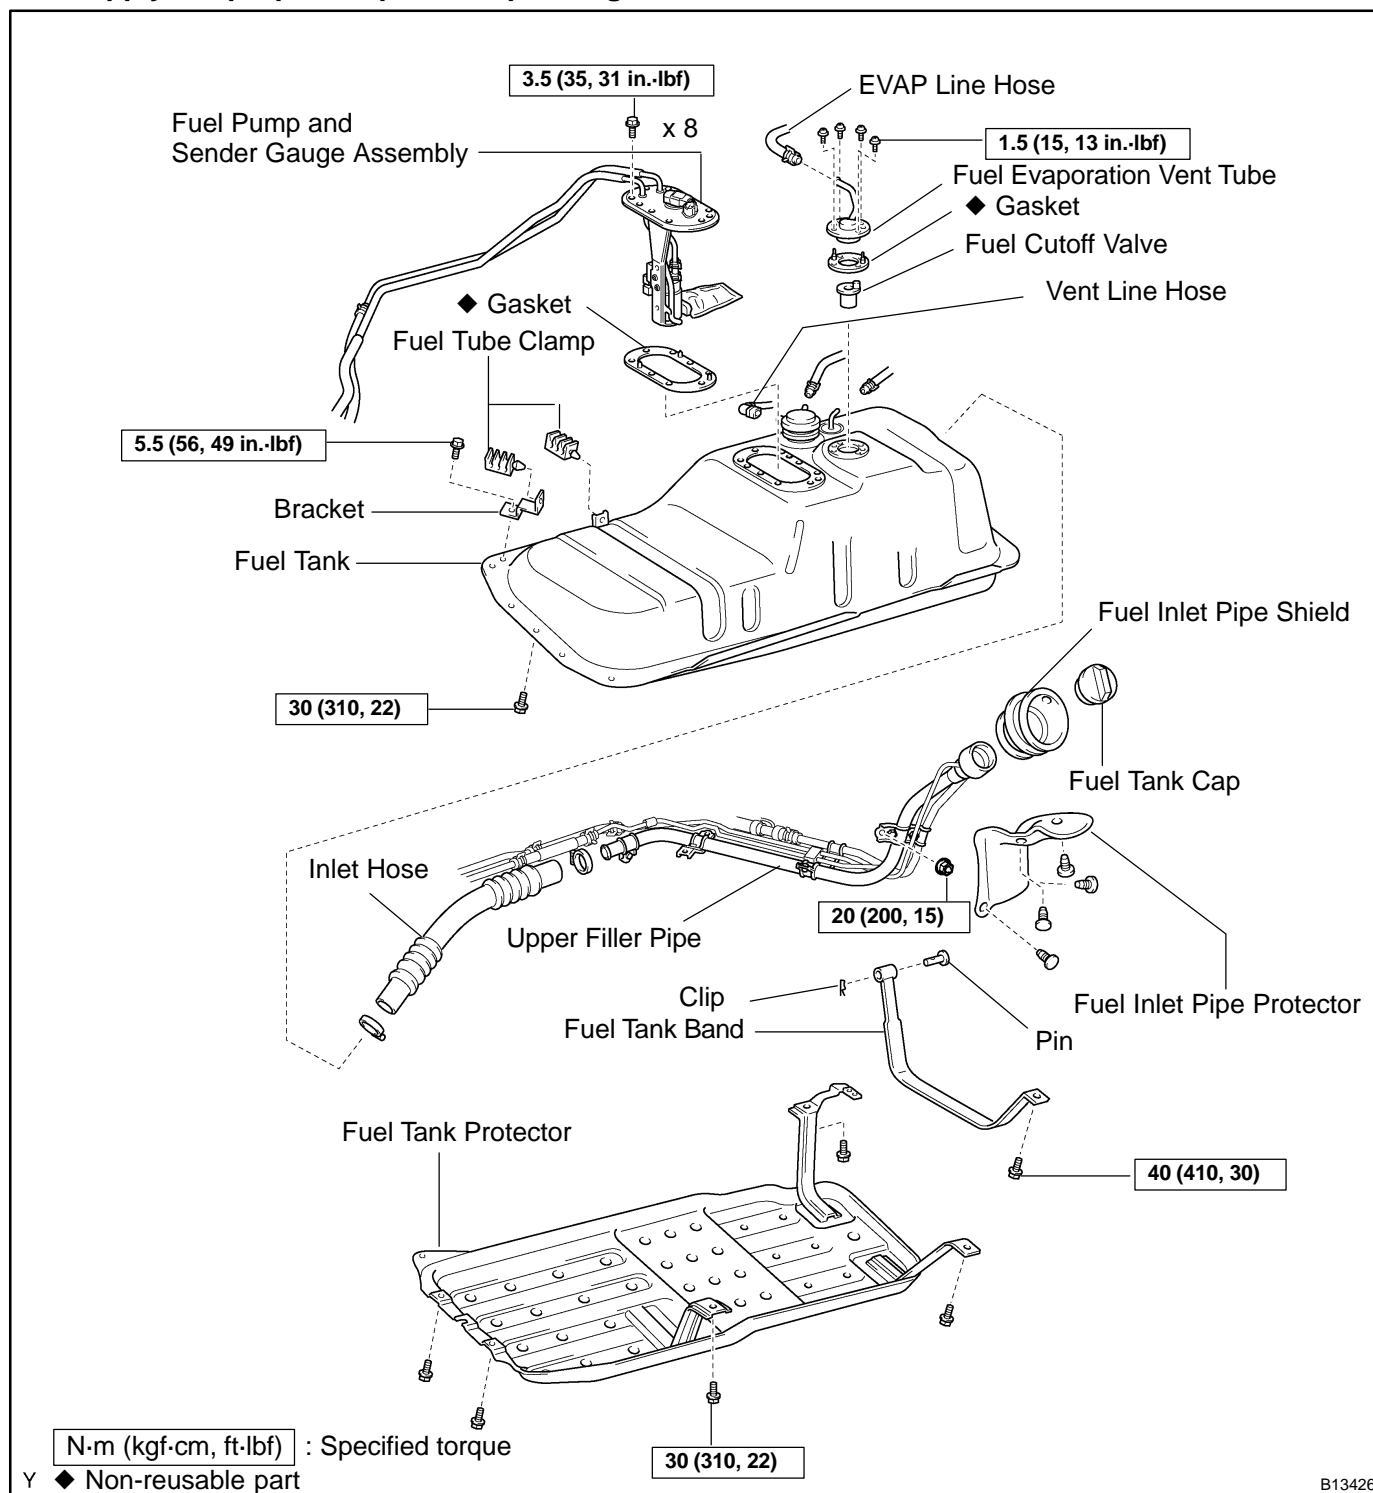

B13426