


INSPECTION

1. INSPECT MAF METER RESISTANCE

Using an ohmmeter, measure the resistance between terminals THA and E2.

Resistance	Temperature
13.6 - 18.4 kΩ	-20 °C (-4 °F)
2.2 - 2.7 kΩ	20 °C (68 °F)
0.5 - 0.7 kΩ	60 °C (140 °F)

If the resistance is not as specified, replace the MAF meter.

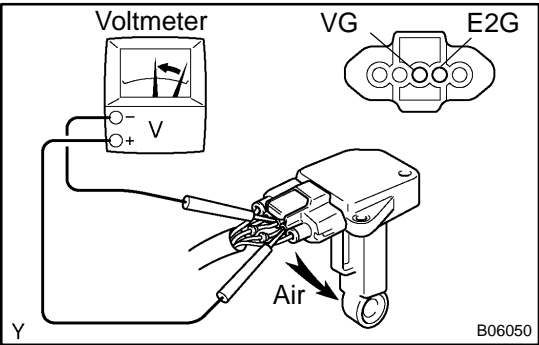

2. INSPECT MAF METER OPERATION

- Connect the MAF meter connector.
- Using a voltmeter, connect the positive (+) tester probe to terminal VG, and negative (-) tester probe to terminal E2G.
- Turn the ignition switch ON.
- Blow air into the MAF meter, and check that the voltage fluctuates.

If operation is not as specified, replace the MAF meter.

- Turn the ignition switch OFF.
- Disconnect the MAF meter connector.