

INSPECTION

1. INSPECT POWER SOURCE VOLTAGE OF VAPOR PRESSURE SENSOR


- Disconnect the vapor pressure sensor connector.
- Turn the ignition switch ON.
- Using a voltmeter, measure the voltage between connector terminals VC and E2 of the wiring harness side.

Voltage: 4.5 - 5.5 V

- Turn the ignition switch OFF.
- Reconnect the vapor pressure sensor connector.

2. INSPECT POWER OUTPUT OF VAPOR PRESSURE SENSOR

- Turn the ignition switch ON.
- Remove the fuel tank cap.

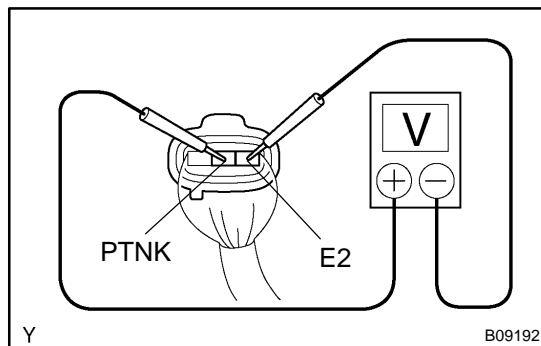

- Connect a voltmeter to terminals PTNK and E2, and measure the output voltage.

Voltage: 3.0 - 3.6 V

- Reinstall the fuel tank cap.