


DISASSEMBLY

NOTICE:

When using a vise, do not overtighten it.


1. REMOVE TRANSPONDER KEY COIL WITH KEY CYLINDER LAMP ASSEMBLY

- (a) Remove the screw and transponder key coil with key cylinder lamp assembly.
- (b) Remove the key cylinder lamp assembly from the transponder key coil.

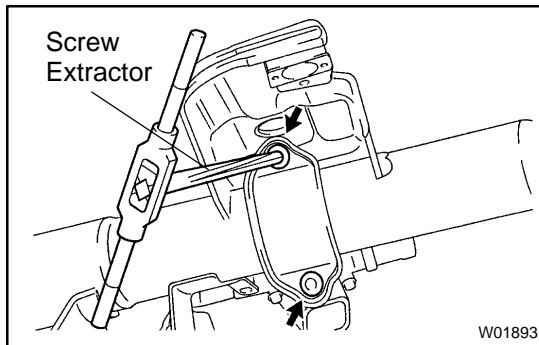

2. REMOVE COLUMN UPPER BRACKET AND COLUMN UPPER CLAMP

- (a) Using a centering punch, mark the center of the 2 tapered-head bolts.
- (b) Using a 3 - 4 mm (0.12 - 0.16 in.) drill, drill into the 2 bolts.
- (c) Using a screw extractor, remove the 2 bolts, column upper bracket and column upper clamp.

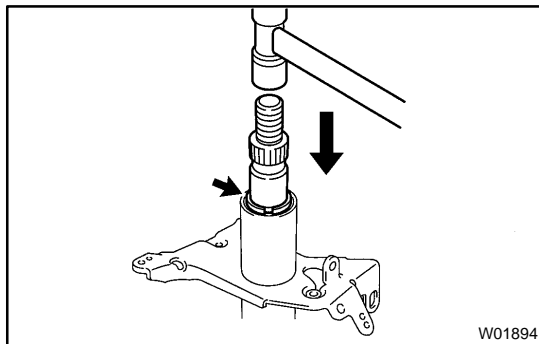

3. REMOVE MAIN SHAFT ASSEMBLY

- (a) Using a snap ring expander, remove the snap ring from the shaft assembly.
- (b) Using a plastic hammer, tap out the shaft assembly from the column tube.
- (c) Using a snap ring expander, remove the snap ring from the shaft assembly.