


## INSPECTION

### NOTICE:

When using a vise, do not overtighten it.

#### 1. INSPECT STEERING LOCK OPERATION

Check that the steering lock mechanism operates properly.

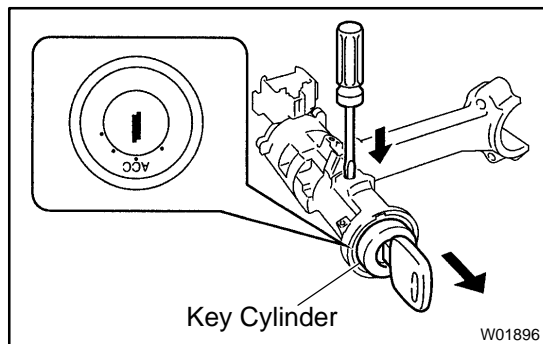

#### 2. IF NECESSARY, REPLACE KEY CYLINDER

- Place the ignition key at the ACC position.
- Using a screwdriver, push down the stop pin of the key cylinder, and pull out the key cylinder.
- Install a new key cylinder.

### HINT:

Make sure the key is at the ACC position.

#### 3. INSPECT IGNITION SWITCH (See page [BE-12](#) )

#### 4. IF NECESSARY, REPLACE IGNITION SWITCH


- Remove the 2 screws and ignition switch.
- Install a new ignition switch with the 2 screws.

#### 5. INSPECT KEY UNLOCK WARNING SWITCH (See page [BE-12](#) )

#### 6. INSPECT KEY INTERLOCK SOLENOID (See page [AT-16](#) )


#### 7. IF NECESSARY, REPLACE KEY UNLOCK WARNING SWITCH WITH KEY INTERLOCK SOLENOID

- Remove the 4 screws and key unlock warning switch with key interlock solenoid.
- Install a new key unlock warning switch and key interlock solenoid with the 4 screws.

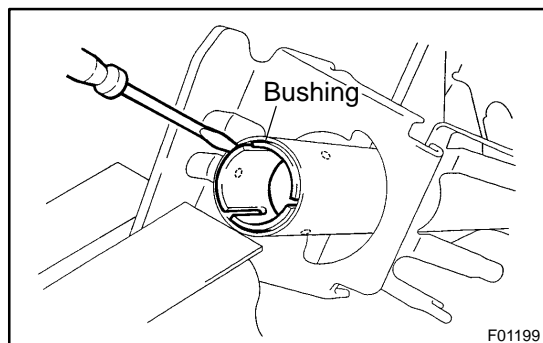


#### 8. IF NECESSARY, REPLACE BUSHING

- Using a screwdriver, loosen the 3 projections of the bushing, and remove the bushing from the column tube.

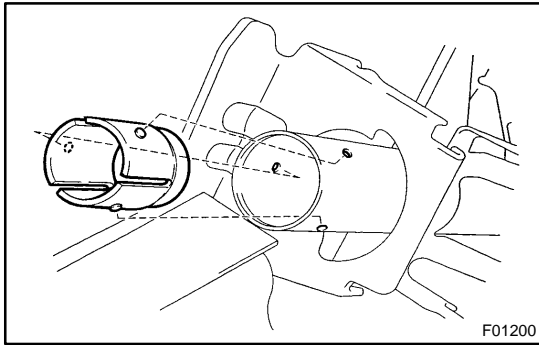

- (b) Coat the inside of a new bushing with molybdenum disulfide lithium base grease.
- (c) Align the projections on the bushing with the holes in the column tube, then install the bushing until the projections are firmly engaged in the holes.

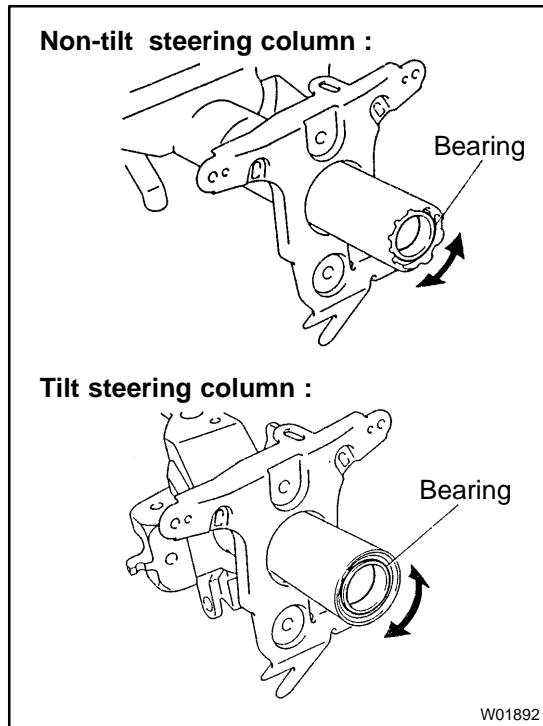


## 9. INSPECT BEARING

- (a) Check the bearing rotation condition and check for abnormal noise.

If the bearing is worn or damaged, replace the column tube/column upper tube.

- (b) Coat the bearing with molybdenum disulfide lithium base grease.

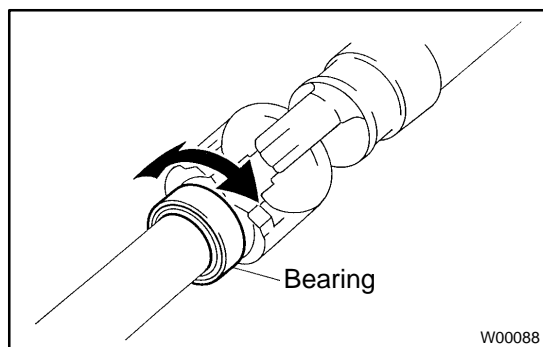

## 10. Tilt steering column: INSPECT BEARING

- (a) Check the bearing rotation condition of the main shaft assembly and check for abnormal noise.

If necessary, replace bearing.

- (b) Coat the bearing with molybdenum disulfide lithium base grease.

## 11. INSPECT TRANSPONDER KEY COIL

(See page [BE-172](#) )

## 12. IF NECESSARY, REPLACE TRANSPONDER KEY COIL

## 13. IF NECESSARY, REPLACE TRANSPONDER KEY AMPLIFIER

- (a) Remove the screw and transponder key amplifier.
- (b) Install a new transponder key amplifier with the screw.