



REMOVAL

NOTICE:

Before changing the starter, check the following items again:

- Connector connection
- Accessory installation, e.g.: theft deterrent system

REMOVE STARTER

- (a) Disconnect the starter connector.
- (b) Remove the nut, and disconnect the starter wire.

Torque: 8.8 N·m (90 kgf·cm, 70 in.-lbf)

- (c) Remove the 2 bolts and starter.

Torque: 39 N·m (400 kgf·cm, 29 ft-lbf)