

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Dual Pressure SW	90980-11149	C 1	Camshaft Position Sensor	90980-10947
A 2	A/C Magnetic Clutch	90980-11271	C 2	Crankshaft Position Sensor	
A 3	A/T Fluid Temp. Sensor	90980-10498	C 4	Cigarette Lighter	90980-10760
A 8	ABS Speed Sensor Front LH	90980-11075	C 5	Cigarette Lighter Illumination	90980-11148
A 9	ABS Speed Sensor Front RH		C 6	Circuit Opening Relay	82602-35150
A11	Auto Antenna Motor	90980-11003	C 7	Clock	90980-11013
A12	A/C Amplifier	90980-11877	C13	Combination SW	90980-11672
A14	A/C Thermistor	90980-10825	C14	Combination SW	90980-11616
A20	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	C15	Combination SW	90980-11594
A21	Airbag Squib (Steering Wheel Pad)	90980-10850	C20	Center Airbag Sensor Assembly	90980-11873
A22	Ashtray Illumination	-	C21	Center Airbag Sensor Assembly	90980-11872
A23	Auto Antenna Control Relay	90980-10799	C22	Center Airbag Sensor Assembly	90980-11871
A24	ABS Speed Sensor Rear LH	90980-11075	C23	Center Cluster SW	90980-11923
A25	ABS Speed Sensor Rear RH		C24	Center Cluster SW	90980-11321
A26	A/C Ambient Temp. Sensor	90980-11070	C25	Combination Meter	90980-11113
A27	Air Fuel Ratio Sensor	90980-11178	C26	Combination Meter	90980-11116
A28	Airbag Sensor Front LH	90980-11856	C27	Combination Meter	90980-11974
A29	Airbag Sensor Front RH		C28	Combination Meter	90980-11475
A30	A/C Amplifier	90980-11391	C29	Combination Meter	90980-11115
A31	A/C Amplifier	90980-11390	C30	Center Diff. Lock SW	90980-10997
A32	A/C Magnetic Clutch Relay	90980-10801	D 1	Data Link Connector 1	90980-11323
A33	A/C Room Temp. Sensor	90980-10825	D 4	Detection SW (Transfer L4 Position)	90980-11156
A34	A/C Solar Sensor	90980-11369	D 5	Detection SW (Transfer Neutral Position)	90980-10923
A35	Air Inlet Control Servo Motor (Automatic A/C)	90980-11319	D 7	Data Link Connector 3	90080-98012
	Air Inlet Control Servo Motor (Manual A/C)	90980-11471	D 8	Daytime Running Light Relay (Main)	90980-12034
A36	Air Mix Control Servo Motor and A/C Water Temp. Sensor	90980-11529	D 9	Daytime Running Light Relay No.4	90980-10759
A37	Air Vent Mode Control Servo Motor	90980-11321	D11	Diode (Back Window)	90980-11251
A38	Accele Position Sensor	90980-11150	D12	Diode (Daytime Running Light No.1)	90980-10962
A39	ADD Actuator	90980-11858	D16	Door Courtesy SW Front LH	90980-11097
B 2	Brake Fluid Level Warning SW	90980-11009	D17	Door Courtesy SW Front RH	
B 5	Back Window Lock SW	90980-10801	D18	Door Courtesy SW Rear LH	
B 6	Blower Motor	90980-10385	D19	Door Courtesy SW Rear RH	
B 7	Blower Resistor	90980-10171	D20	Door Key Lock and Unlock SW Front LH	90980-11245
B 8	Blower SW	90980-10877	D21	Door Key Lock and Unlock SW Front RH	
B 9	Back Door Courtesy SW	90980-11003	D22	Door Lock Control SW Front LH	90980-11013
B10	Back Door Lock Motor and Back Door Unlock Detection SW	90980-11150	D23	Door Lock Control SW Front RH (w/ Power Window)	90980-10797
				Door Lock Control SW Front RH (w/o Power Window)	90980-11013
B11	Back Window Limit SW	90980-11247	D24	Door Lock Motor and Door Unlock Detection SW Front LH	90980-11150
B12	Back Window Motor	90980-11003	D25	Door Lock Motor and Door Unlock Detection SW Front RH	
B13	Buckle SW LH	90980-11212	D26	Door Lock Motor and Door Unlock Detection SW Rear LH	
B14	Blower Motor Linear Controller	90980-11676	D27	Door Lock Motor and Door Unlock Detection SW Rear RH	
B16	Body ECU	90980-10921	D31	Detection SW (Transfer 4WD Position)	90980-11250
B17	Body ECU	90980-11321			
B18	Back Door ECU	90980-11423			
B19	Buckle SW RH	90980-10795			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D32	Detection SW (Transfer H4L Position)	90980-11025	I18	Interior Light (Rear)	90980-10121
E 2	Electronically Controlled Transmission Solenoid	90980-10891	J 1	Junction Connector	90980-11661
E 3	Engine Coolant Temp. Sensor	90980-10737	J 2	Junction Connector	
E 9	Engine Control Module	90980-11421	J 3	Junction Connector	90980-11714
E10	Engine Control Module	90980-11476	J 4	Junction Connector	90980-10976
E11	Engine Control Module	90980-11586	J 5	Junction Connector	90980-10803
E12	Engine Control Module	90980-11637	J 6	Junction Connector	
E13	Engine Hood Courtesy SW	90980-11273	J 7	Junction Connector	90980-11661
E14	Engine Control Module	90980-11638	J 8	Junction Connector	
E15	Extra High Speed Relay	90980-10221	J 9	Junction Connector	90980-10976
F 1	Front Parking Light LH	90980-11149	J10	Junction Connector	90980-11661
F 2	Front Parking Light RH		J11	Junction Connector	
F 3	Front Turn Signal Light LH	90980-11019	J14	Junction Connector	90980-11529
F 4	Front Turn Signal Light RH		K 2	Knock Sensor No.1	90980-11166
F 5	Front Wiper Motor	90980-10551	K 3	Knock Sensor No.2	
F 7	4WD ECU	90980-11423	K 4	Keyless Buzzer	90980-11156
F 8	Front Door Speaker LH	90980-10935	L 1	License Plate Light	90980-11075
F 9	Front Door Speaker RH		M 1	Mass Air Flow Meter	90980-11317
F10	Fuel Sender and Fuel Pump	90980-11077	M 2	Moon Roof Control Motor and Limit SW	90980-10789
F11	Front Fog Light LH	90980-11003	M 3	Moon Roof Control Relay and SW	90980-10799
F12	Front Fog Light RH		M 4	Master Cylinder Pressure Sensor	90980-11451
F13	Fuse Box	82610-35020	N 1	Noise Filter	90980-10843
G 1	Generator	90980-11349	O 1	Oil Pressure SW	90980-11363
G 2	Generator	90980-09212	P 1	Park/Neutral Position SW	90980-11784
G 3	Glove Box Light	90980-11148	P 2	Parking Brake SW	90980-10871
G 4	Garage Door Opener	90980-11368	P 3	Personal Light	90980-10935
H 1	Headlight LH	90980-11314	P 4	Power Window Control SW Front RH	90980-11947
H 2	Headlight RH		P 5	Power Window Control SW Rear LH	90980-10789
H 4	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	P 6	Power Window Control SW Rear RH	
H 5	Horn LH	90980-10619	P 7	Power Window Master SW	90980-11791
H 6	Horn RH		P 8	Power Window Motor Front LH	90980-11011
H 7	Hazard SW	90980-10801	P 9	Power Window Motor Front RH	
H 8	High Mounted Stop Light	90980-11162	P10	Power Window Motor Rear LH	90980-10860
I 2	Igniter	90980-11653	P11	Power Window Motor Rear RH	
I 3	Ignition Coil No.1	90980-11246	P13	Power Seat Control SW (Driver's Seat Lumbar Support)	90980-10601
I 4	Ignition Coil No.2		P14	Power Seat Control SW (Driver's Side)	90980-10878
I 5	Ignition Coil No.3		P15	Power Seat Control SW (Front Passenger's Side)	90980-10876
I 6	Injector No.1	90980-11153	P16	Power Seat Motor (Driver's Seat Lumbar Support)	90980-10825
I 7	Injector No.2		P17	Power Seat Motor (Driver's Seat Reclining Control)	
I 8	Injector No.3		P18	Power Seat Motor (Driver's Seat Slide Control)	
I 9	Injector No.4		P19	Power Seat Motor (Driver's Seat Vertical Control)	
I10	Injector No.5		P20	Power Seat Motor (Front Passenger's Seat Reclining Control)	
I11	Injector No.6				
I13	Ignition Key Cylinder Light	90980-10906			
I14	Ignition SW	90980-11615			
I17	Interior Light (Front)	90980-10935			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
P21	Power Seat Motor (Front Passenger's Seat Slide Control)	90980-10825	T 4	Tailgate Control SW	90980-11015
P22	Power Steering Oil Pressure SW	90980-11428	T 5	Theft Deterrent Horn	90980-10619
P23	Power Outlet (Rear)	90980-10760	T 6	Transponder Key Amplifier	90980-10789
P24	Power Outlet Front LH		T 7	Throttle Control Motor and Clutch	90980-10942
P25	Power Outlet Front RH		T 8	TRAC Off SW	90980-11013
P26	Power Window Master SW	90980-11165	T 9	Trailer Converter	90980-11527
P27	Pretensioner LH	90980-11862	T10	Trailer Socket	90980-10941
P28	Pretensioner RH		U 1	Unlock Warning SW	90980-10795
R 1	Radio and Player (Built-In Type Amplifier) or Stereo Power Amplifier (Separate Type Amplifier)	90980-10997	V 1	Vapor Pressure Sensor	90980-11143
R 2	Radio and Player (Built-In Type Amplifier) or Stereo Power Amplifier (Separate Type Amplifier)	90980-10996	V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
R 5	Remote Control Mirror SW	90980-11450	V 7	VSV (EVAP)	
R 6	Rheostat	90980-10216	V 8	VSV (Vapor Pressure Sensor)	90980-11859
R 7	Rear Combination Light LH	90980-11399	V 9	Vanity Light RH	90980-11368
R 8	Rear Combination Light RH		V10	VSC Actuator	90980-11413
R11	Rear Door Speaker LH	90980-10935	V11	VSC Actuator	90980-10895
R12	Rear Door Speaker RH		V12	VSC Actuator	90980-11151
R13	Rear Heater Blower Motor	90980-10214	V13	VSV (Canister Closed Valve)	90980-11162
R14	Rear Heater Blower Resistor	90980-10916	V14	VSC Buzzer	90980-10906
R15	Rear Heater Blower SW	90980-11296	V15	VSC Deceleration Sensor	90980-11182
R16	Rear Heater Relay	90980-35050	V16	VSC ECU	90980-11935
R17	Rear Window Defogger	90980-10359	V17	VSC ECU	90980-11476
R18	Rear Window Defogger		V18	VSC ECU	90980-11637
R19	Rear Wiper Motor	90980-11194	V19	VSC ECU	90980-11638
R20	Remote Control Mirror LH	90980-11492	W 1	Washer Motor (w/o Daytime Running Light)	90980-11177
R21	Remote Control Mirror RH			Washer Motor and Washer Level Warning SW (w/ Daytime Running Light)	90980-11194
R22	Remote Control Mirror SW	90980-11450	W 2	Water Temp. Sender	90980-10359
S 1	Starter	90980-11400	Y 1	Yaw Rate Sensor	90980-11904
S 2	Starter	90980-09584			
S 3	Shift Lock Control Computer	90980-11614			
S 4	Stop Light SW	90980-11118			
S 5	Short Connector (VSC)	90980-11612			
S 6	Short Connector (VSC)	90980-11609			
S 7	Seat Heater SW LH	90980-10797			
S 8	Seat Heater SW RH	90980-10996			
S 9	Steering Sensor	90980-11581			
S10	Seat Heater (Driver's Seat Back)	90980-10908			
S11	Seat Heater (Driver's Seat Cushion)				
S12	Seat Heater (Front Passenger's Seat Back)				
S13	Seat Heater (Front Passenger's Seat Cushion)				
T 1	2-4 Select Motor	90980-11858			
T 2	Throttle Position Sensor	90980-10711			
T 3	2-4 Select SW	90980-10355			

Note: Not all of the above part numbers of the connector are established for the supply.

