


## J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.


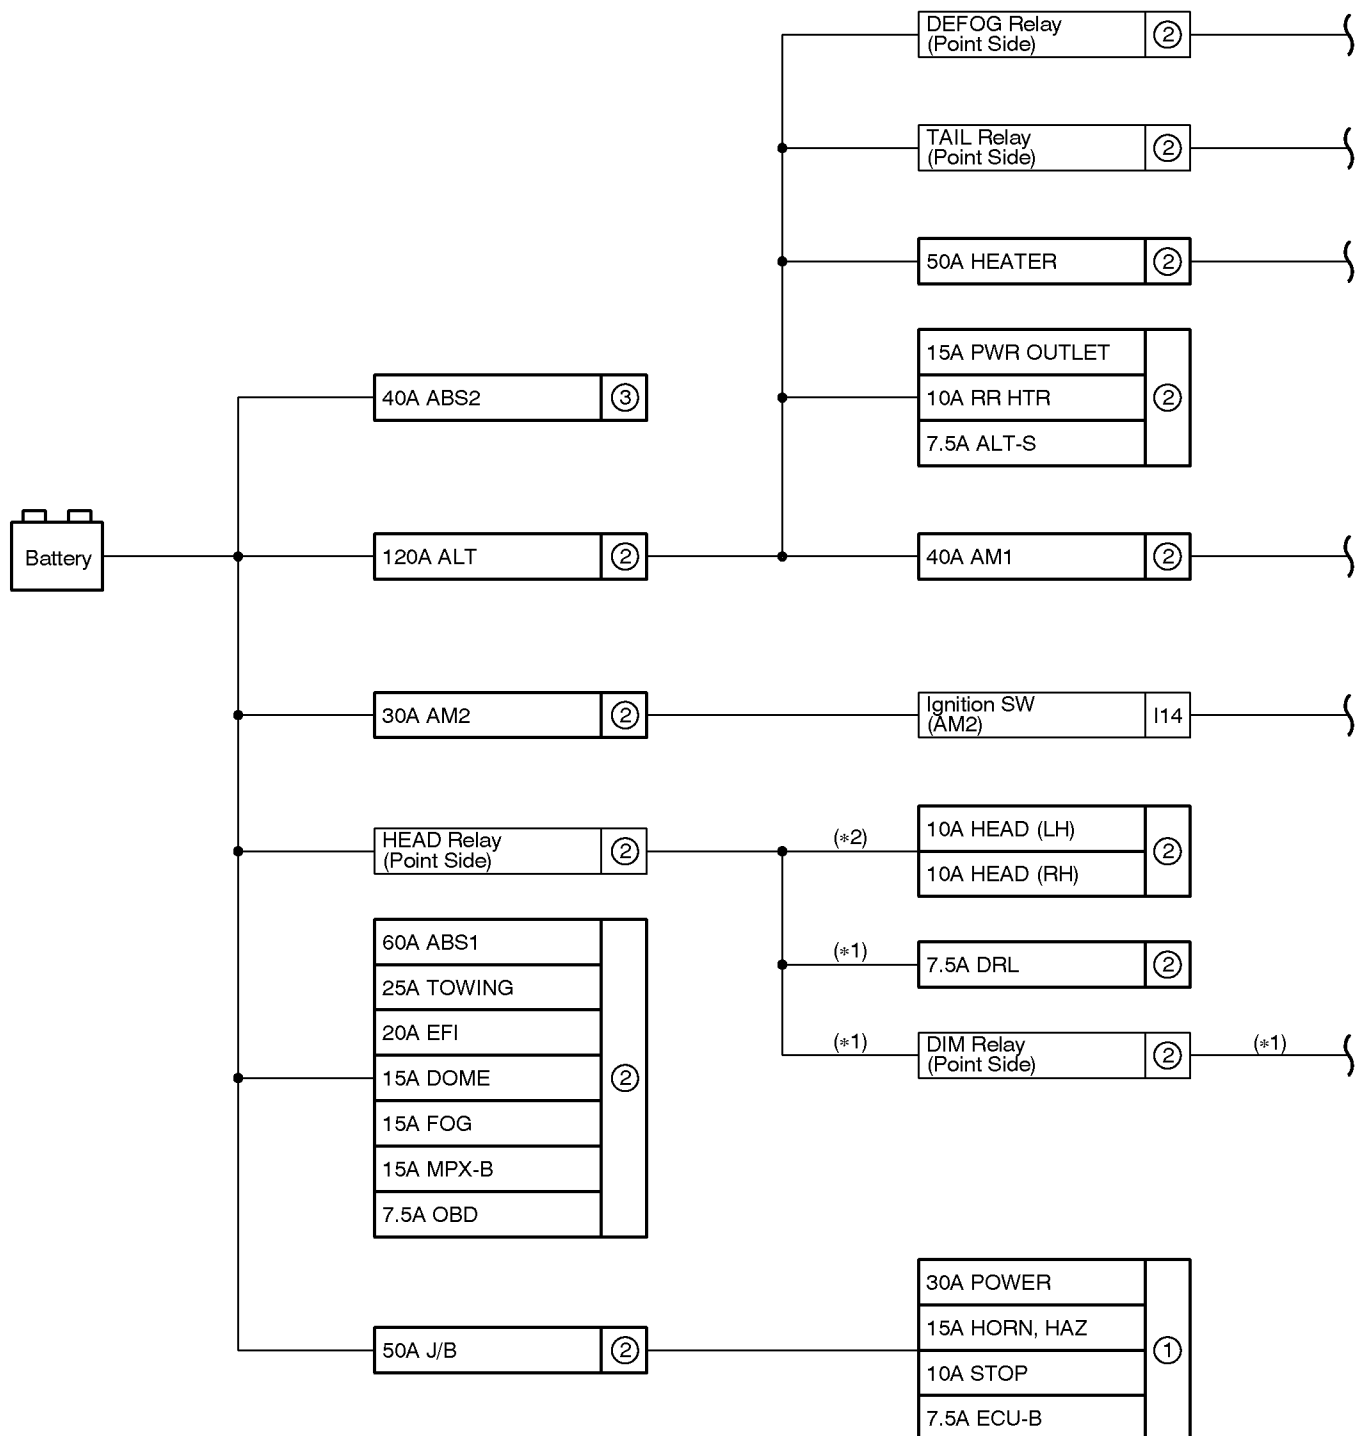


[LOCATION] ① : Driver Side J/B (See page 24)

② : Engine Room R/B (See page 22)

③ : Fuse Box (See page 22)

\*1 : w/ Daytime Running Light  
 \*2 : w/o Daytime Running Light

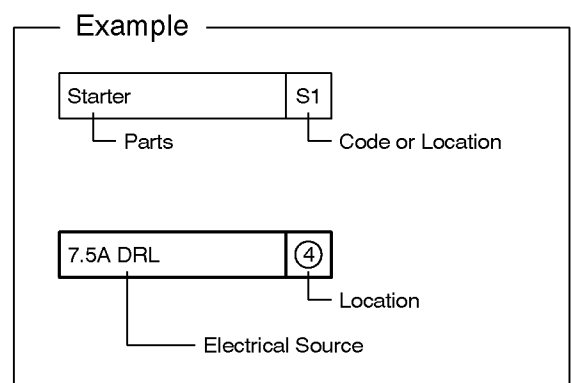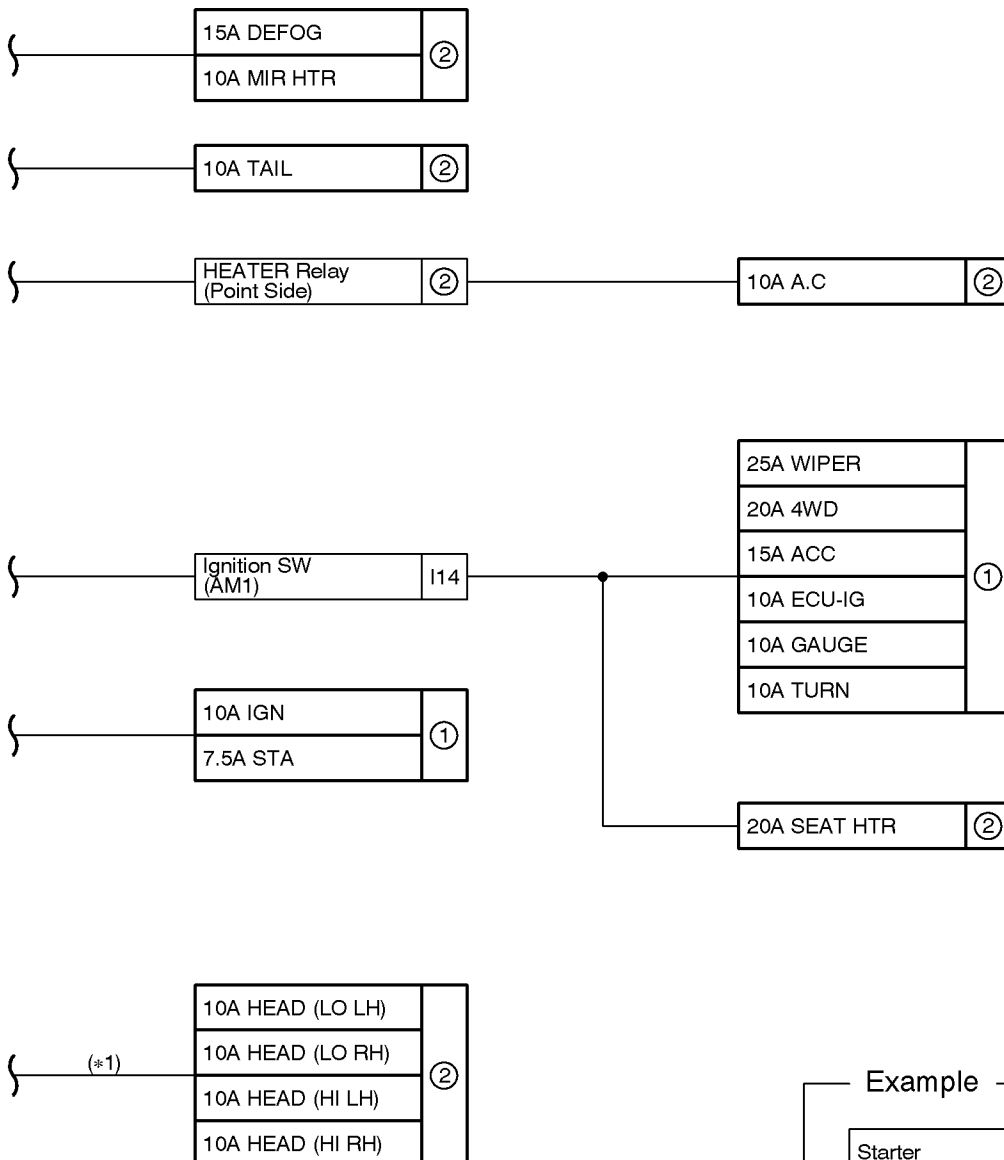

## J POWER SOURCE (Current Flow Chart)

### Engine Room R/B (See Page 22)

Fuse		System	Page
7.5A	ALT-S	Charging	56
7.5A	DRL	Headlight (w/ Daytime Running Light)	84
		Multiplex Communication System	72
7.5A	OBD	Engine Control	58
10A	A.C	Air Conditioning (Manual A/C)	220
10A	HEAD (HI LH)	Headlight (w/ Daytime Running Light)	84
10A	HEAD (HI RH)	Headlight (w/ Daytime Running Light)	84
10A	HEAD (LH)	Headlight (w/o Daytime Running Light)	82
10A	HEAD (LO LH)	Headlight (w/ Daytime Running Light)	84
		Front Fog Light	88
10A	HEAD (LO RH)	Headlight (w/ Daytime Running Light)	84
10A	HEAD (RH)	Headlight (w/o Daytime Running Light)	82
10A	MIR HTR	Multiplex Communication System	72
		Rear Window Defogger and Mirror Heater	200
10A	RR HTR	Rear Heater	210
10A	TAIL	Cigarette Lighter and Clock	186
		Combination Meter	204
		Illumination	98
		Taillight	96
		Trailer Towing	108
15A	DEFOG	Multiplex Communication System	72
		Rear Window Defogger and Mirror Heater	200
15A	DOME	Auto Antenna	196
		Cigarette Lighter and Clock	186
		Combination Meter	204
		Garage Door Opener	110
		Headlight (w/ Daytime Running Light)	84
		Interior Light	92
		Radio and Player	198
15A	FOG	Front Fog Light	88
15A	MPX-B	Door Lock Control	118
		Multiplex Communication System	72
		Power Window (Rear), Rear Wiper and Washer	172
		Rear Window Defogger and Mirror Heater	200
		Theft Deterrent	130
		Wireless Door Lock Control	124
15A	PWR OUTLET	Power Outlet	188
20A	EFI	Cruise Control	142
		Electronically Controlled Transmission and A/T Indicator	136
		Engine Control	58
		Engine Immobiliser System	68

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
20A	SEAT HTR	Seat Heater	194
25A	TOWING	Trailer Towing	108
30A	AM2	Engine Control Starting and Ignition	58 52
40A	AM1	Power Outlet Starting and Ignition	188 52
50A	HEATER	Air Conditioning (Manual A/C) Automatic Air Conditioning	220 212
60A	ABS1	VSC	146
120A	ALT	Charging Illumination Light Auto Turn Off Multiplex Communication System Power Outlet Rear Window Defogger and Mirror Heater Starting and Ignition Taillight Theft Deterrent Wireless Door Lock Control	56 98 106 72 188 200 52 96 130 124

### Driver Side J/B (See Page 24)

Fuse		System	Page
7.5A	ECU-B	Air Conditioning (Manual A/C) Automatic Air Conditioning	220 212
7.5A	STA	Electronically Controlled Transmission and A/T Indicator Engine Control Starting and Ignition	136 58 52
10A	ECU-IG	Auto Antenna Door Lock Control Moon Roof Multiplex Communication System Power Window Power Window (Rear), Rear Wiper and Washer Rear Window Defogger and Mirror Heater Shift Lock SRS Theft Deterrent VSC Wireless Door Lock Control	196 118 164 72 112 172 200 180 153 130 146 124
10A	GAUGE	Air Conditioning (Manual A/C) Automatic Air Conditioning Back-Up Light Charging Combination Meter	220 212 104 56 204

\* These are the page numbers of the first page on which the related system is shown.

## J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
10A	GAUGE	Cruise Control	142
		Electronically Controlled Transmission and A/T Indicator	136
		Engine Control	58
		Front Wiper and Washer	168
		Headlight (w/ Daytime Running Light)	84
		Key Reminder and Seat Belt Warning	182
		Light Auto Turn Off	106
		Multiplex Communication System	72
		Rear Heater	210
		Rear Window Defogger and Mirror Heater	200
		SRS	153
		4WD	158
10A	IGN	Charging	56
		Combination Meter	204
		Cruise Control	142
		Electronically Controlled Transmission and A/T Indicator	136
		Engine Control	58
		Engine Immobiliser System	68
		SRS	153
10A	STOP	VSC	146
		Cruise Control	142
		Electronically Controlled Transmission and A/T Indicator	136
		Engine Control	58
		Shift Lock	180
		Stop Light	102
		Trailer Towing	108
10A	TURN	VSC	146
		Trailer Towing	108
15A	ACC	Turn Signal and Hazard Warning Light	90
		Auto Antenna	196
		Cigarette Lighter and Clock	186
		Multiplex Communication System	72
		Power Outlet	188
		Power Window (Rear), Rear Wiper and Washer	172
		Radio and Player	198
		Rear Window Defogger and Mirror Heater	200
		Remote Control Mirror	162
		Shift Lock	180
		Theft Deterrent	130
15A	HORN, HAZ	Wireless Door Lock Control	124
		Horn	184
		Multiplex Communication System	72
15A	HORN, HAZ	Theft Deterrent	130

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	HORN, HAZ	Trailer Towing	108
		Turn Signal and Hazard Warning Light	90
20A	4WD	4WD	158
25A	WIPER	Front Wiper and Washer	168
		Multiplex Communication System	72
		Power Window (Rear), Rear Wiper and Washer	172
30A	POWER	Door Lock Control	118
		Moon Roof	164
		Multiplex Communication System	72
		Power Seat	190
		Power Window	112
		Power Window (Rear), Rear Wiper and Washer	172
		Wireless Door Lock Control	124

### Fuse Box (See Page 22)

Fuse		System	Page
40A	ABS2	VSC	146

\* These are the page numbers of the first page on which the related system is shown.