



SERVICE HINTS

E14 ENGINE CONTROL MODULE

11-GROUND : Continuity with ignition key in cylinder
16-GROUND : Always Approx. 12 volts
15-GROUND : Approx. 12 volts with ignition SW on
10-GROUND : Always continuity

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C24		30	J4		31	J9		31
E14		31	J6		31	T6		31
J1	A	29	J7	A	31	U1		31
J2	B	29	J8	B	31			

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3E	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
EB	36	Front Left Fender
ID	38	Left Kick Panel
IE	38	Cowl Side Panel LH
IF	38	Cowl Side Panel RH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I13	40	Cowl Wire			