



ILLUMINATION

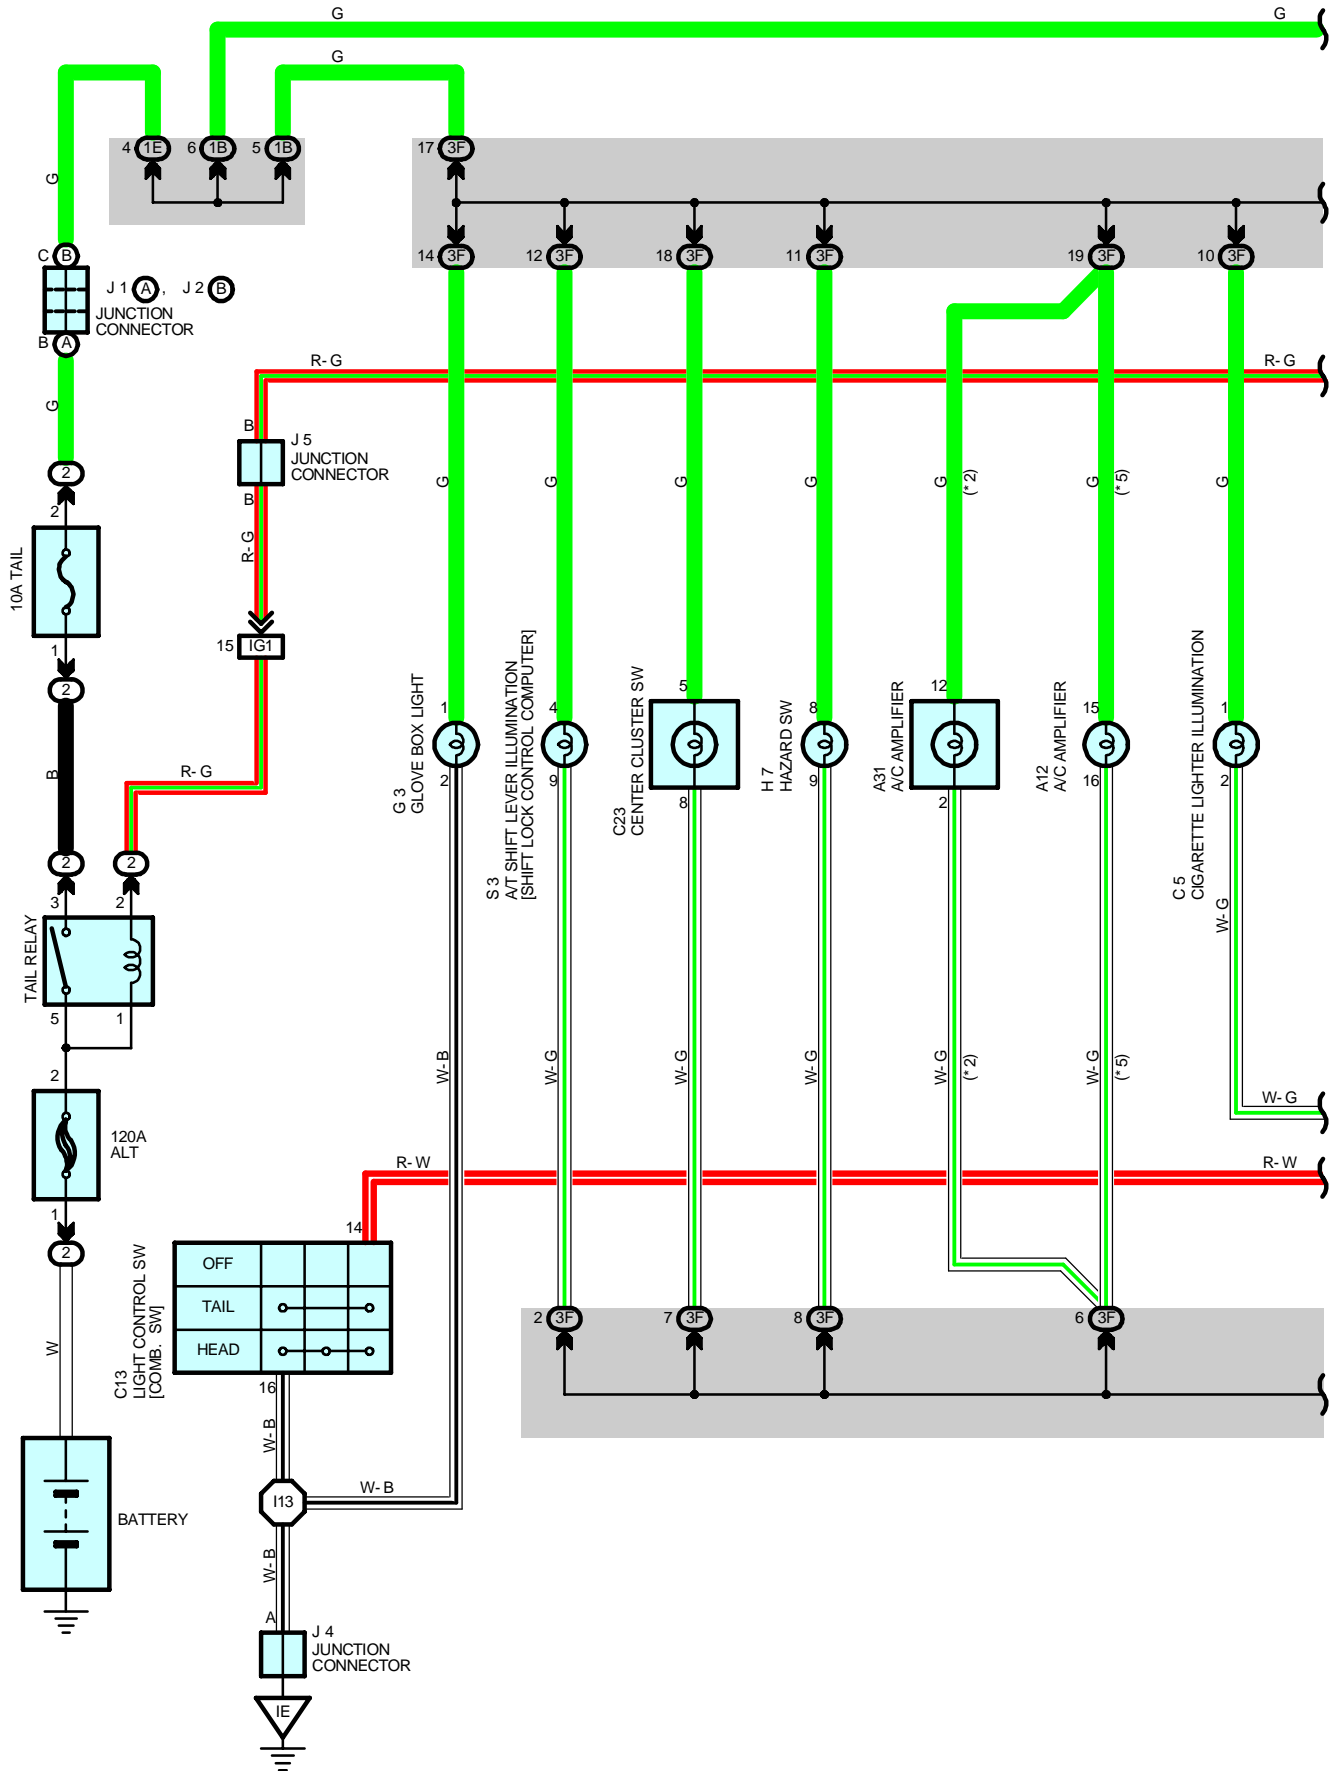

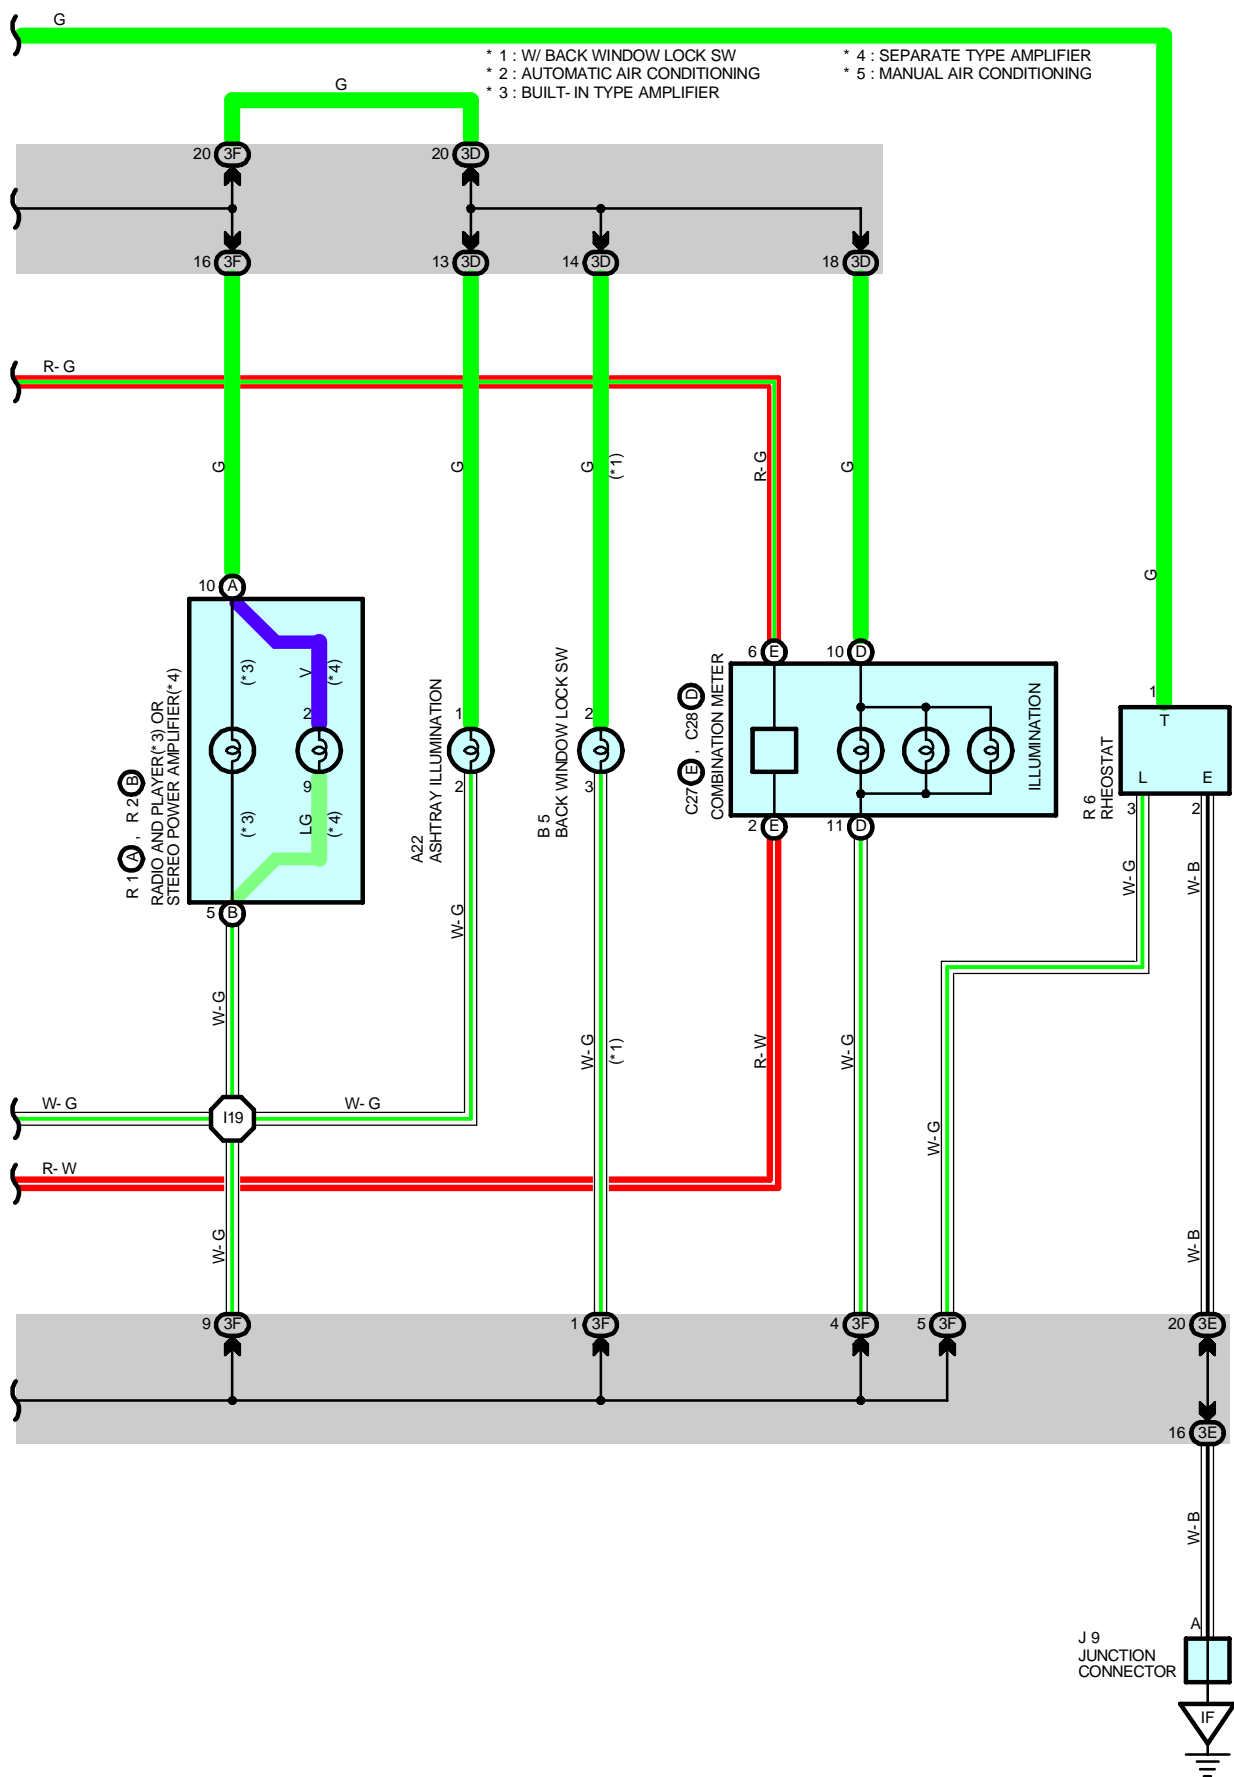

ILLUMINATION

SERVICE HINTS

C13 LIGHT CONTROL SW [COMB. SW]

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

R6 RHEOSTAT

1-2 : Approx. **12** volts with rheostat fully turned counterclockwise and **0** volts with fully turned clockwise

○ : PARTS LOCATION

Code	See Page	Code		See Page	Code		See Page
A12	30	C27	E	30	J5	31	
A22	30	C28	D	30	J9	31	
A31	30	G3		31	R1	A	31
B5	30	H7		31	R2	B	31
C5	30	J1	A	29	R6		31
C13	30	J2	B	29	S3		31
C23	30	J4		31			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
3D	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		
3F		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	38	Cowl Side Panel LH
IF	38	Cowl Side Panel RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I13	40	Cowl Wire	I19	40	Cowl Wire

