



## SERVICE HINTS

### S4 STOP LIGHT SW

2-1 : Closed with brake pedal depressed

### : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
H8	<a href="#">32</a>	R7	<a href="#">33</a>	S4	<a href="#">31</a>
J14	<a href="#">32</a>	R8	<a href="#">33</a>		

### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	<a href="#">24</a>	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3C	<a href="#">26</a>	Cowl Wire and Center J/B (Near the Steering Column Tube)

### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	<a href="#">38</a>	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IL1	<a href="#">40</a>	Cowl Wire and Floor Wire (Right Kick Panel)
BR1	<a href="#">42</a>	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)

### : GROUND POINTS

Code	See Page	Ground Points Location
BH	<a href="#">42</a>	Left Quarter Panel Inner

### : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I10	<a href="#">40</a>	Cowl Wire			