


# BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

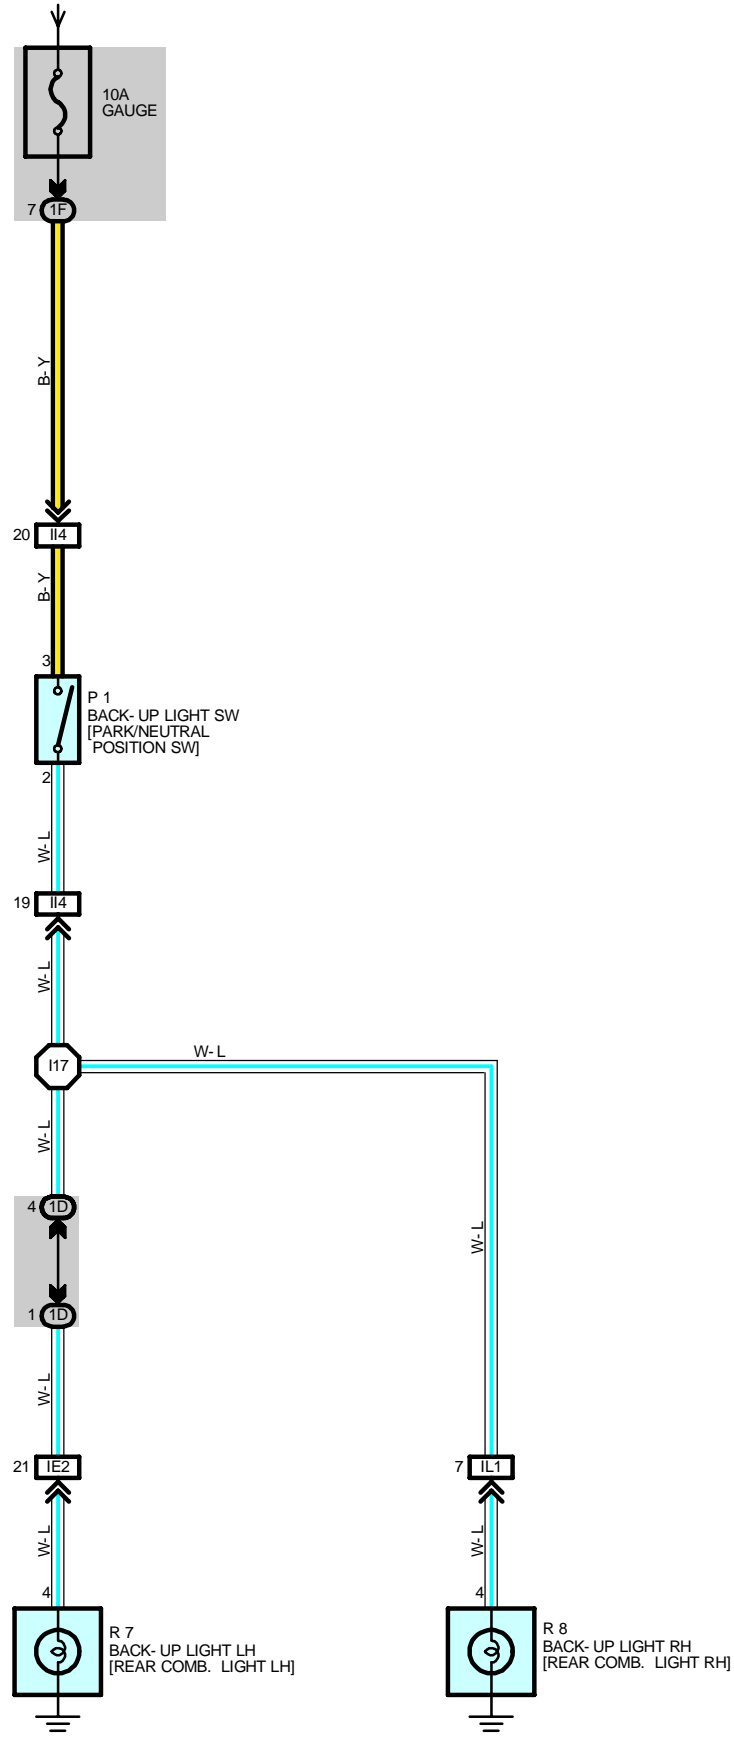

## SERVICE HINTS

### P1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]

3-2 : Closed with shift lever in **R** position

## : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| P1   | 29       | R7   | 33       | R8   | 33       |

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|--|
| 1D   | 24       | Cowl Wire and Driver Side J/B (Lower Finish Panel)   |
| 1F   |          |  |

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|--|
| IE2  | 38       | Cowl Wire and Floor No.2 Wire (Left Kick Panel)            |
| II4  | 40       | Engine Wire and Cowl Wire (On the Glove Box)               |
| IL1  | 40       | Cowl Wire and Floor Wire (Right Kick Panel)                |

## : SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I17  | 40       | Cowl Wire                       |      |          |                                 |