



SERVICE HINTS

T9 TRAILER CONVERTER

8-GROUND : Always approx. 12 volts

5-GROUND : Always continuity

: PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
C13		30		J2	B	29		S4	31		
H7		31		J9		31		T9	33		
J1	A	29		J14		32		T10	33		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1C		
1D		
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1H		
1J		
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	38	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IE2		
IE3		
IG3	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	38	Cowl Side Panel RH
BH	42	Left Quarter Panel Inner