


# GARAGE DOOR OPENER

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

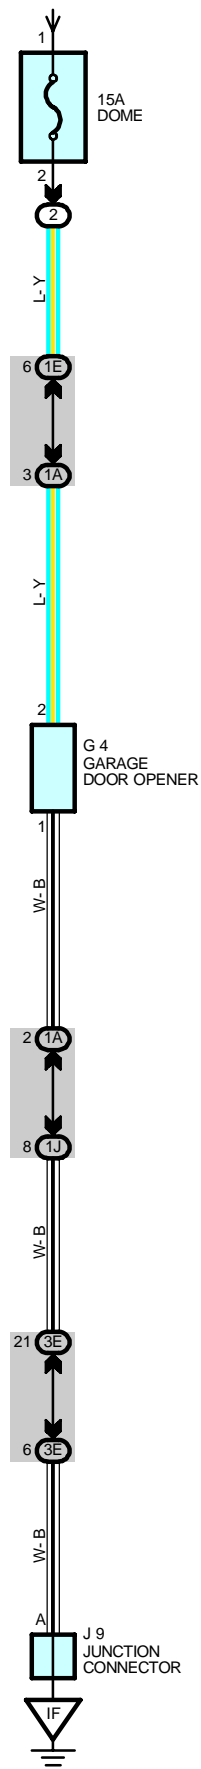

## SERVICE HINTS

### G4 GARAGE DOOR OPENER

2-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

### : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
G4	32	J9	31		

### : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Roof Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1J	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3E	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

### : GROUND POINTS

Code	See Page	Ground Points Location
IF	38	Cowl Side Panel RH