




THEFT DETERRENT

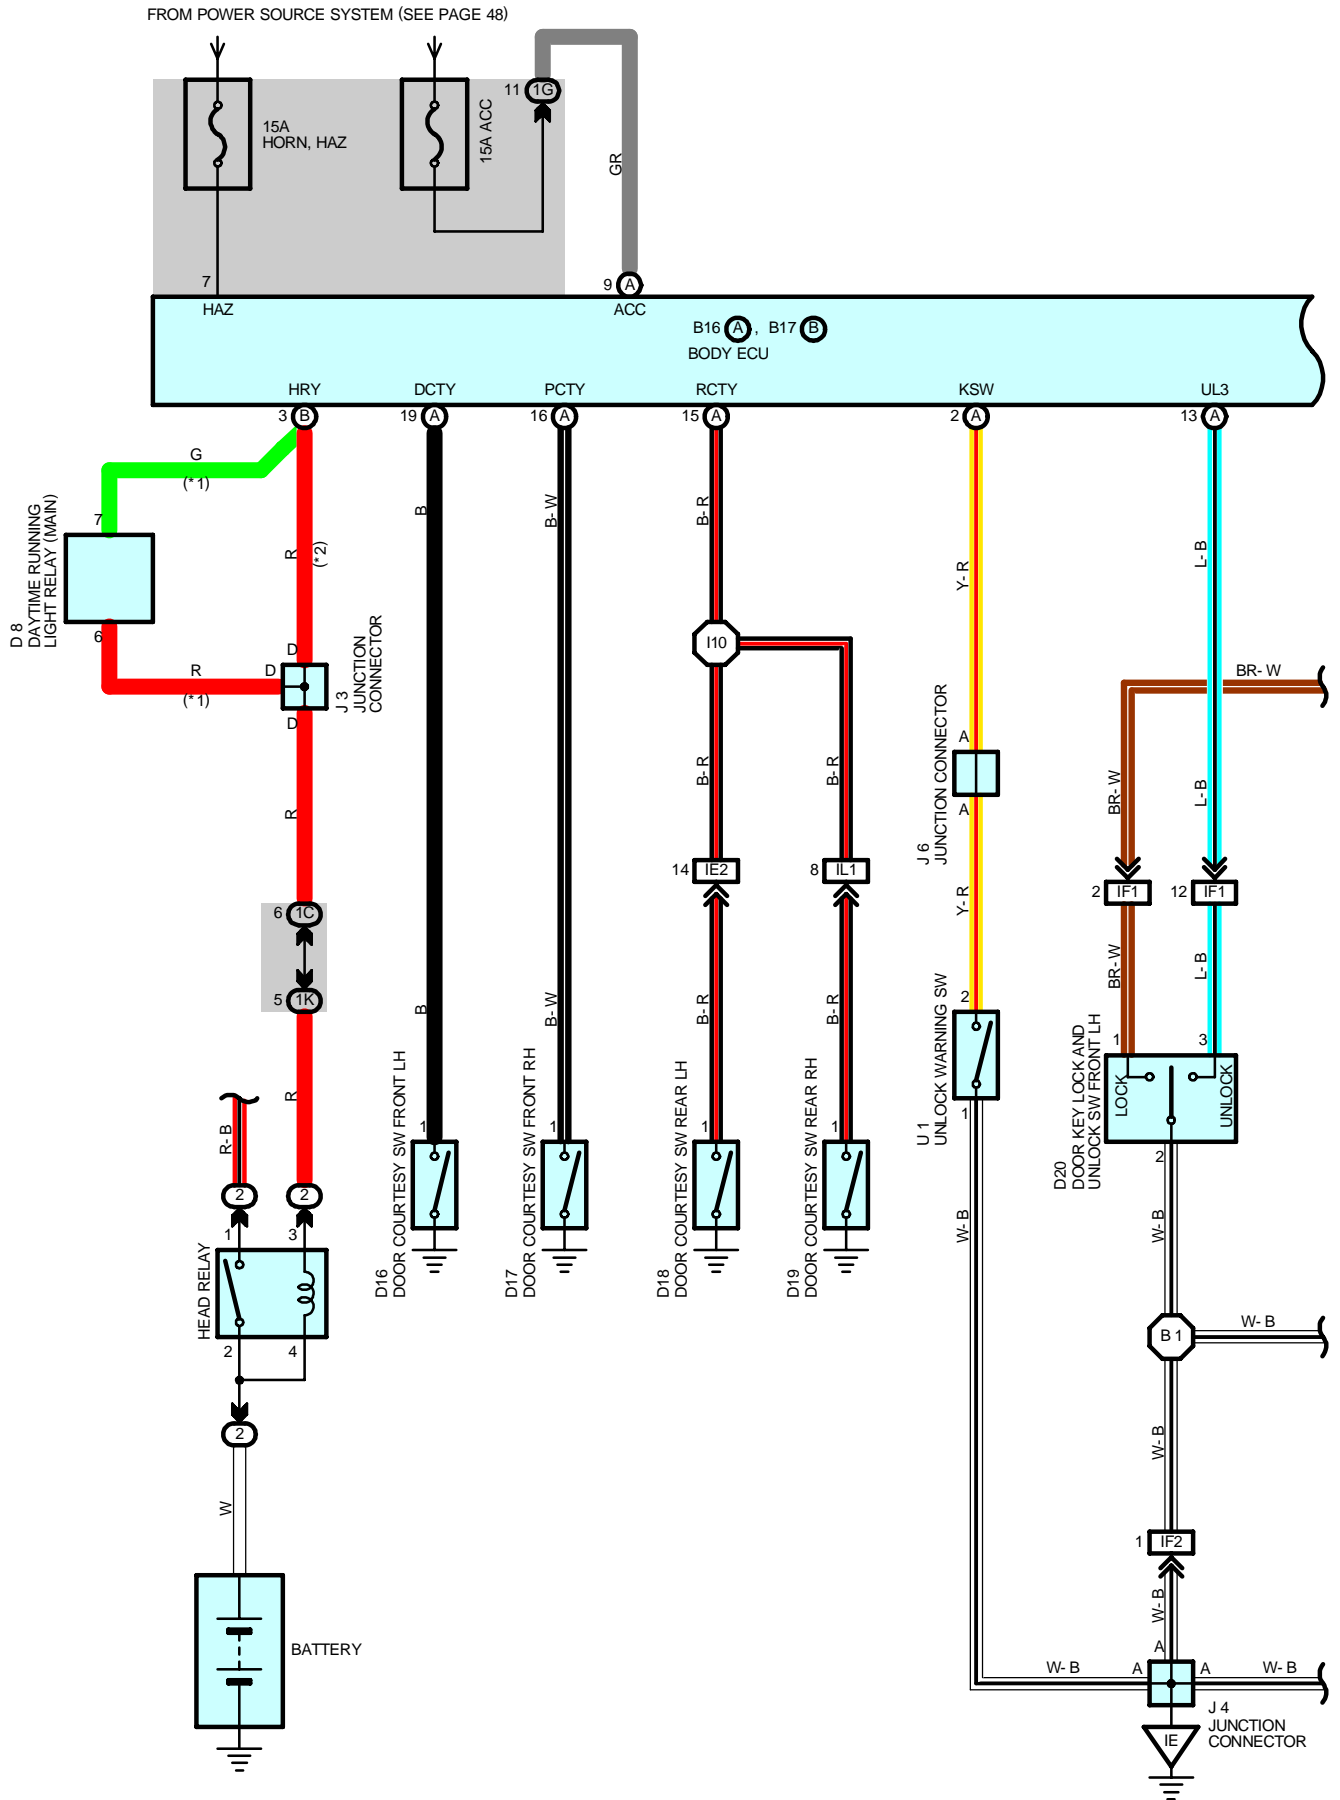

- * 1 : W/ DAYTIME RUNNING LIGHT
- * 2 : W/O DAYTIME RUNNING LIGHT

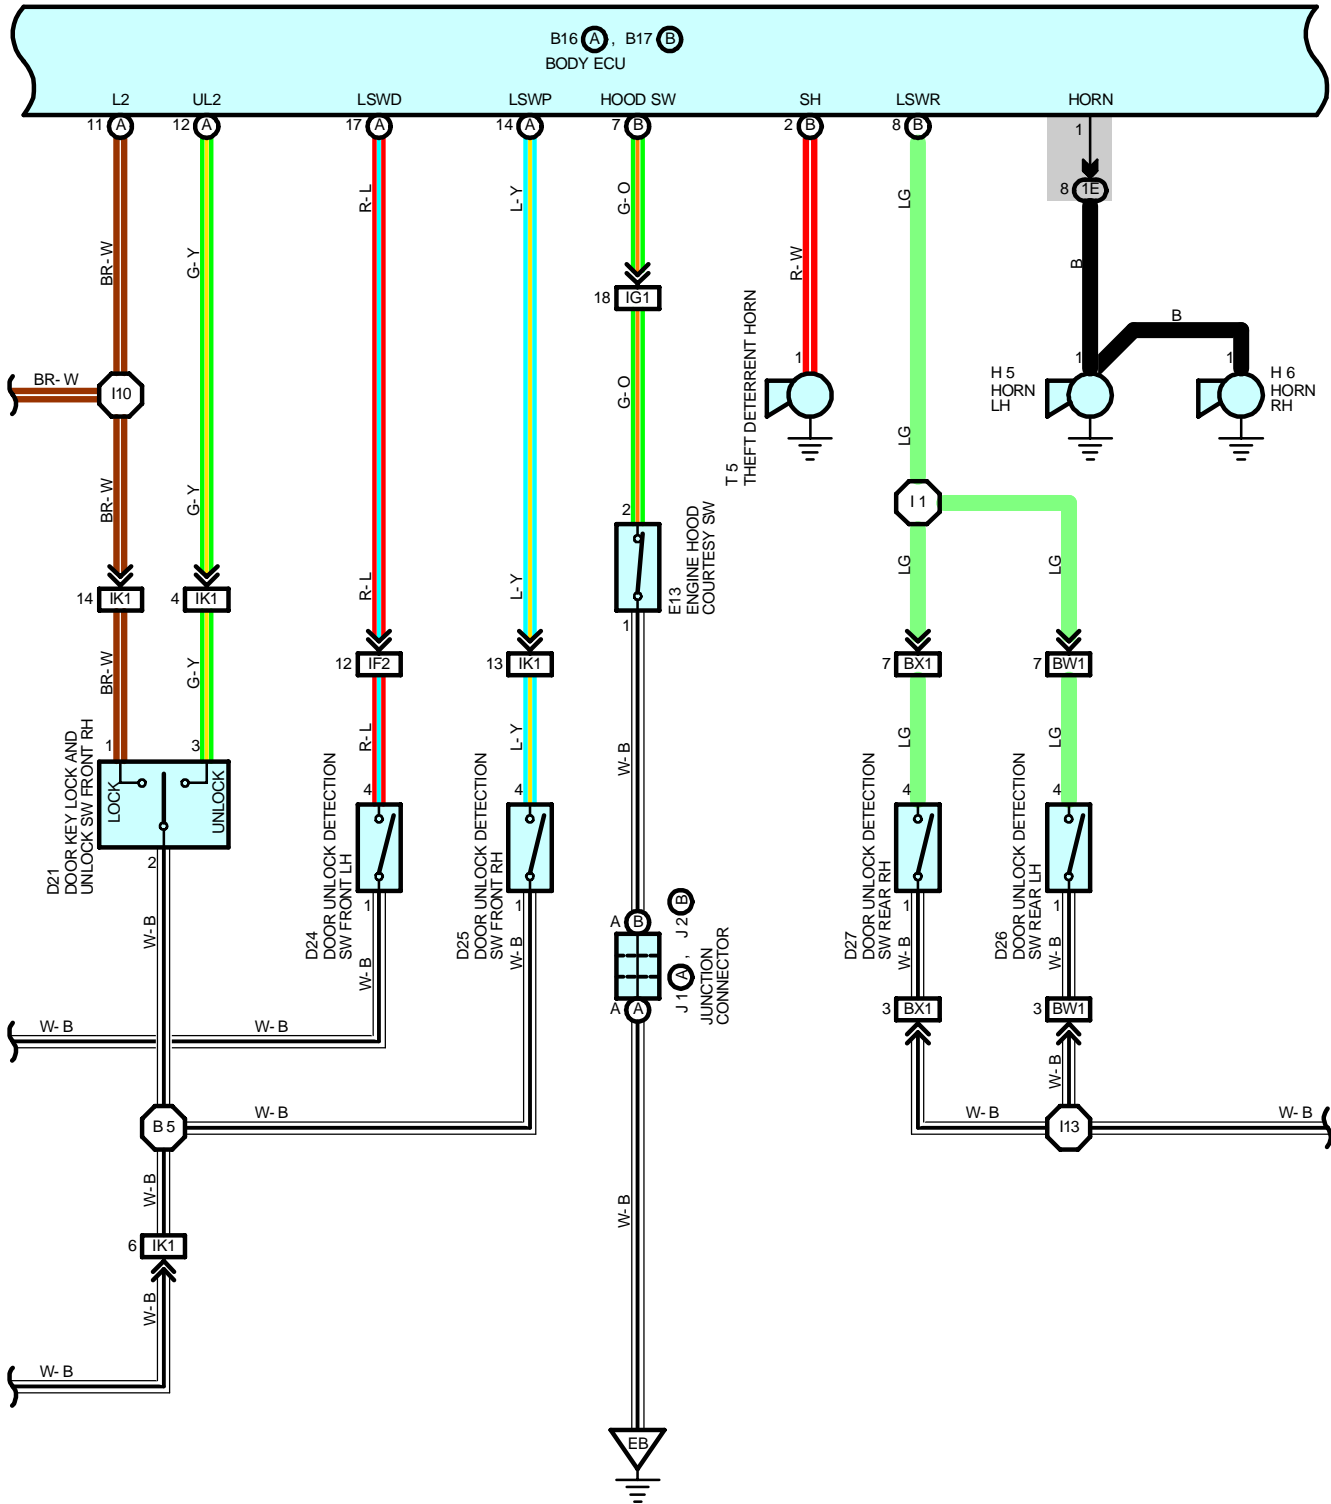

THEFT DETERRENT

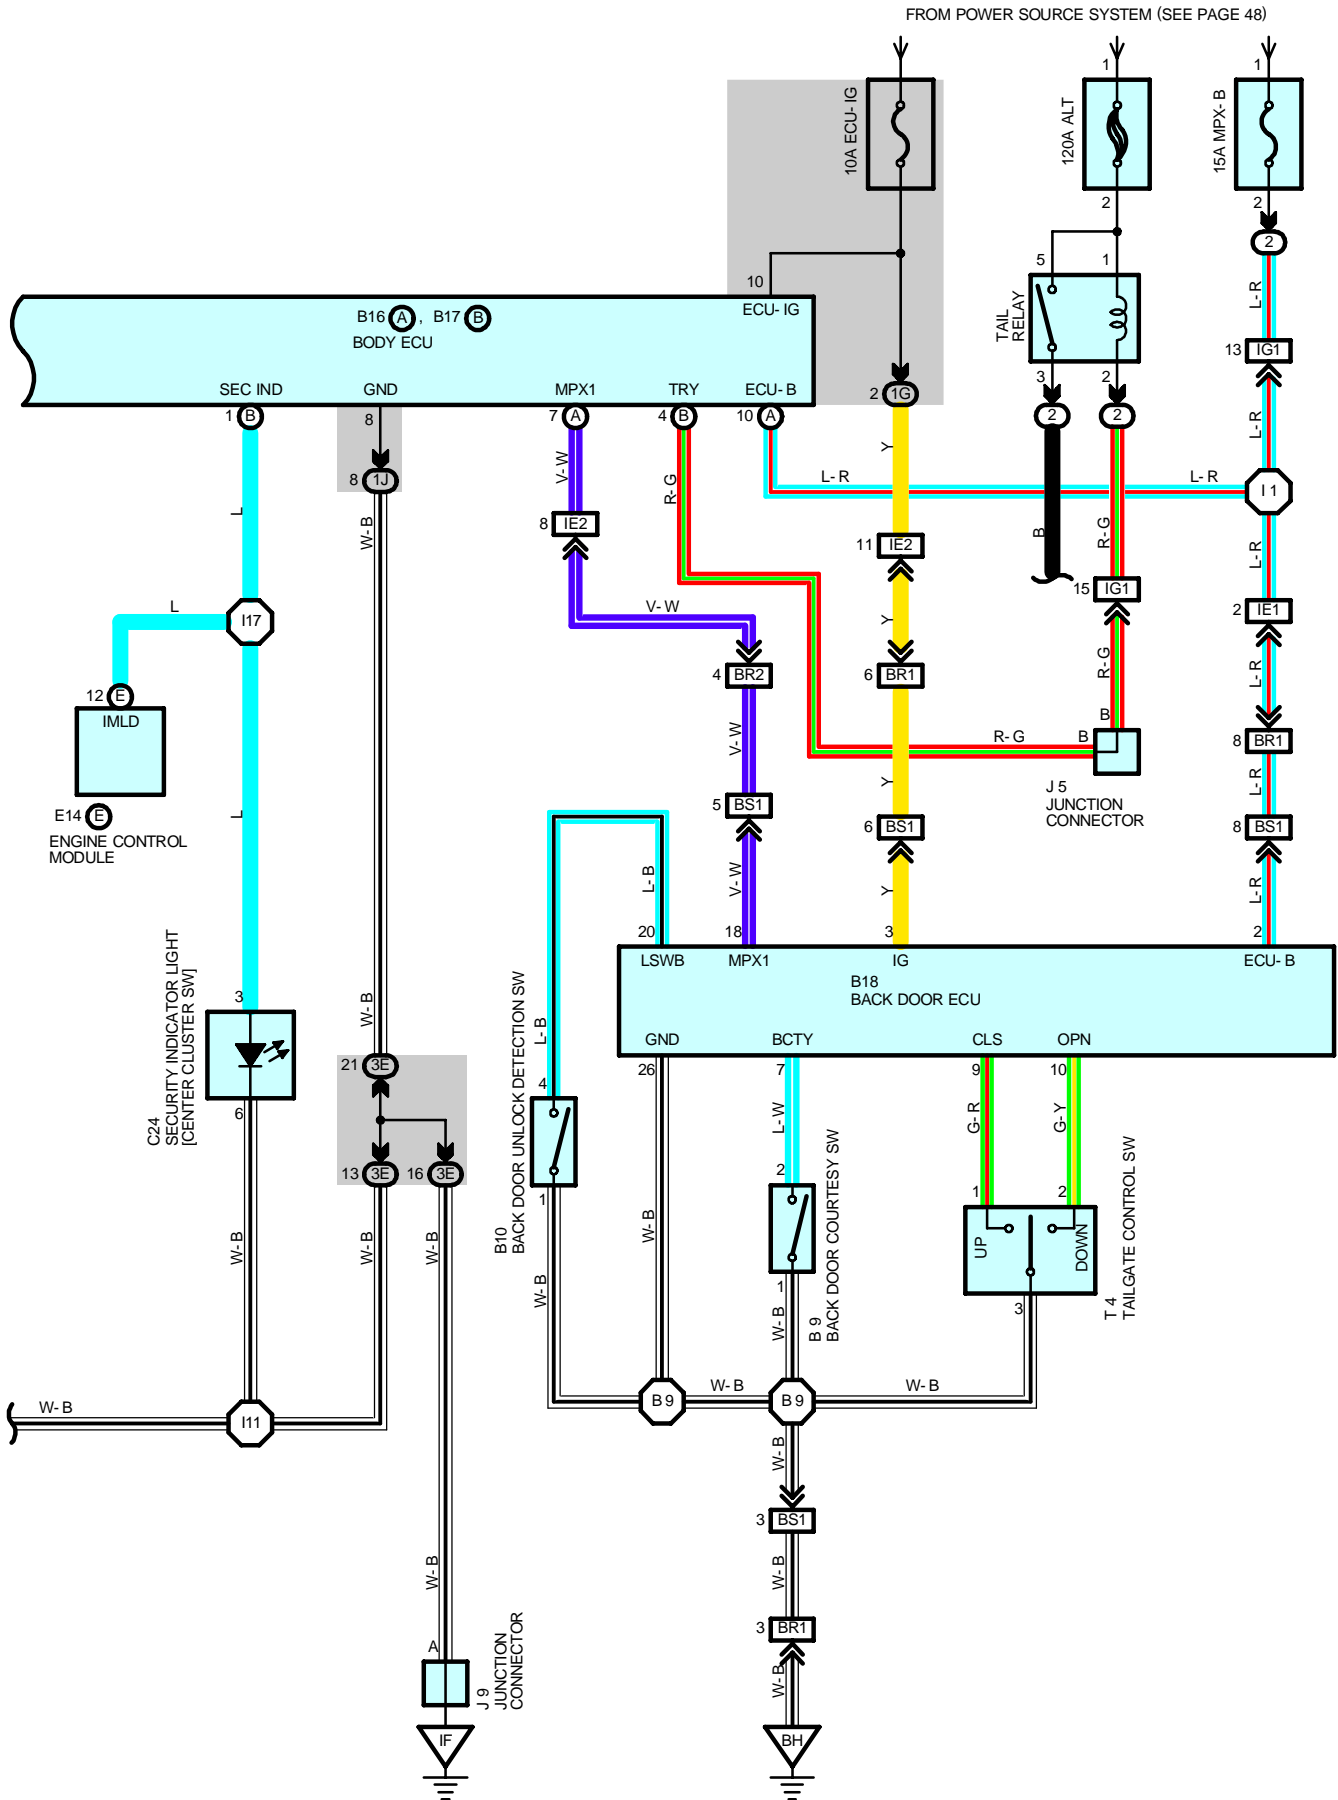

SERVICE HINTS

D20, D21 DOOR KEY LOCK AND UNLOCK SW FRONT LH, RH

2-3 : Closed with door lock cylinder unlocked with key

1-2 : Closed with door lock cylinder locked with key

T4 TAILGATE CONTROL SW

2-3 : Closed with door lock cylinder unlocked with key

1-3 : Closed with door lock cylinder locked with key

E13 ENGINE HOOD COURTESY SW

2-1 : Open with engine hood open

U1 UNLOCK WARNING SW

2-1 : Closed with ignition key in cylinder

B16 (A), B17 (B) BODY ECU

(A) 2-GROUND : Continuity with ignition key in cylinder

(A)16-GROUND : Continuity with front RH door open

(A)19-GROUND : Continuity with front LH door open

(A)11-GROUND : Continuity with door key lock and unlock SW at **LOCK** position

8-GROUND : Always continuity

(B) 7-GROUND : Continuity with engine hood closed

(A)13-GROUND :

Continuity with door key lock and unlock SW front LH at **UNLOCK** position

(A)12-GROUND :

Continuity with door key lock and unlock SW front RH at **UNLOCK** position

(A) 9-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

10-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

7, (A) 10-GROUND : Always approx. **12** volts

B18 BACK DOOR ECU

2-GROUND : Always approx. **12** volts

3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

26-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B9	32	D20	32	J2 B	29
B10	32	D21	32	J3	31
B16 A	30	D24	32	J4	31
B17 B	30	D25	32	J5	31
B18	32	D26	32	J6	31
C24	30	D27	32	J9	31
D8	30	E13	28	T4	33
D16	32	E14	31	T5	29
D17	32	H5	28	U1	31
D18	32	H6	28		
D19	32	J1 A	29		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

THEFT DETERRENT



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
3E	26	Cowl Wire and Center J/B (Near the Steering Column Tube)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	38	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IE2		
IF1	38	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF2		
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IK1	40	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	40	Cowl Wire and Floor Wire (Right Kick Panel)
BR1	42	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BR2		
BS1	42	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)
BW1	42	Rear Door LH Wire and Cowl Wire (Left Center Pillar)
BX1	42	Rear Door RH Wire and Cowl Wire (Right Center Pillar)



: GROUND POINTS

Code	See Page	Ground Points Location
EB	36	Front Left Fender
IE	38	Cowl Side Panel LH
IF	38	Cowl Side Panel RH
BH	42	Left Quarter Panel Inner



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	40	Cowl Wire	I17	40	Cowl Wire
I10			B1	42	Front Door LH Wire
I11			B5	42	Front Door RH Wire
I13			B9	42	Back Door No.2 Wire

