


↓

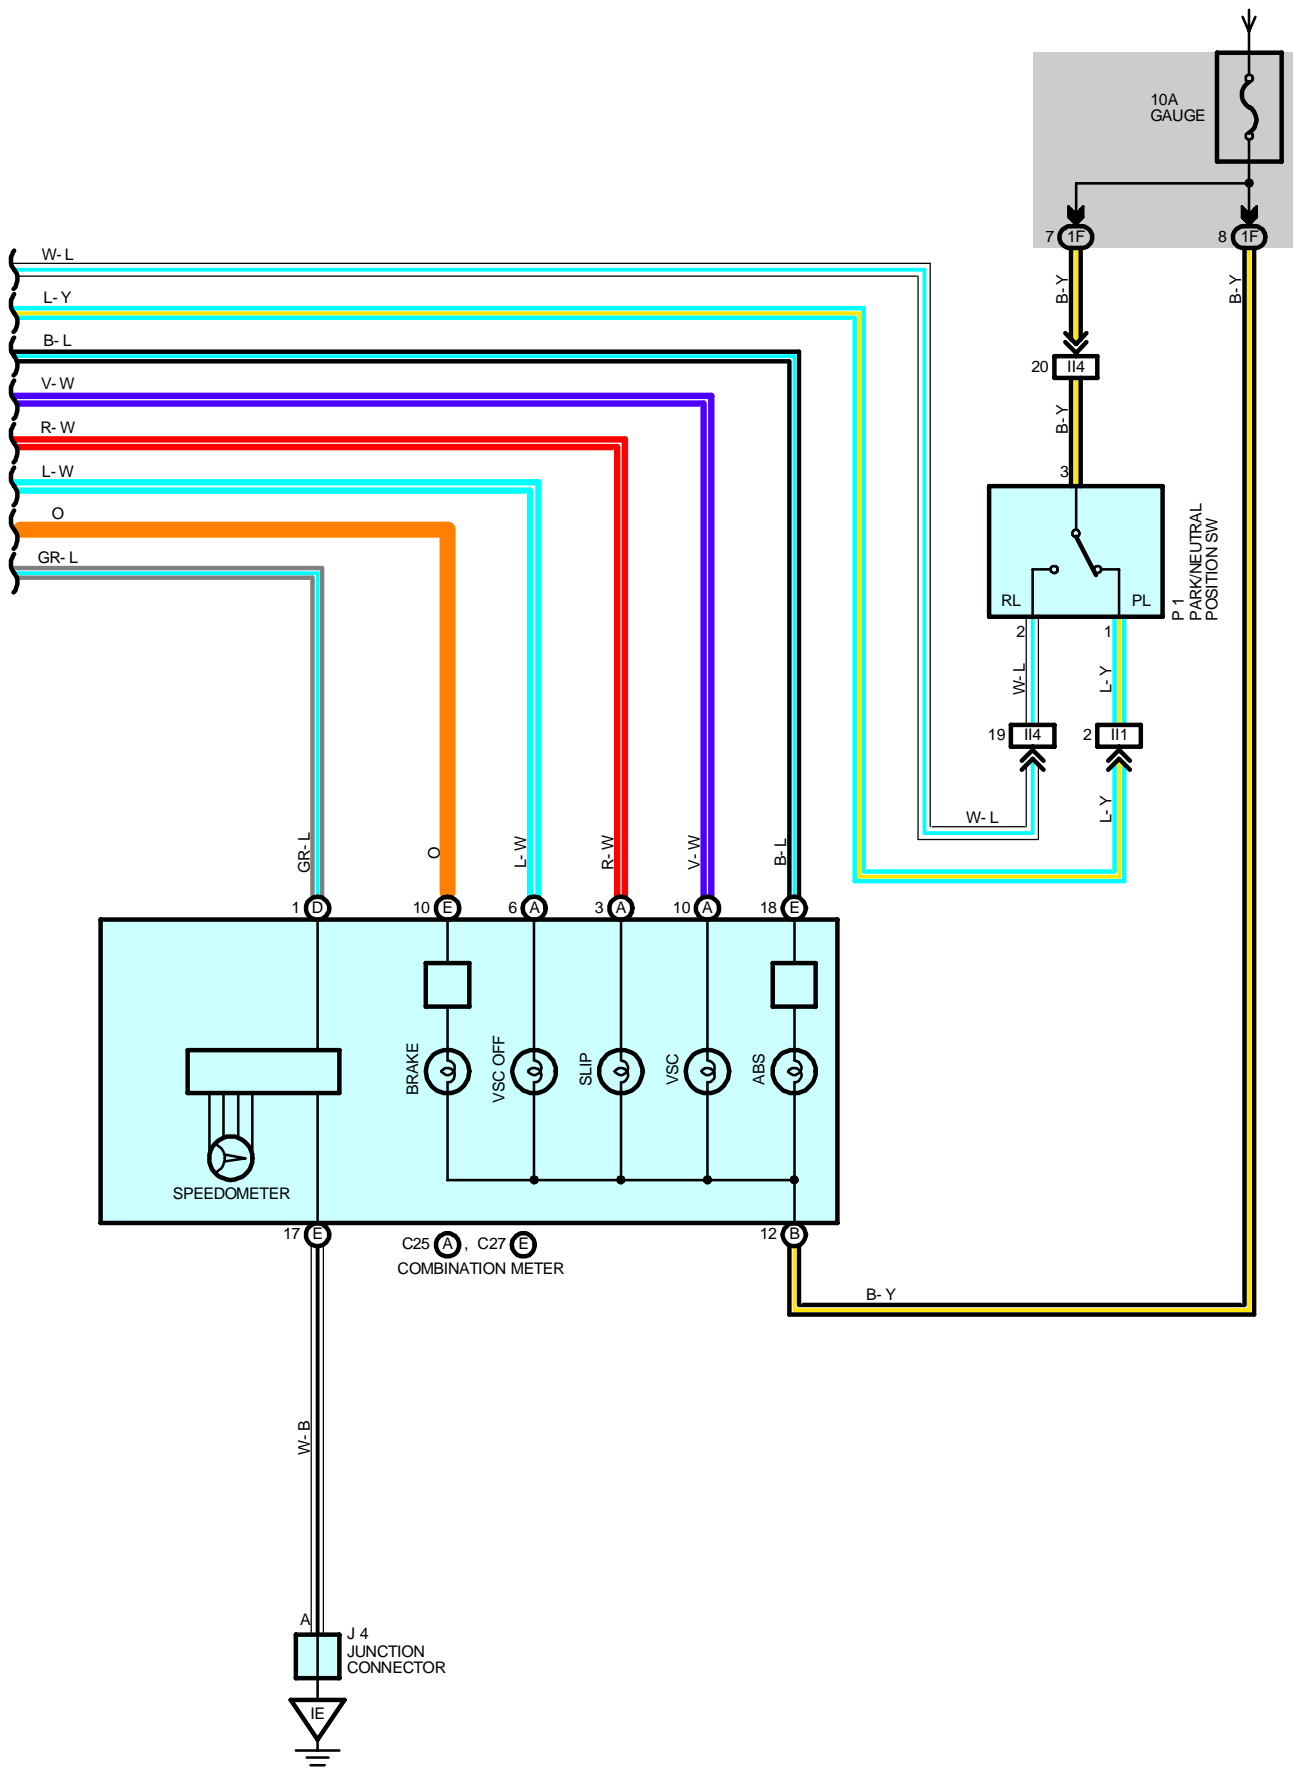

SERVICE HINTS

V16 (A), V17 (B), V19 (D) VSC ECU

(B) 18, (D) 7-GROUND : Approx. 12 volts with the ignition SW at **ON** or **ST** position

(A) 6, (A) 31, (D) 8, (D) 16-GROUND : Always continuity

○ : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| A8 | 28 | F7 | 31 | S5 | A 29 |
| A9 | 28 | F13 | 28 | S6 | B 29 |
| A24 | 32 | J1 | A 29 | S9 | 31 |
| A25 | 32 | J2 | B 29 | T8 | 31 |
| A39 | 28 | J3 | 31 | V10 | A 29 |
| C25 | A 30 | J4 | 31 | V11 | B 29 |
| C27 | E 30 | J6 | 31 | V12 | C 29 |
| D1 | 28 | J7 | A 31 | V14 | 31 |
| D4 | 28 | J8 | B 31 | V15 | 31 |
| D5 | 28 | J9 | 31 | V16 | A 31 |
| D7 | 30 | M4 | 29 | V17 | B 31 |
| D8 | 30 | P1 | 29 | V18 | C 31 |
| D31 | 28 | P2 | 31 | V19 | D 31 |
| E14 | 31 | S4 | 31 | Y1 | 31 |

○ : RELAY BLOCKS

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|-------------------------------------------|
| 2 | 22 | Engine Room R/B (Engine Compartment Left) |
| 5 | 23 | VSC R/B (Engine Compartment Right) |

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|----------------------------------------------------------------|
| 1F | 24 | Cowl Wire and Driver Side J/B (Lower Finish Panel) |
| 1G | | |
| 1H | | |
| 1K | 24 | Engine Room Main Wire and Driver Side J/B (Lower Finish Panel) |
| 3C | 26 | Cowl Wire and Center J/B (Near the Steering Column Tube) |
| 3E | | |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|---------------------------------------------------------------------------|
| ED2 | 36 | Engine Wire and Differential Wire (Near the Front Differential) |
| IE2 | 38 | Cowl Wire and Floor No.2 Wire (Left Kick Panel) |
| II1 | 40 | Engine Wire and Cowl Wire (On the Glove Box) |
| II2 | | |
| II4 | | |
| BN2 | 42 | Frame Wire and Floor No.2 Wire (Under the Left Side of Rear Seat Cushion) |

▽ : GROUND POINTS

| Code | See Page | Ground Points Location |
|------|----------|------------------------|
| EA | 36 | Front Right Fender |
| EB | 36 | Front Left Fender |
| IE | 38 | Cowl Side Panel LH |
| IF | 38 | Cowl Side Panel RH |



: SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E3 | 36 | Engine Room Main Wire | I10 | 40 | Cowl Wire |
| I1 | 40 | Cowl Wire | I12 | | |
| I3 | 40 | Engine Room Main Wire | I20 | | Engine Wire |
| I4 | | | | | |