


# REMOTE CONTROL MIRROR

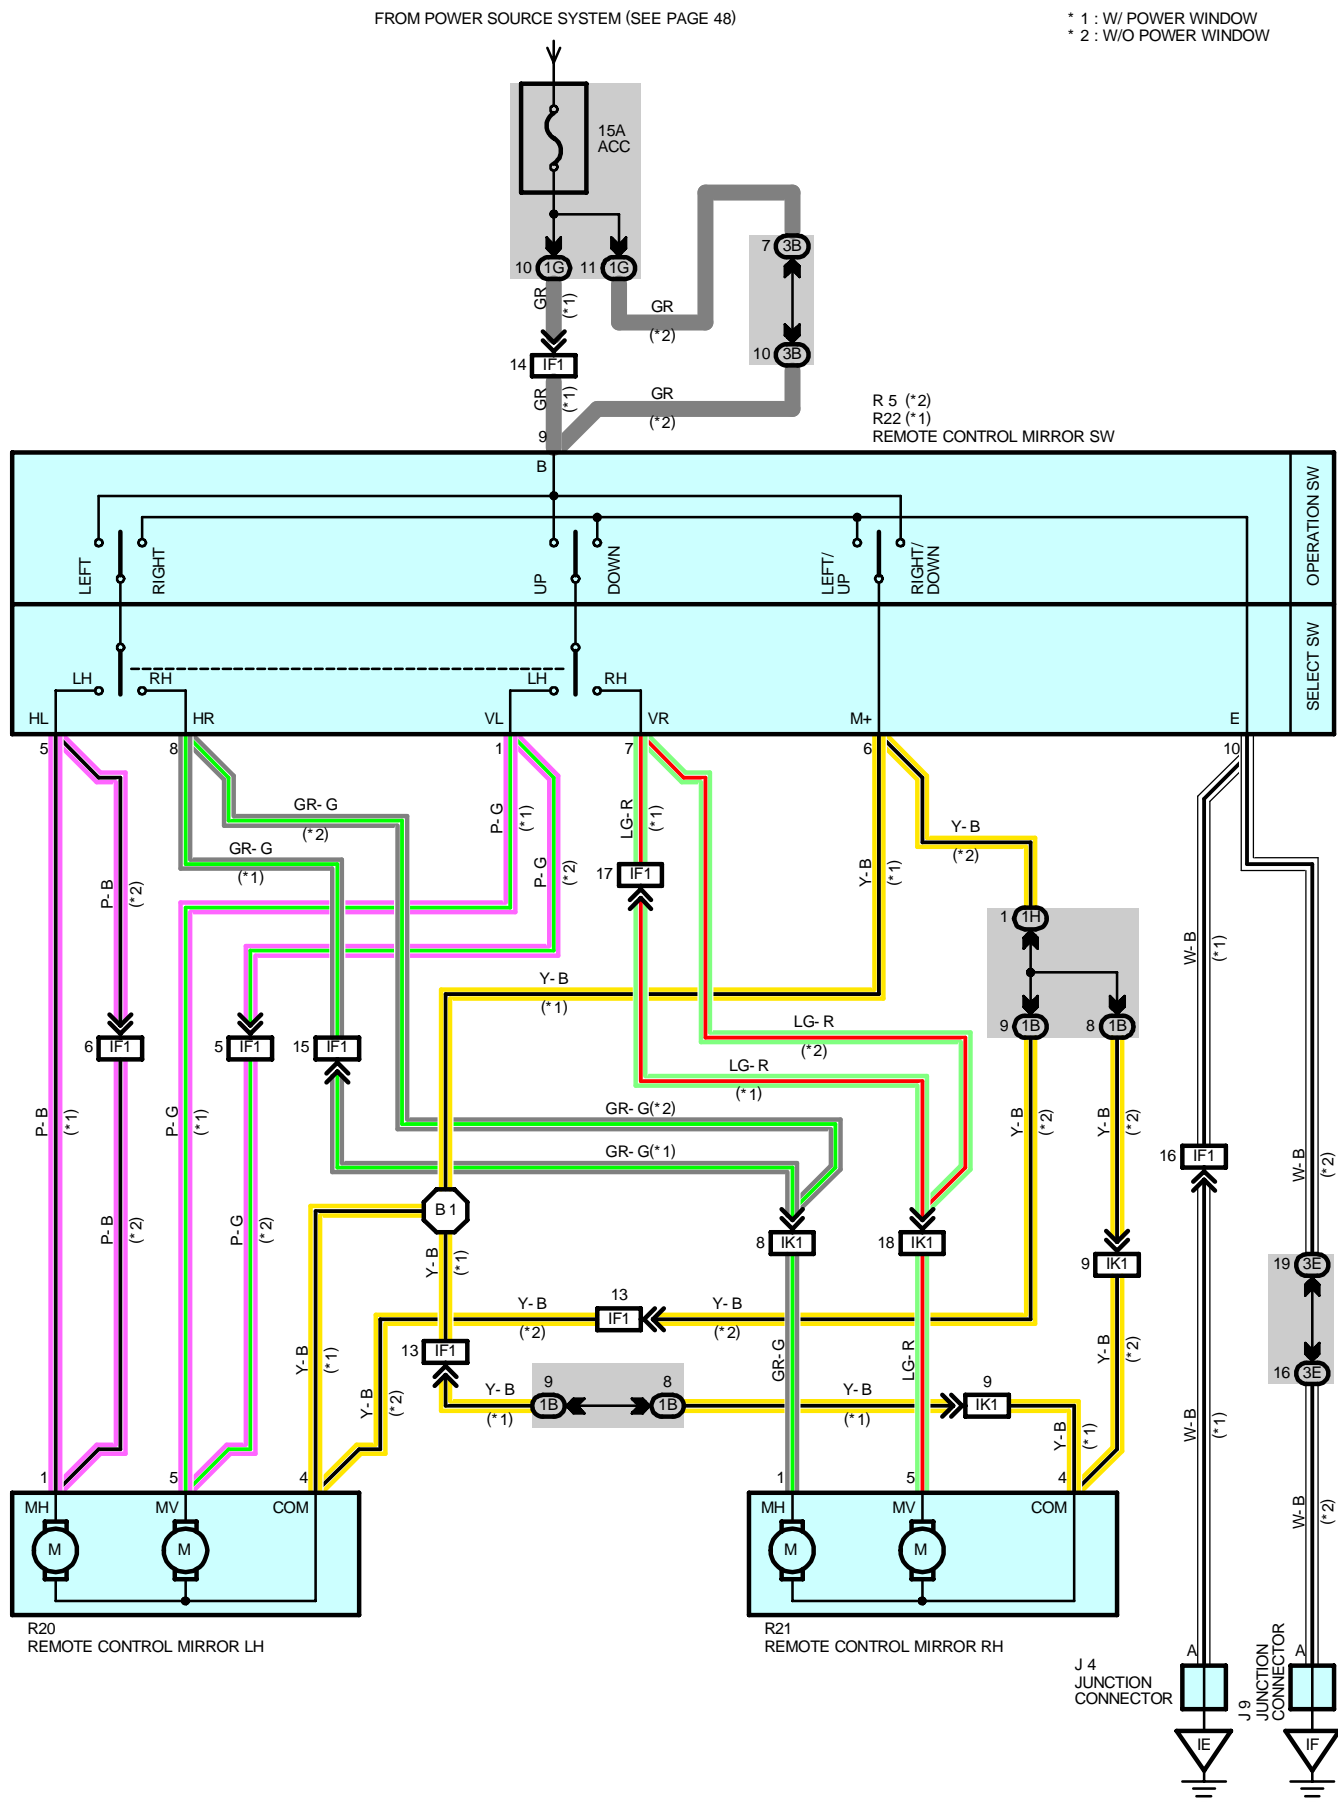

## SERVICE HINTS

### R5, R22 REMOTE CONTROL MIRROR SW

- 10-GROUND : Always continuity
  - 10-6 : Continuity with operation SW at **UP** or **LEFT** position
  - 9-6 : Continuity with operation SW at **DOWN** or **RIGHT** position
- 9-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J4	<a href="#">31</a>	R5	<a href="#">31</a>	R21	<a href="#">33</a>
J9	<a href="#">31</a>	R20	<a href="#">33</a>	R22	<a href="#">33</a>

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	<a href="#">24</a>	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G		
1H		
3B	<a href="#">26</a>	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	<a href="#">38</a>	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IK1	<a href="#">40</a>	Front Door RH Wire and Cowl Wire (Right Kick Panel)

## : GROUND POINTS

Code	See Page	Ground Points Location
IE	<a href="#">38</a>	Cowl Side Panel LH
IF	<a href="#">38</a>	Cowl Side Panel RH

## : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	<a href="#">42</a>	Front Door LH Wire			