


# CIGARETTE LIGHTER AND CLOCK

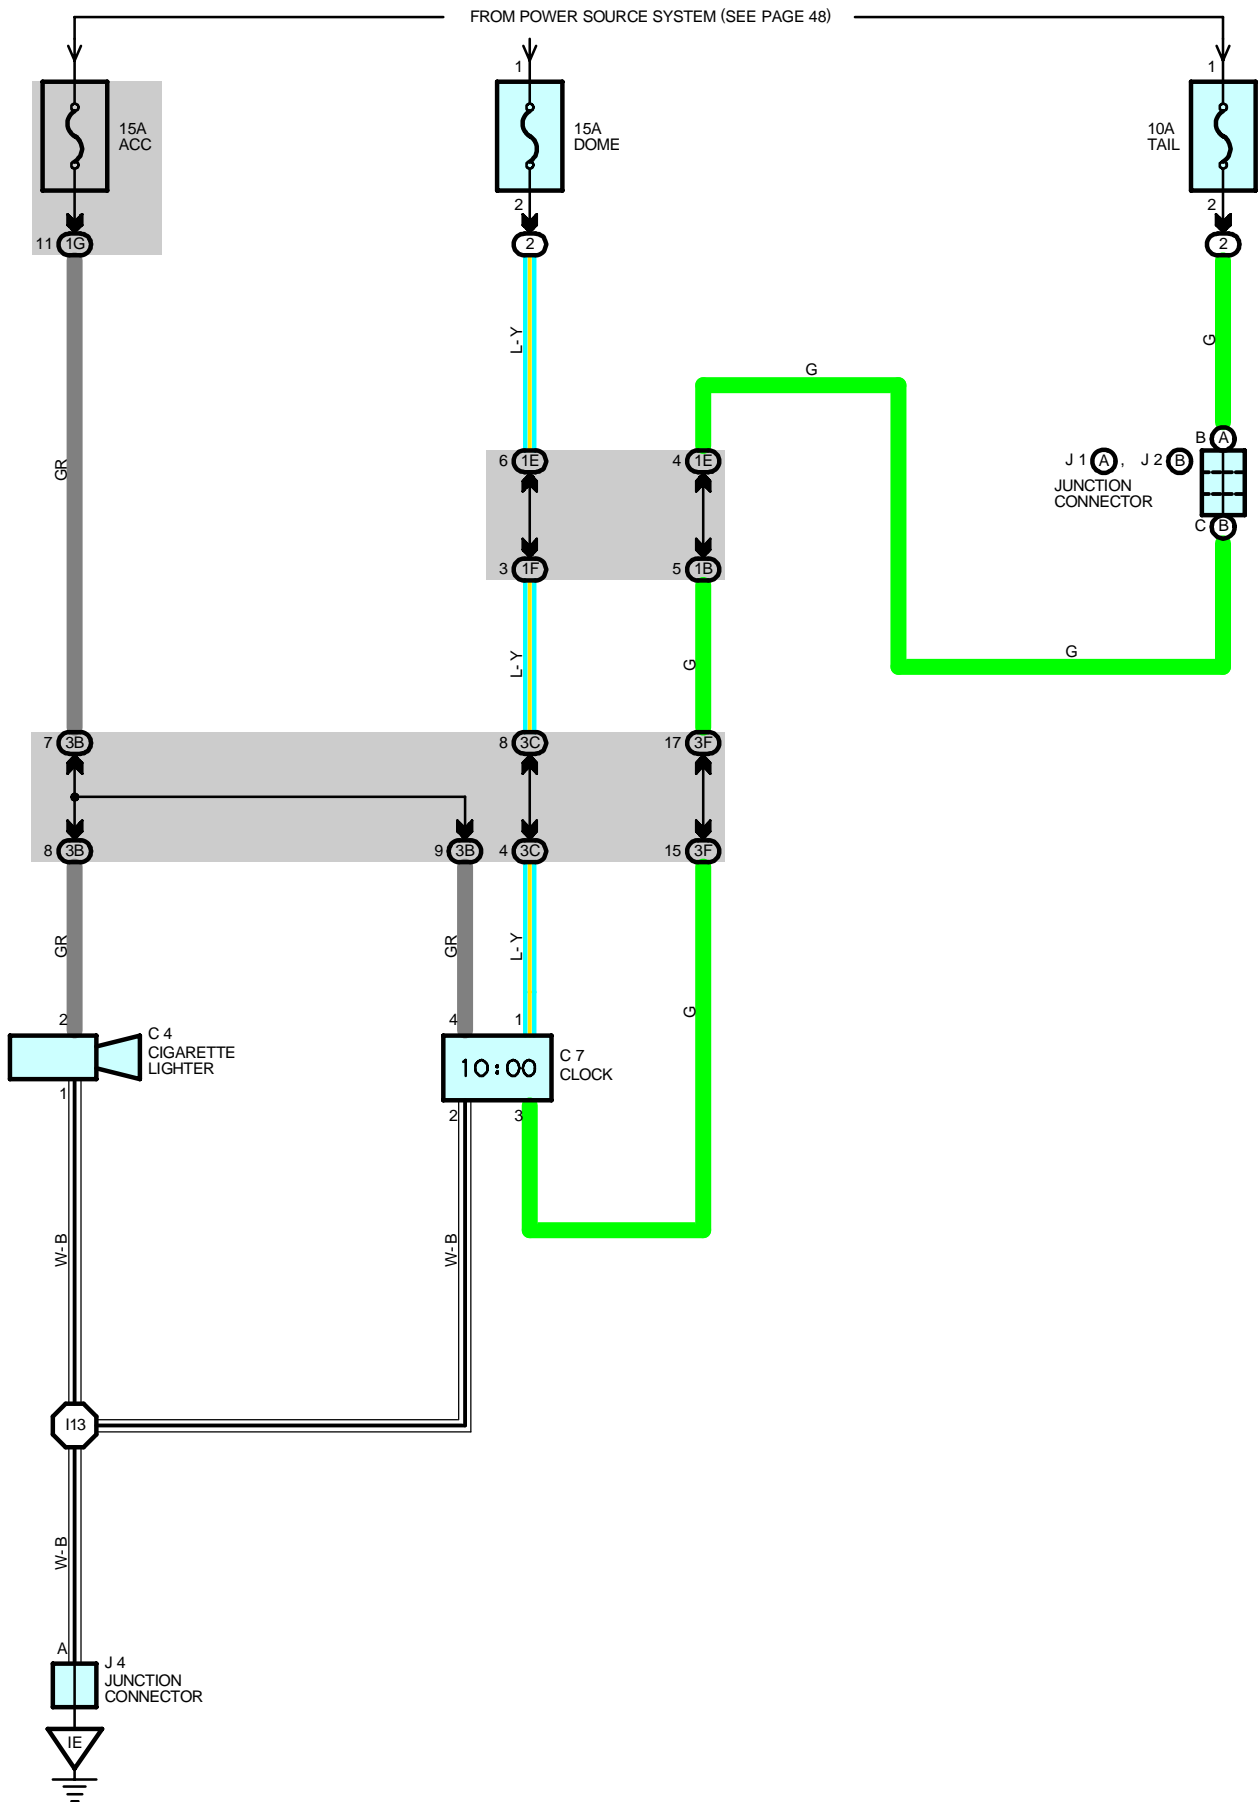

## SERVICE HINTS

### C4 CIGARETTE LIGHTER

2-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position

1-GROUND : Always continuity

### C7 CLOCK

1-GROUND : Always approx. **12** volts (Power for clock)

4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position (Power for indication)

3-GROUND : Approx. **12** volts with light control SW at **TAIL** or **HEAD** position (Signal of indication)

2-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
C4	30	J1	A	29	J4	31
C7	30	J2	B	29		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G		
3B	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3C		
3F		

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	38	Cowl Side Panel LH

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I13	40	Cowl Wire			