


# POWER OUTLET

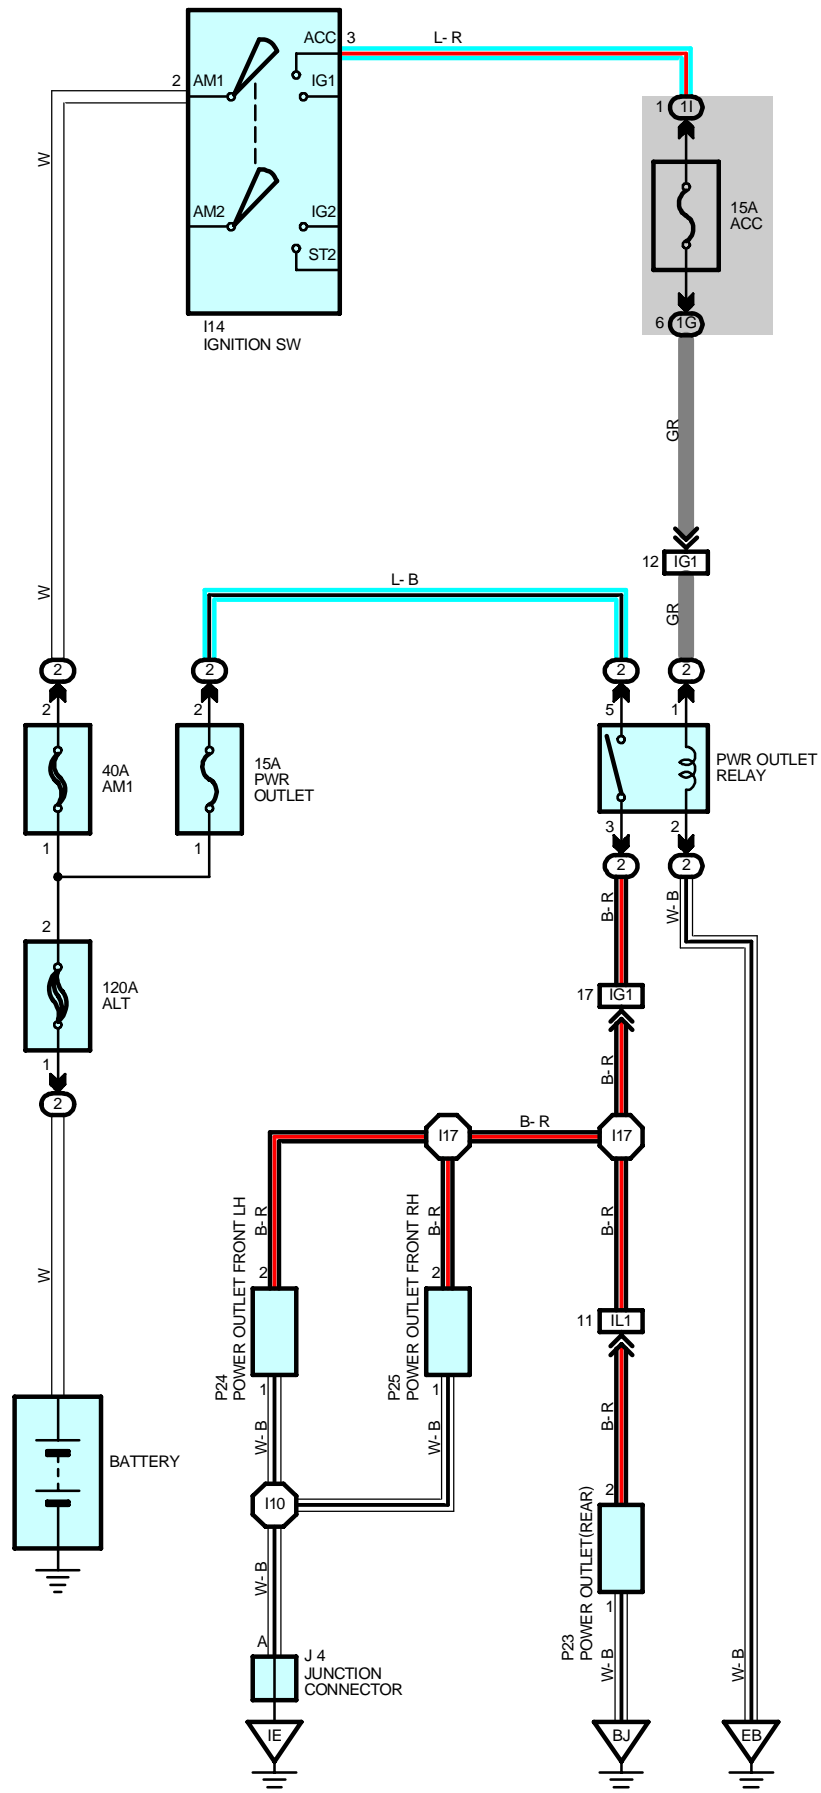

## SERVICE HINTS

### PWR OUTLET RELAY

- 3-5 : Closed with ignition SW at **ACC** or **ON** position
- 1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 5-GROUND : Always approx. **12** volts
- 2-GROUND : Always continuity

### : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I14	<a href="#">31</a>	P23	<a href="#">33</a>	P25	<a href="#">31</a>
J4	<a href="#">31</a>	P24	<a href="#">31</a>		

### : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	<a href="#">24</a>	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1I	<a href="#">24</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	<a href="#">38</a>	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IL1	<a href="#">40</a>	Cowl Wire and Floor Wire (Right Kick Panel)

### : GROUND POINTS

Code	See Page	Ground Points Location
EB	<a href="#">36</a>	Front Left Fender
IE	<a href="#">38</a>	Cowl Side Panel LH
BJ	<a href="#">42</a>	Right Quarter Panel Inner

### : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I10	<a href="#">40</a>	Cowl Wire	I17	<a href="#">40</a>	Cowl Wire