



POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

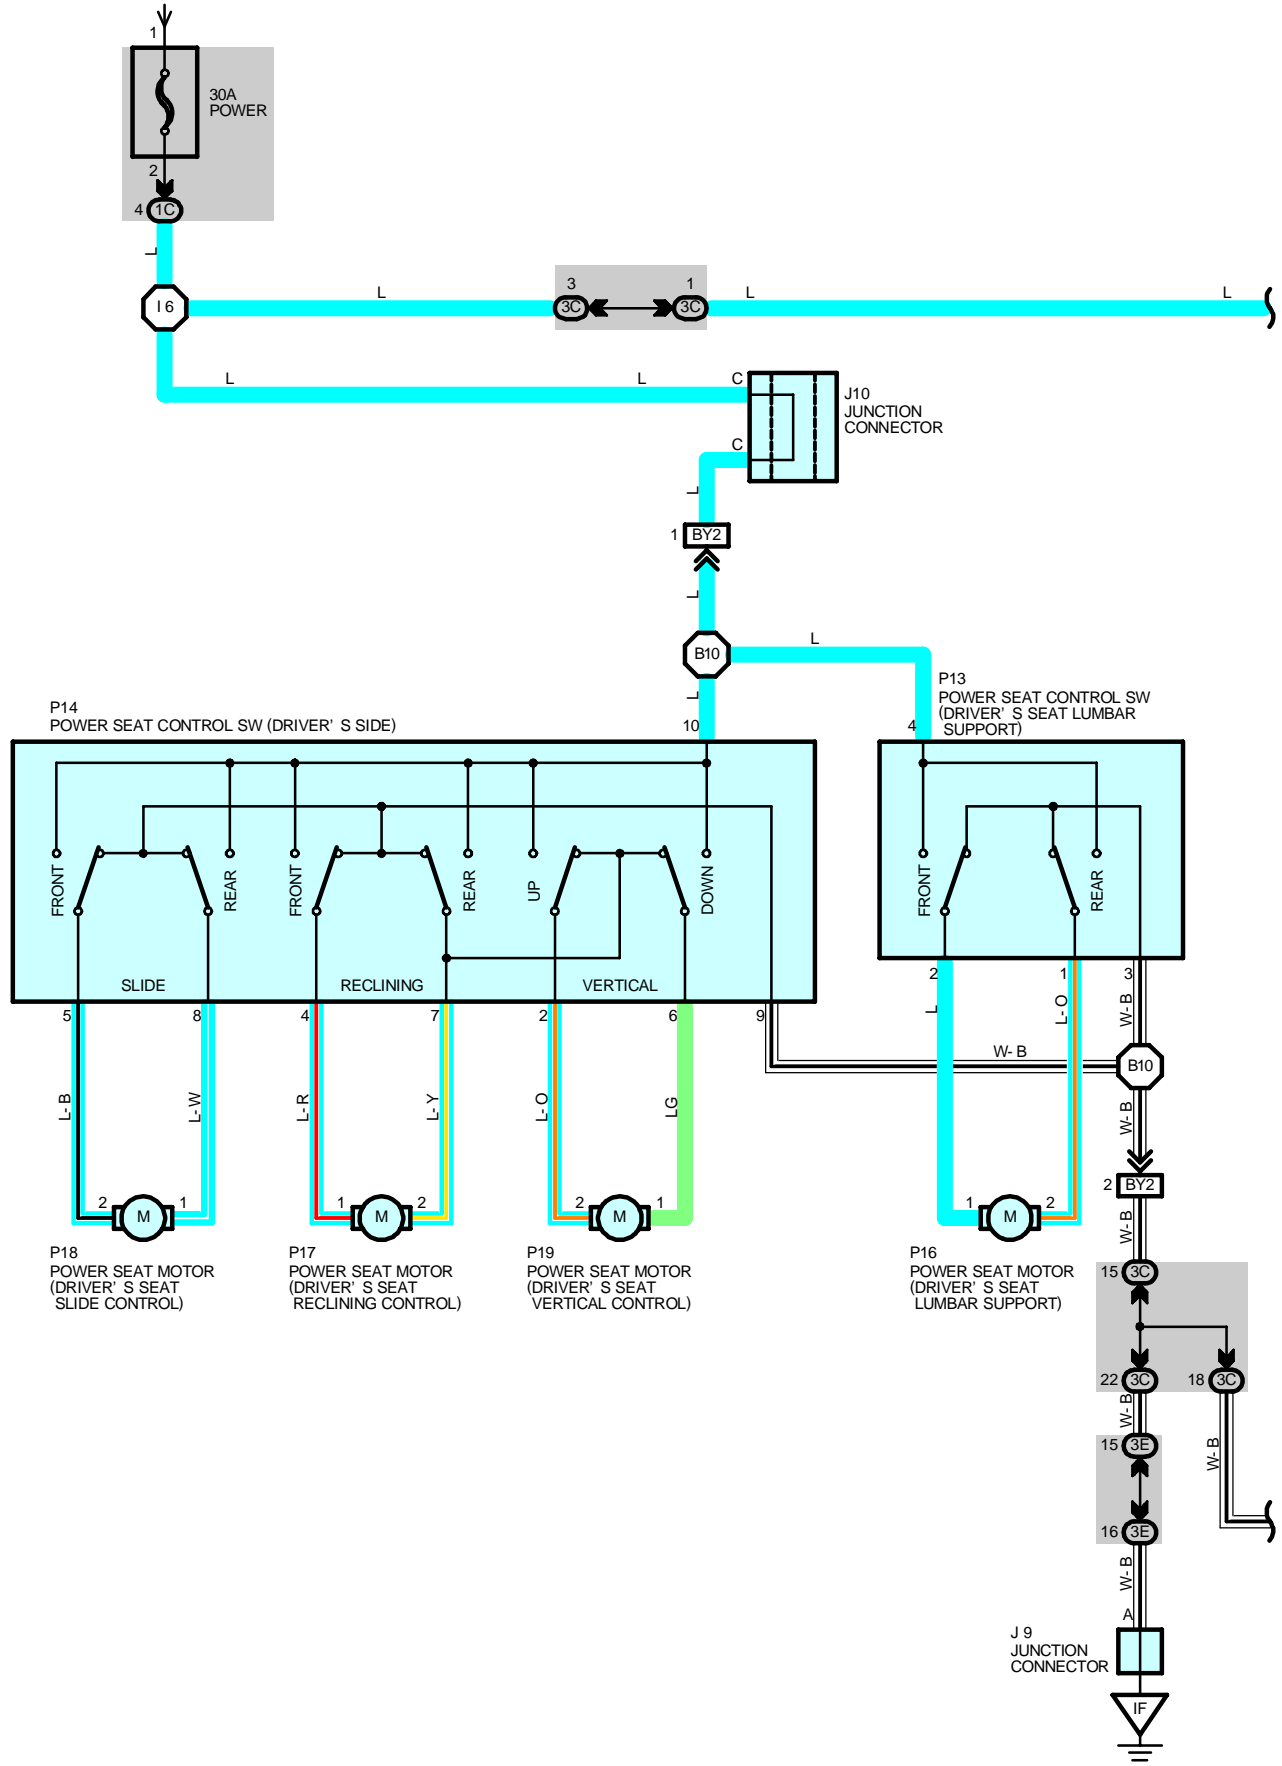

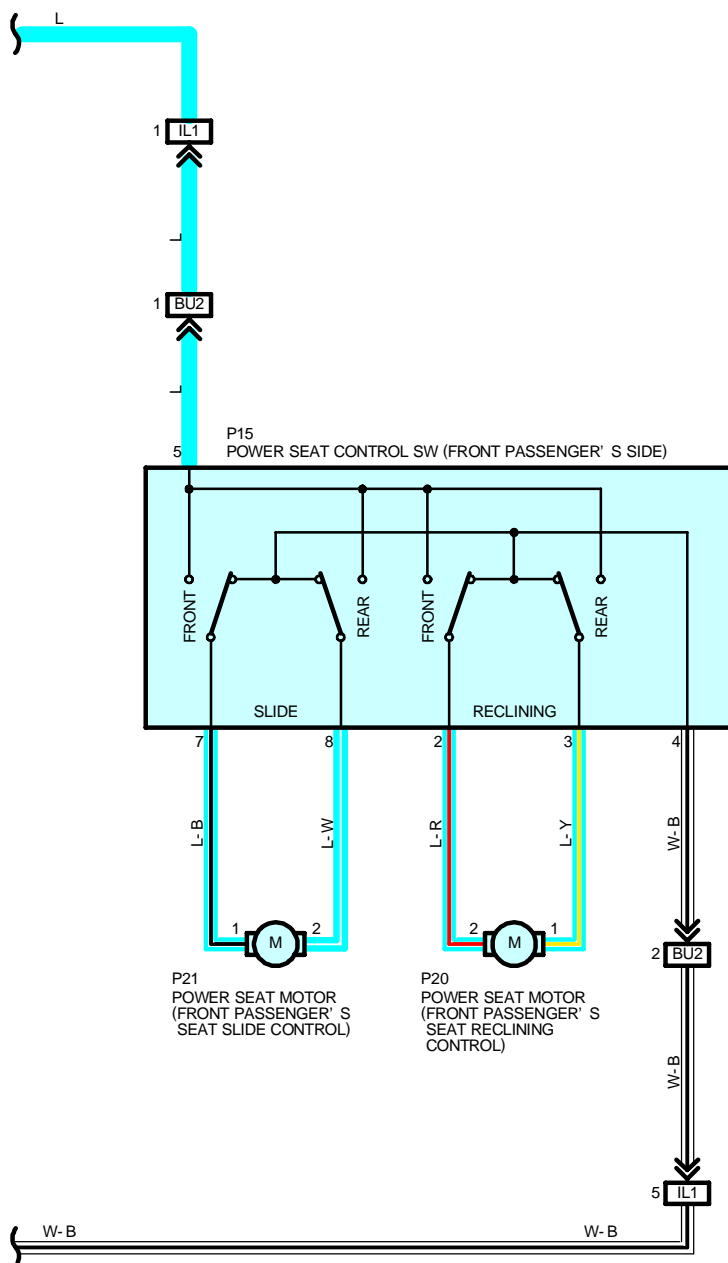

POWER SEAT

SERVICE HINTS

P13 POWER SEAT CONTROL SW (DRIVER'S SEAT LUMBAR SUPPORT)

- 4-2 : Closed with the driver's seat at lumbar support front operation
- 4-1 : Closed with the driver's seat at lumbar support rear operation
- 3-GROUND : Always continuity

P14 POWER SEAT CONTROL SW (DRIVER'S SIDE)

- 10-5 : Closed with the driver's seat at front slide operation
- 10-8 : Closed with the driver's seat at rear slide operation
- 10-4 : Closed with the driver's seat at front reclining operation
- 10-7 : Closed with the driver's seat at rear reclining operation
- 10-2 : Closed with the driver's seat at vertical up operation
- 10-6 : Closed with the driver's seat at vertical down operation
- 9-GROUND : Always continuity

P15 POWER SEAT CONTROL SW (FRONT PASSENGER'S SIDE)

- 5-7 : Closed with the front passenger's seat at front slide operation
- 5-8 : Closed with the front passenger's seat at rear slide operation
- 5-2 : Closed with the front passenger's seat at front reclining operation
- 5-3 : Closed with the front passenger's seat at rear reclining operation
- 4-GROUND : Always continuity



: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J9	31	P15	34	P19	34
J10	31	P16	34	P20	34
P13	34	P17	34	P21	34
P14	34	P18	34		



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL1	40	Cowl Wire and Floor Wire (Right Kick Panel)
BU2	44	Floor Wire and Seat No.2 Wire (Under the Front Passenger's Seat)
BY2	44	Cowl Wire and Seat No.1 Wire (Under the Driver's Seat)



: GROUND POINTS

Code	See Page	Ground Points Location
IF	38	Cowl Side Panel RH



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	40	Cowl Wire	B10	44	Seat No.1 Wire

