



## SERVICE HINTS

### A23 AUTO ANTENNA CONTROL RELAY

- 1-GROUND : Always approx. **12** volts
- 5-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 4-GROUND : Approx. **12** volts with ignition SW at **ON** position
- 6-GROUND : Always continuity
- 7-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position and radio SW on and player SW off
- 8-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position and radio SW off and player SW on

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A11	<a href="#">28</a>	J4	<a href="#">31</a>		
A23	<a href="#">30</a>	R1	<a href="#">31</a>		

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	<a href="#">24</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	<a href="#">24</a>	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G	<a href="#">24</a>	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3B	<a href="#">26</a>	Cowl Wire and Center J/B (Near the Steering Column Tube)
3C	<a href="#">26</a>	Cowl Wire and Center J/B (Near the Steering Column Tube)

## : GROUND POINTS

Code	See Page	Ground Points Location
IE	<a href="#">38</a>	Cowl Side Panel LH