




COMBINATION METER

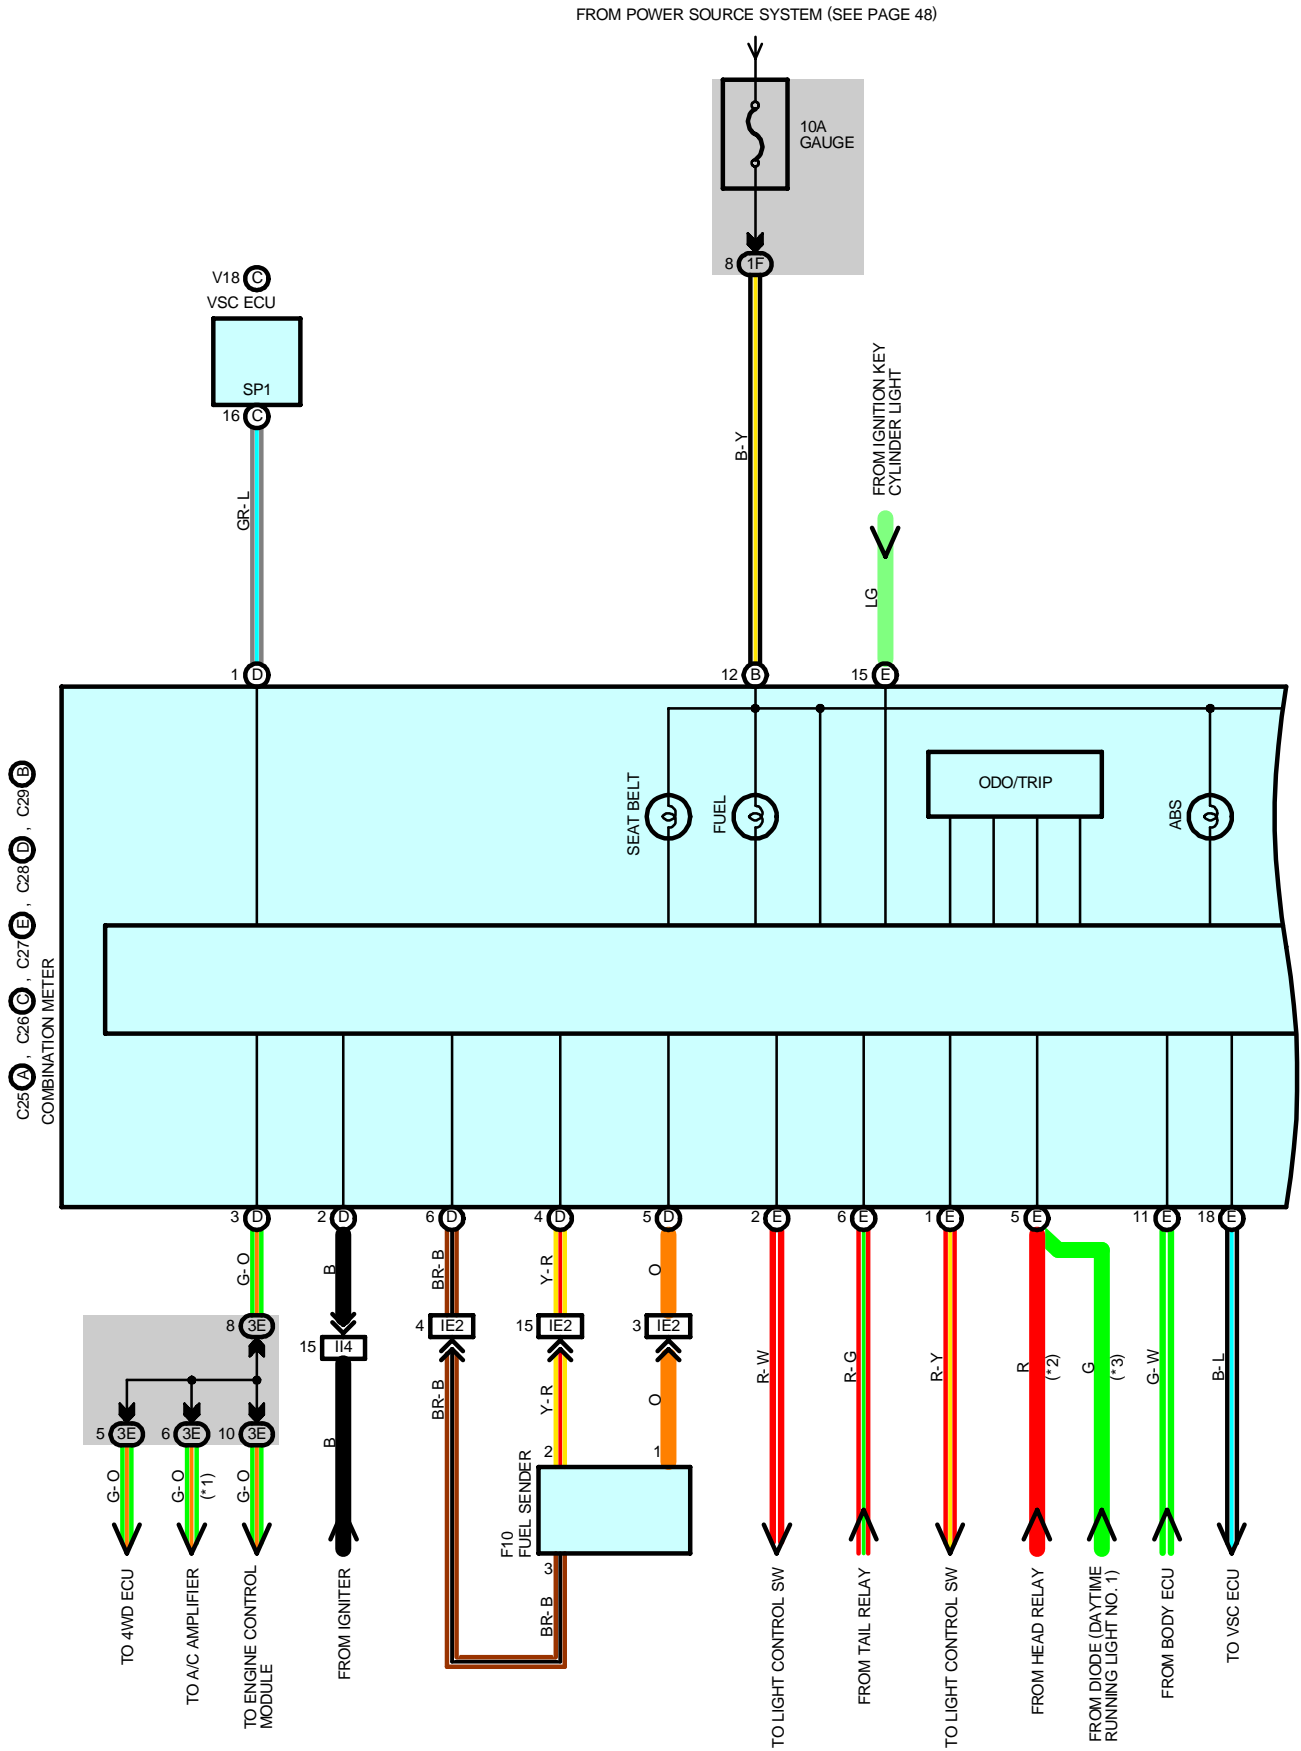


FROM POWER SOURCE SYSTEM (SEE PAGE 48)

- * 1 : AUTOMATIC AIR CONDITIONING
- * 2 : W/O DAYTIME RUNNING LIGHT
- * 3 : W/ DAYTIME RUNNING LIGHT

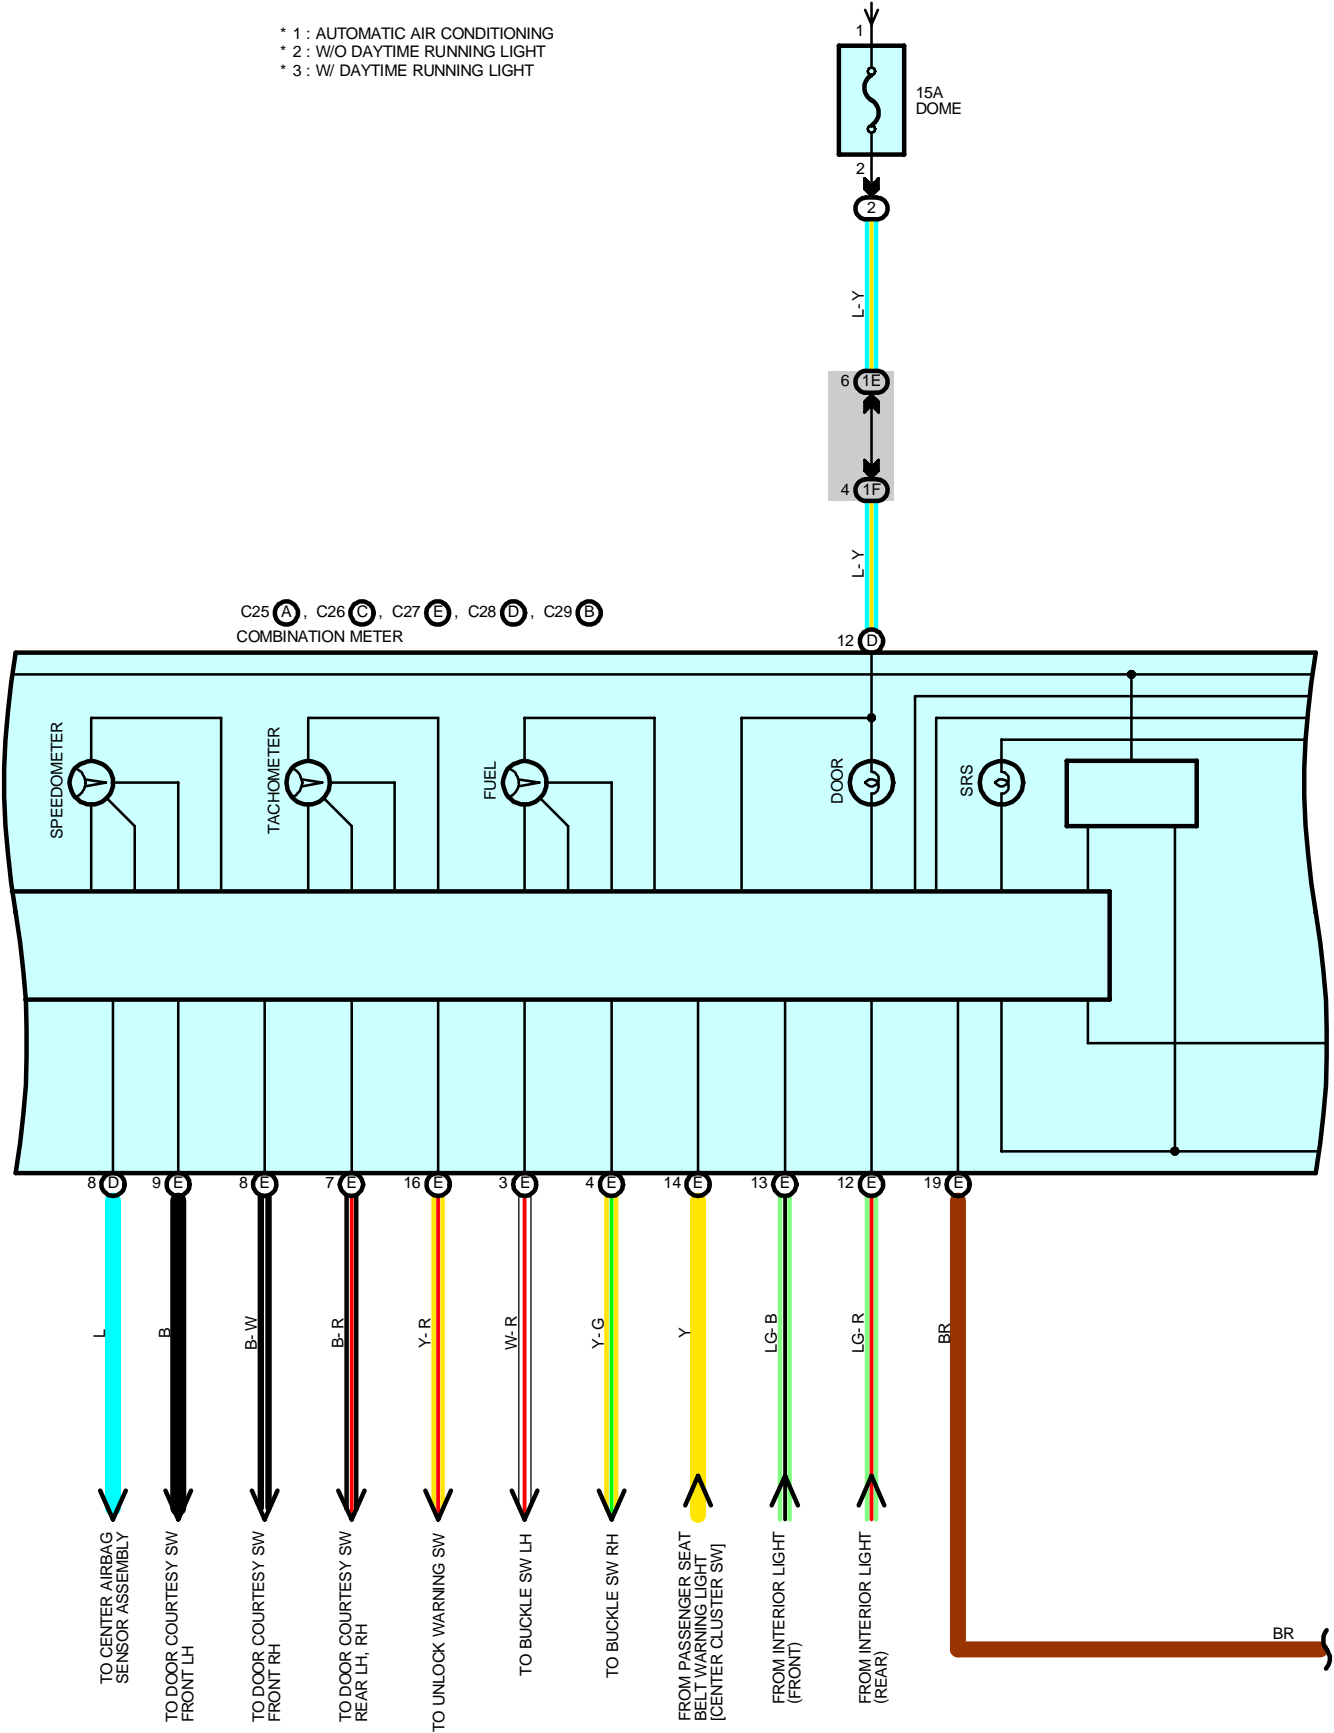

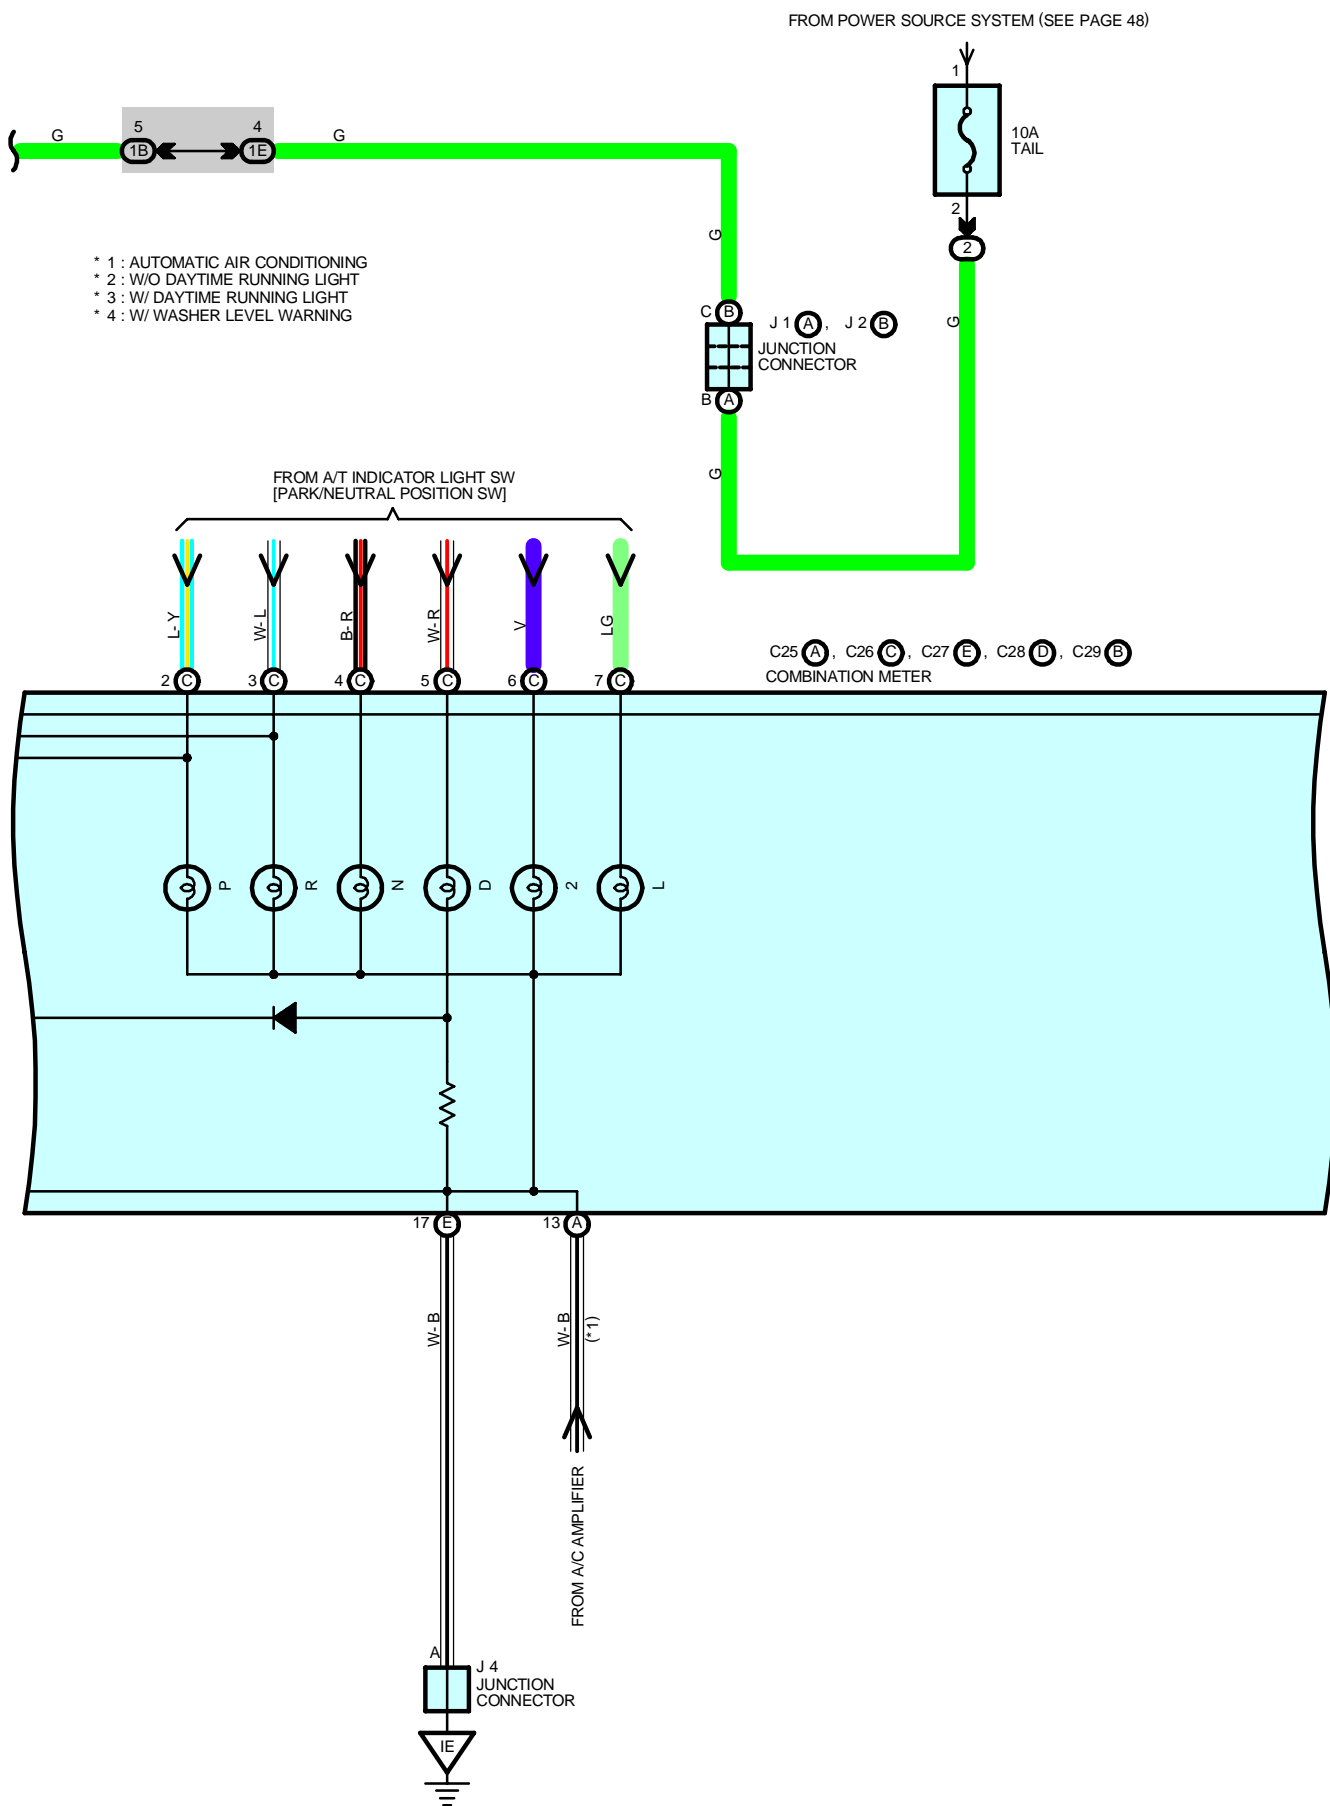

COMBINATION METER

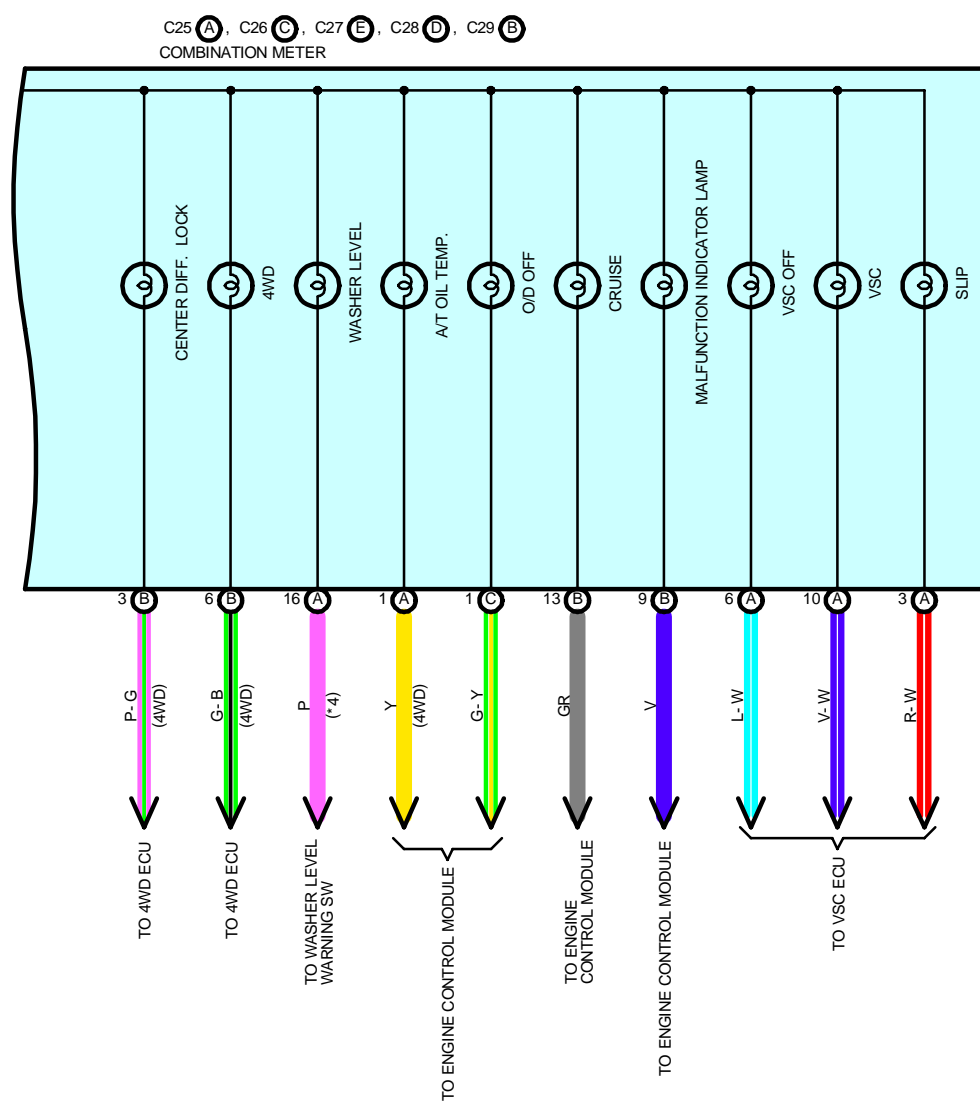

SERVICE HINTS

B2 BRAKE FLUID LEVEL WARNING SW

1-2 : Closed with float down

C25 (A), C27 (E), C28 (D), C29 (B) COMBINATION METER

(B)12-GROUND : Approx. **12** volts with ignition SW at **ON** position

(A) 5-GROUND : Approx. **12** volts with ignition SW at **ON** position

(A) 7, (E) 17, (E) 19-GROUND : Always continuity

(D)12-GROUND : Always approx. **12** volts

○ : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
B2		28		C29	B	30		O1	29		
C25	A	30		F10		32		V18	31		
C26	C	30		J1	A	29		W2	29		
C27	E	30		J2	B	29					
C28	D	30		J4		31					

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3D	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		
3F		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	38	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
II4	40	Engine Wire and Cowl Wire (On the Glove Box)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	36	Front Right Fender
ID	38	Left Kick Panel
IE	38	Cowl Side Panel LH