



SERVICE HINTS

R15 REAR HEATER BLOWER SW

2-3 : Closed with the ignition SW at on and rear heater blower SW at **LO** position

1, 2-3 : Closed with the ignition SW at on and rear heater blower SW at **HI** position

R16 REAR HEATER RELAY

5-3 : Closed with the ignition SW at **ON** position and rear heater blower SW at **HI** or **LO** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J9	31	R14	33	R16	33
R13	33	R15	33		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3D	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IL1	40	Cowl Wire and Floor Wire (Right Kick Panel)
BP1	42	Floor Wire and Rear Heater Sub Wire (Under the Front Passenger's Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	38	Cowl Side Panel RH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B6	42	Rear Heater Sub Wire			