


Front Fog Light

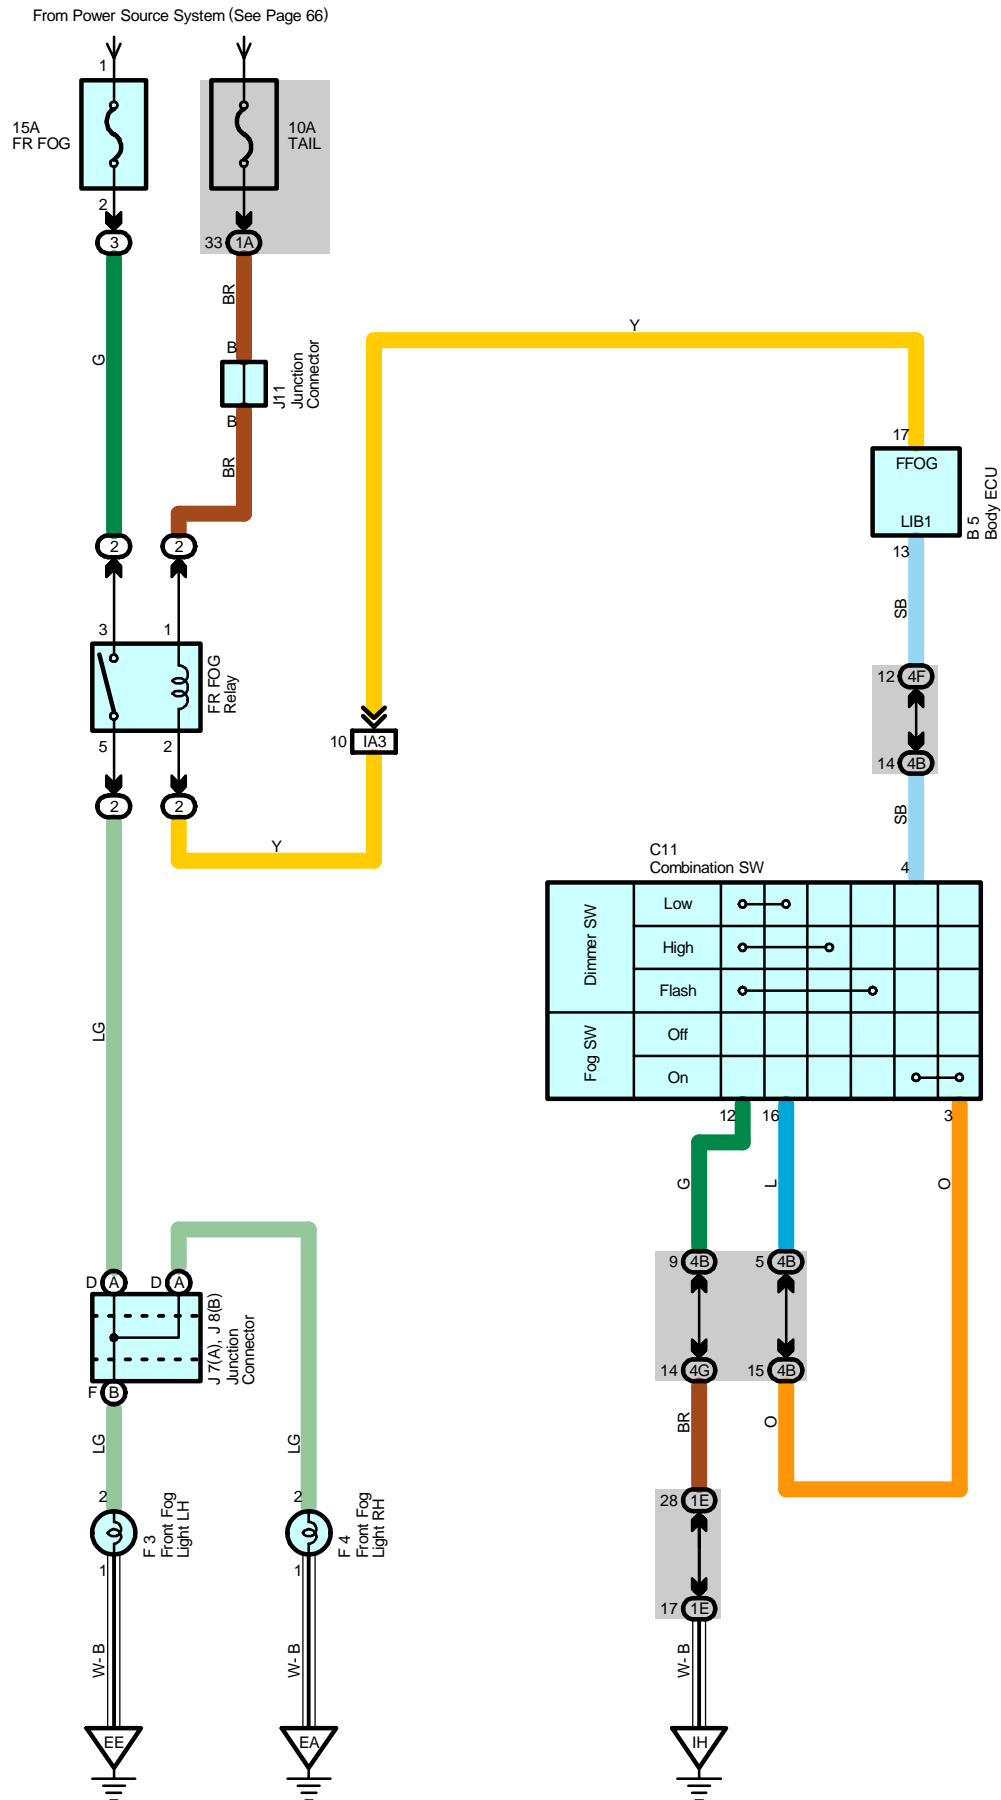

Service Hints

FR FOG Relay

3-5 : Closed with the light control SW at TAIL position, dimmer SW at LOW position and fog light SW at ON position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	46	F4	44	J11	48
C11	47	J7	A	48	
F3	44	J8	B	48	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	27	Engine Room R/B No.2 (Right Side of Reserve Tank)
3	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4F		
4G		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EE	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH