





# Ignition

## Service Hints

### I1, I2, I3, I4 Ignition Coil and Igniter No.1, No.2, No.3, No.4

1-Ground : Approx. 12 volts with the power SW at IG ON position

4-Ground : Always continuity

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
E4	<a href="#">47</a>	I2	<a href="#">45</a>	J2	<a href="#">45</a>
F15	<a href="#">51</a>	I3	<a href="#">45</a>	N1	<a href="#">45</a>
I1	<a href="#">45</a>	I4	<a href="#">45</a>	P6	<a href="#">49</a>

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3I	24	
3K		
3M	23	Frame Wire and Engine Room J/B (Engine Compartment Left)
4I	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4J		

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	<a href="#">54</a>	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	<a href="#">56</a>	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
BE1	<a href="#">60</a>	Frame Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)

## : Ground Points

Code	See Page	Ground Points Location
ED	<a href="#">54</a>	Engine Block
EF	<a href="#">54</a>	Left Side of the Suspension Tower

## : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	<a href="#">54</a>	Engine Wire	I3	<a href="#">58</a>	Engine Wire

