




## F RELAY LOCATIONS

### [Engine Compartment]

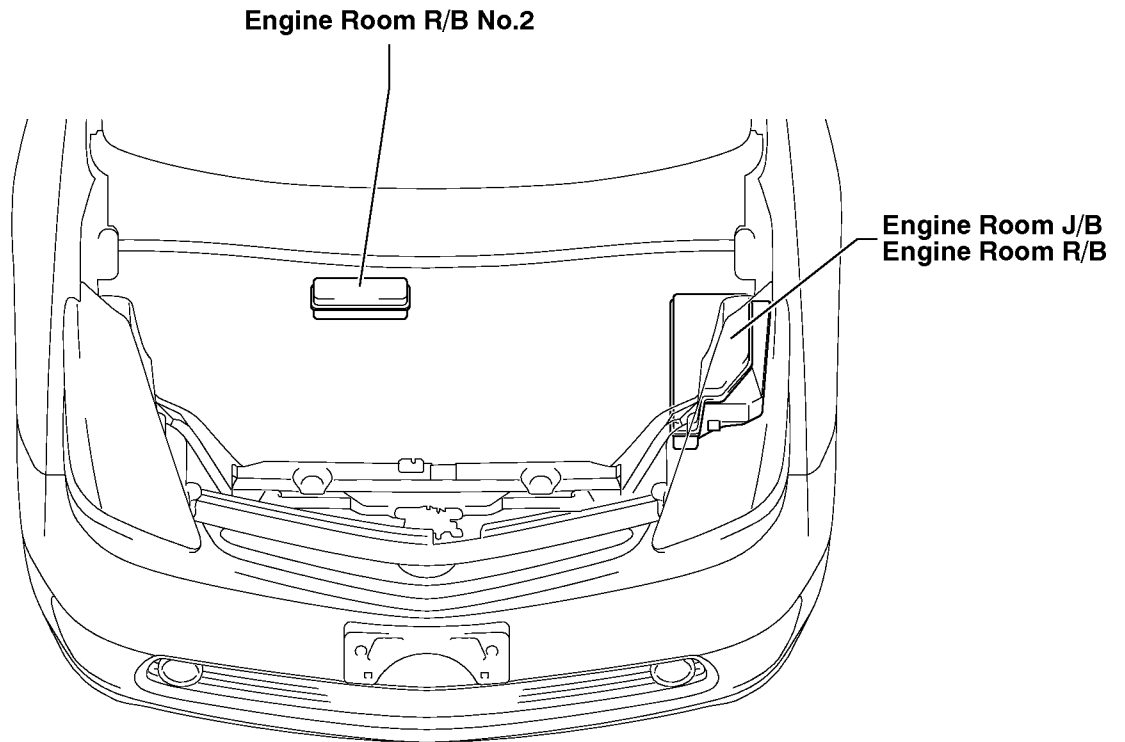

### [Instrument Panel]

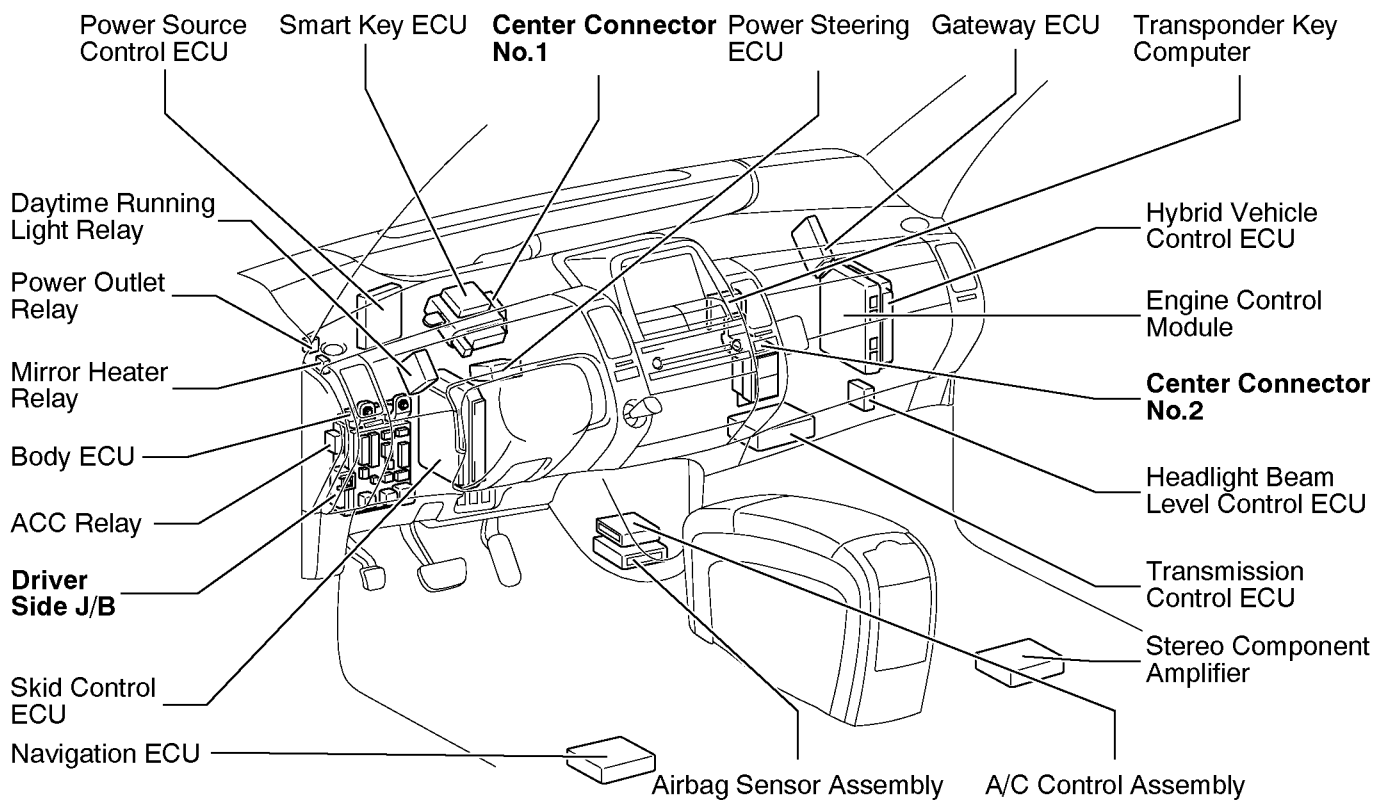

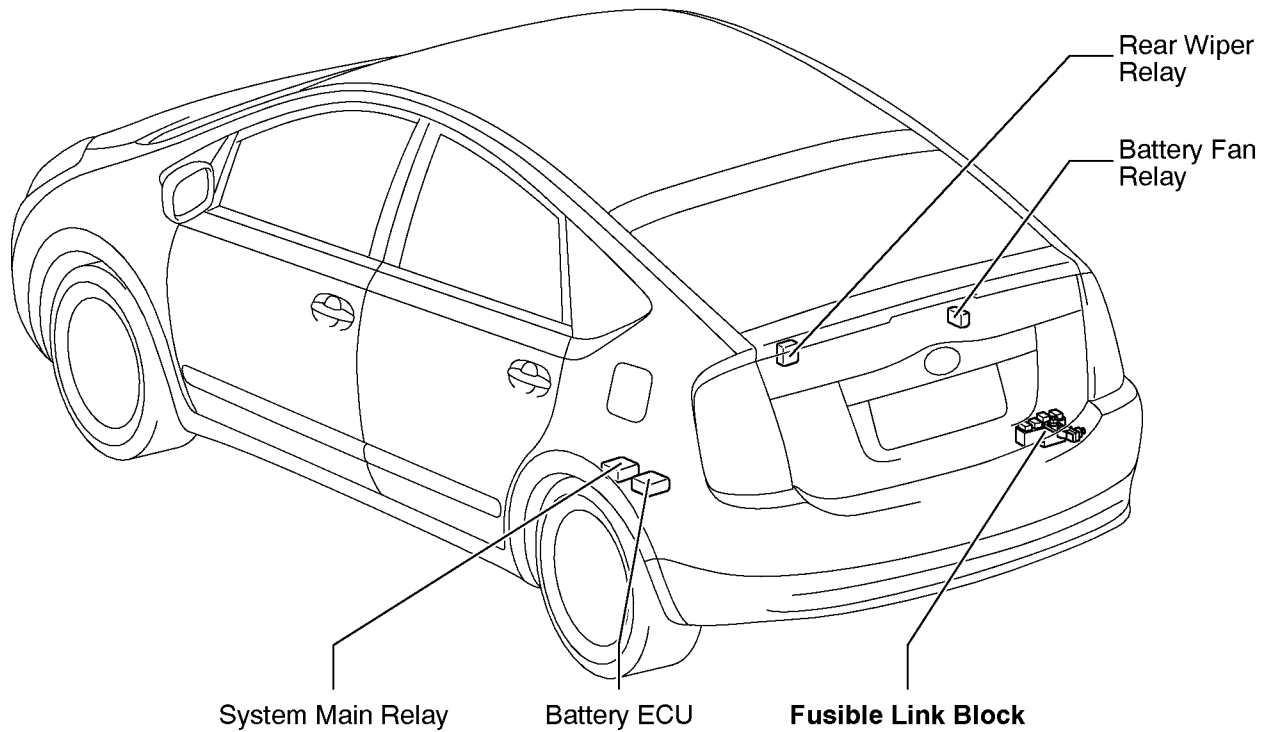
**[Body]**


## F RELAY LOCATIONS

③ : Engine Room R/B

○ : Engine Room J/B

Engine Compartment Left (See Page 20)

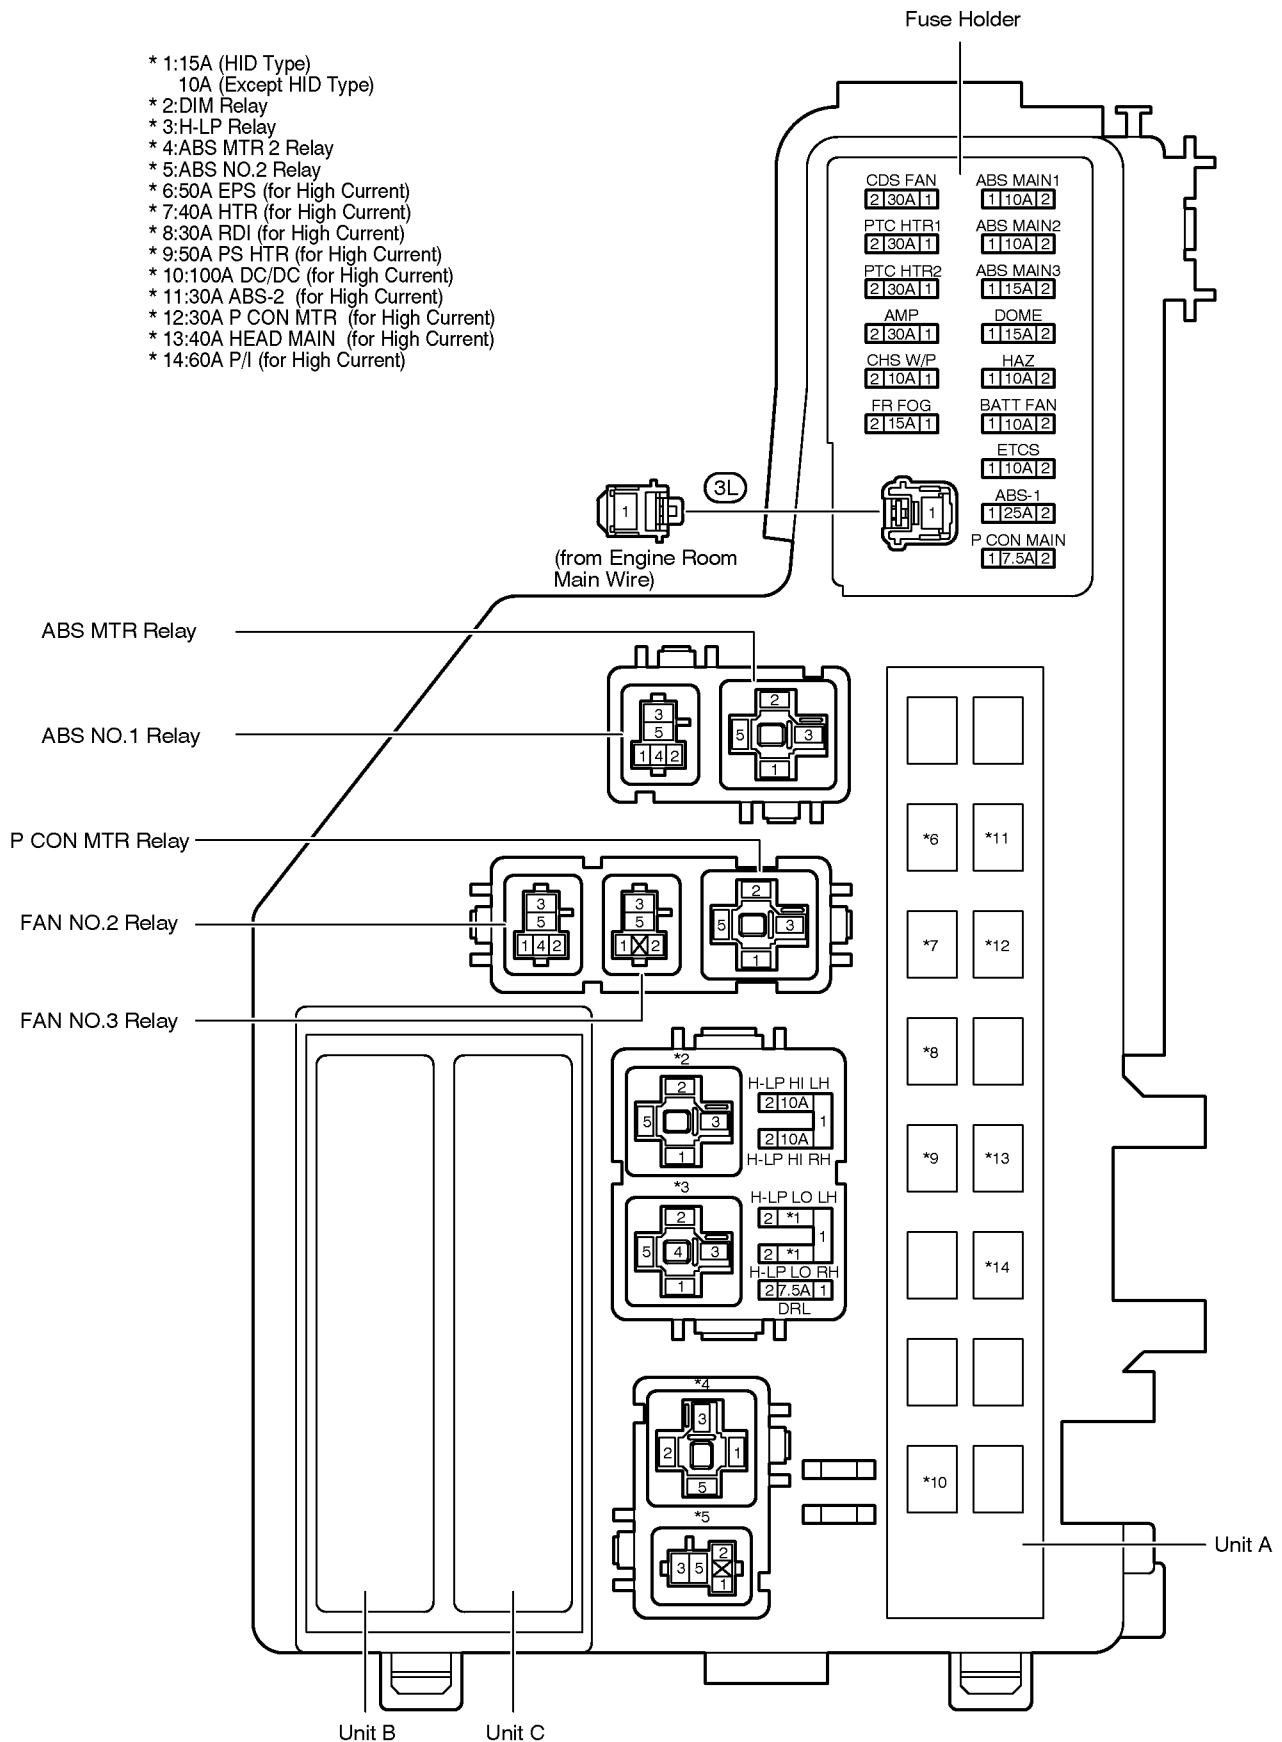

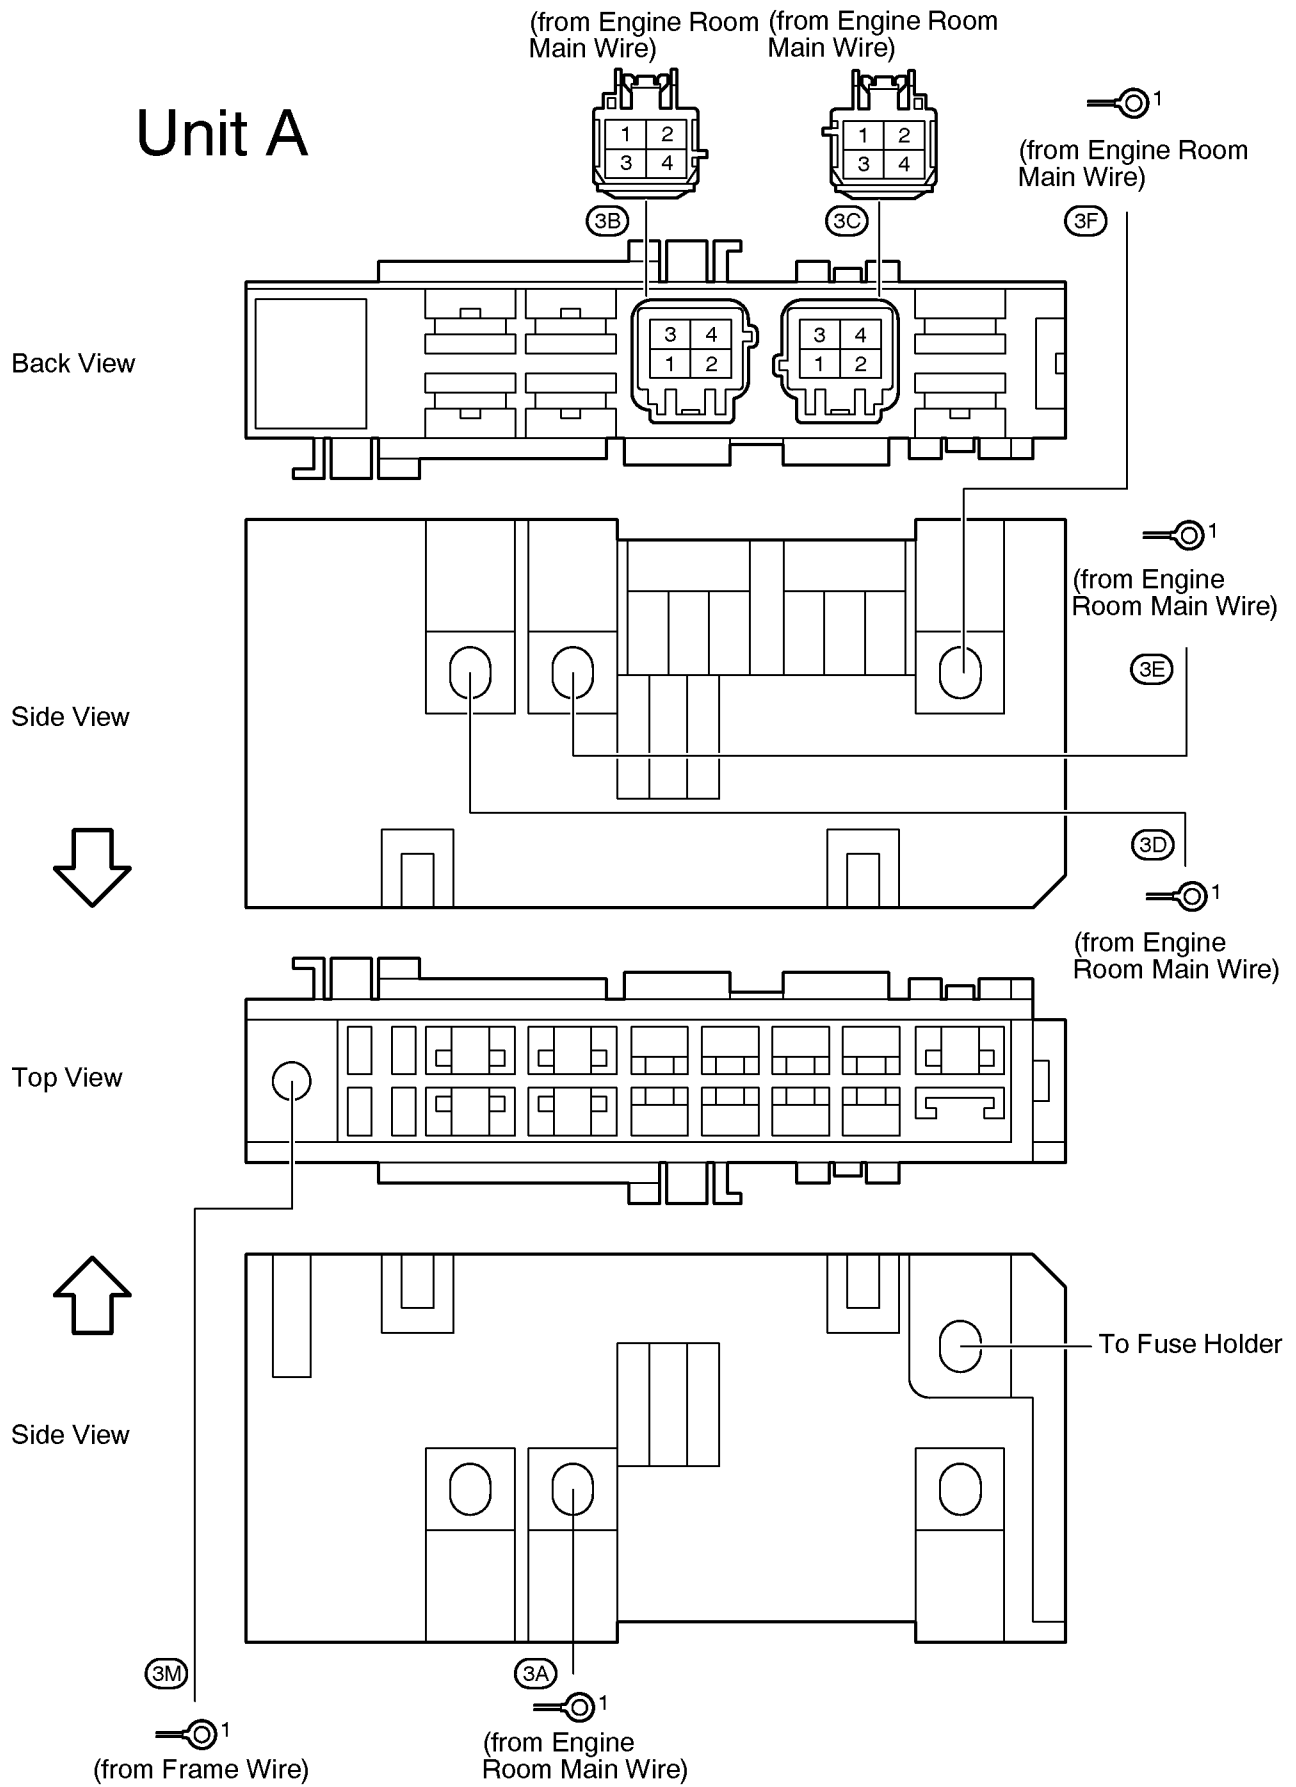


## F RELAY LOCATIONS

③ : Engine Room R/B


○ : Engine Room J/B

Engine Compartment Left (See Page 20)


### Unit B

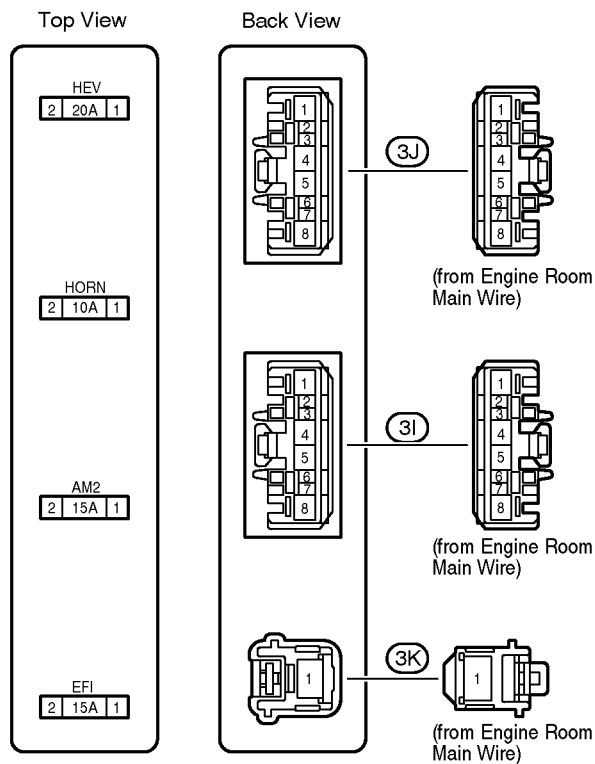

### Unit C

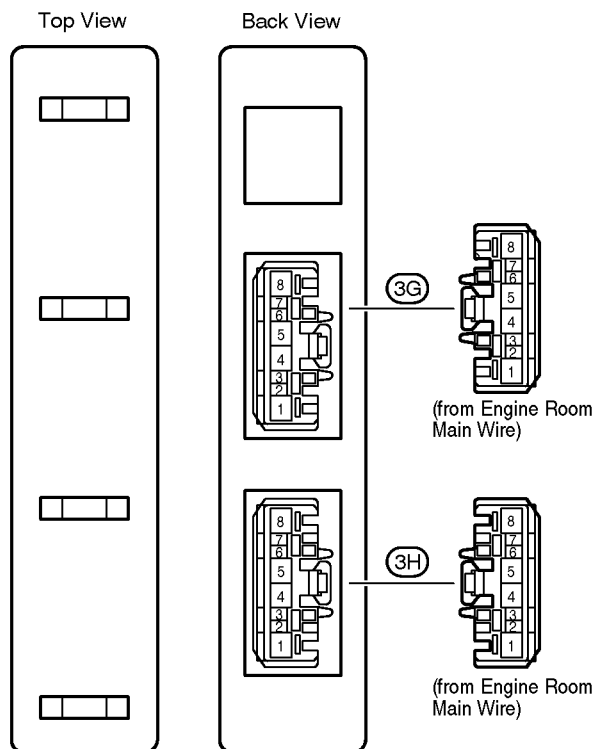


# [Engine Room R/B and Engine Room J/B Inner Circuit]

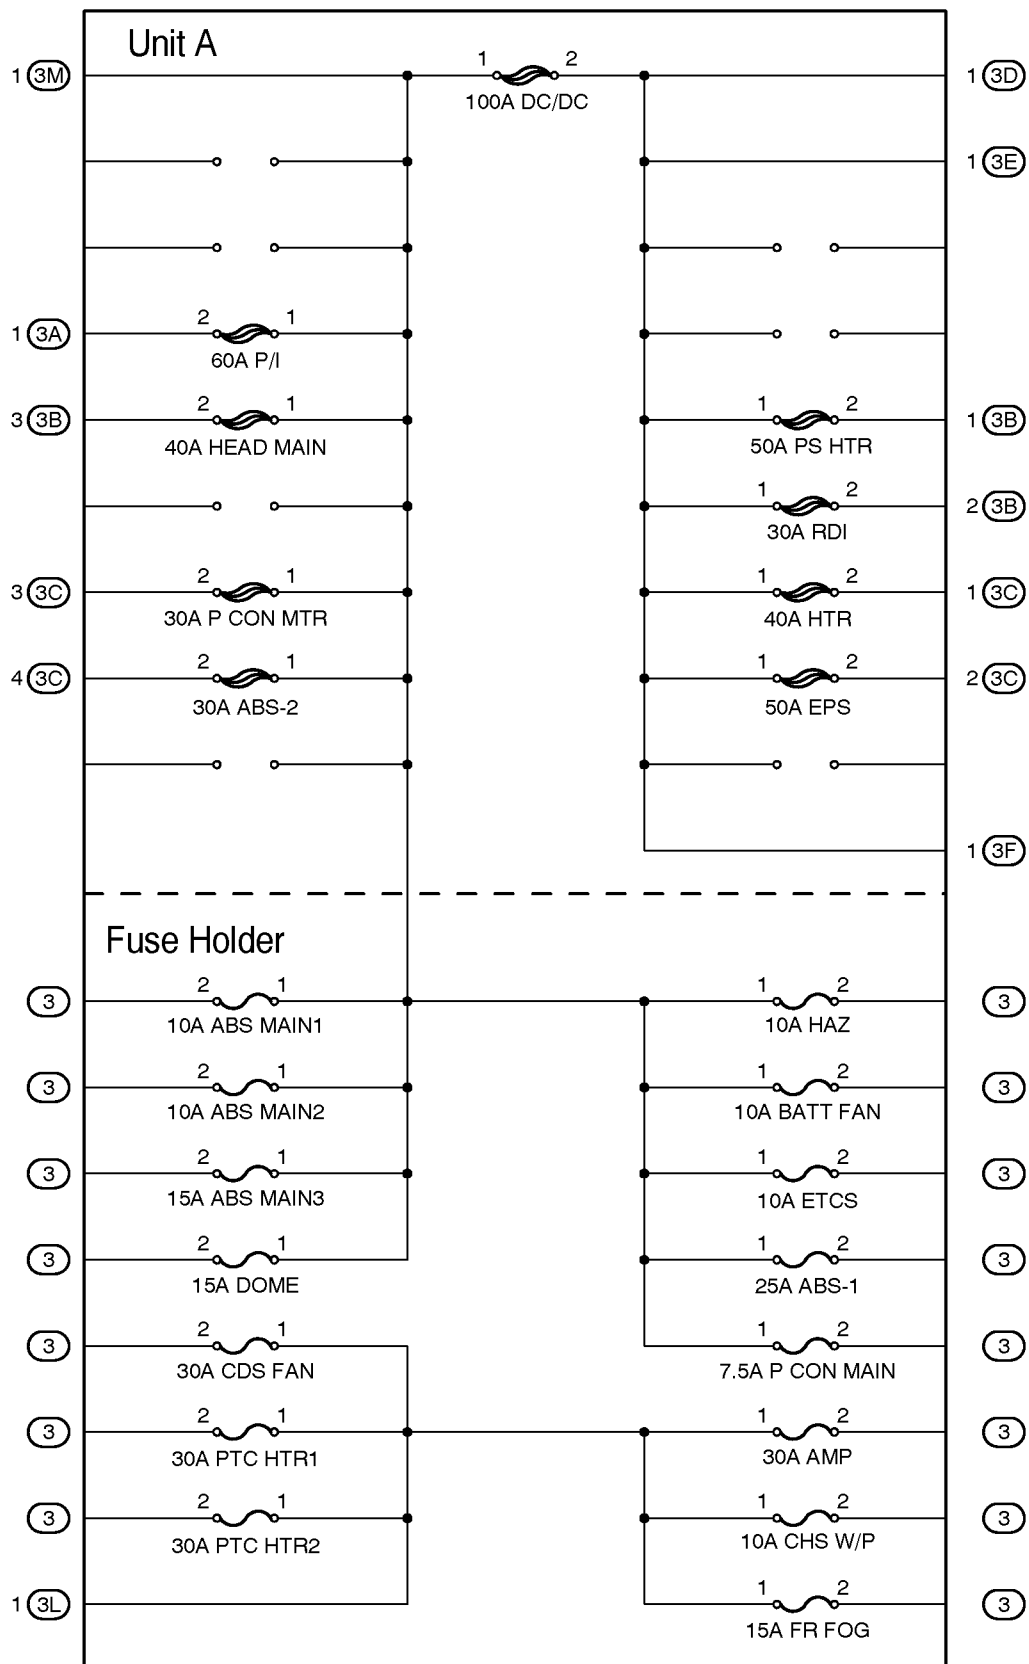


## F RELAY LOCATIONS

### [Engine Room R/B and Engine Room J/B Inner Circuit]

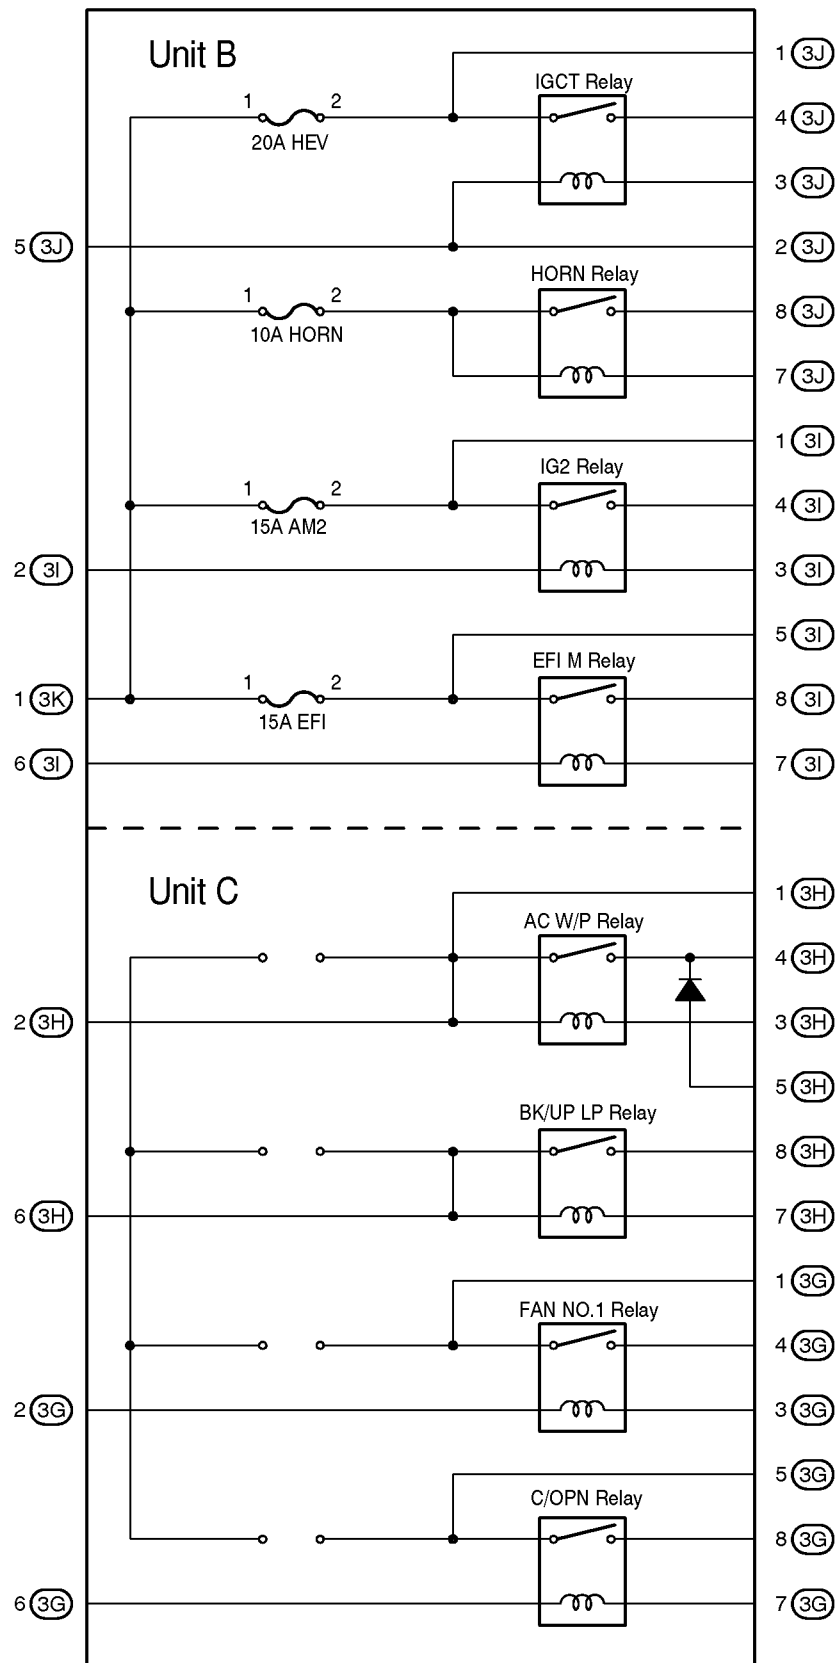


② : Engine Room R/B No.2 **Right Side of Reserve Tank (See Page 20)**

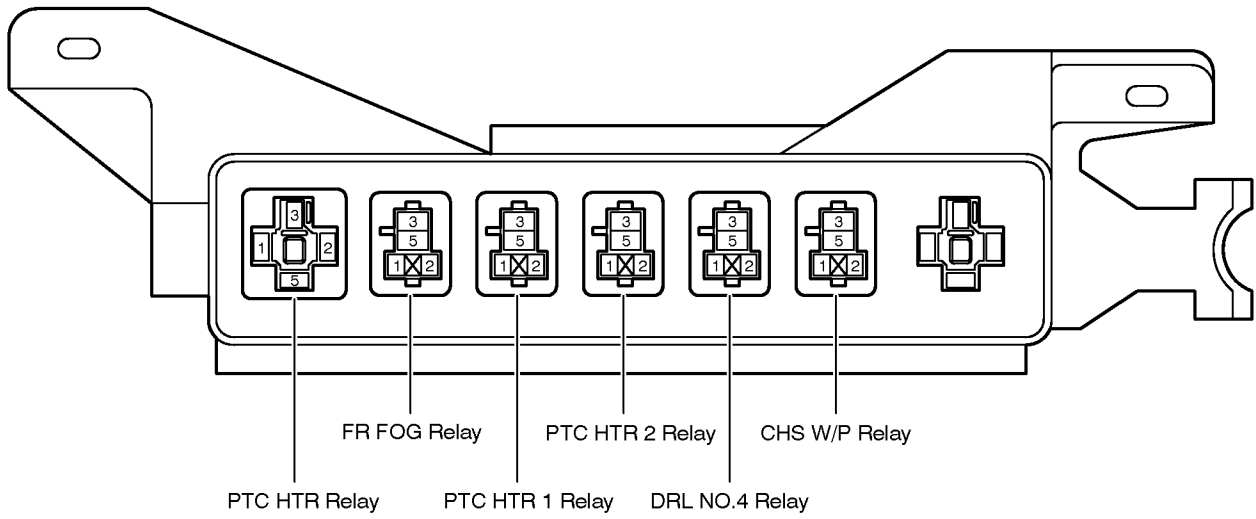

**Fusible Link Block**

**Luggage Room Right (See Page 21)**

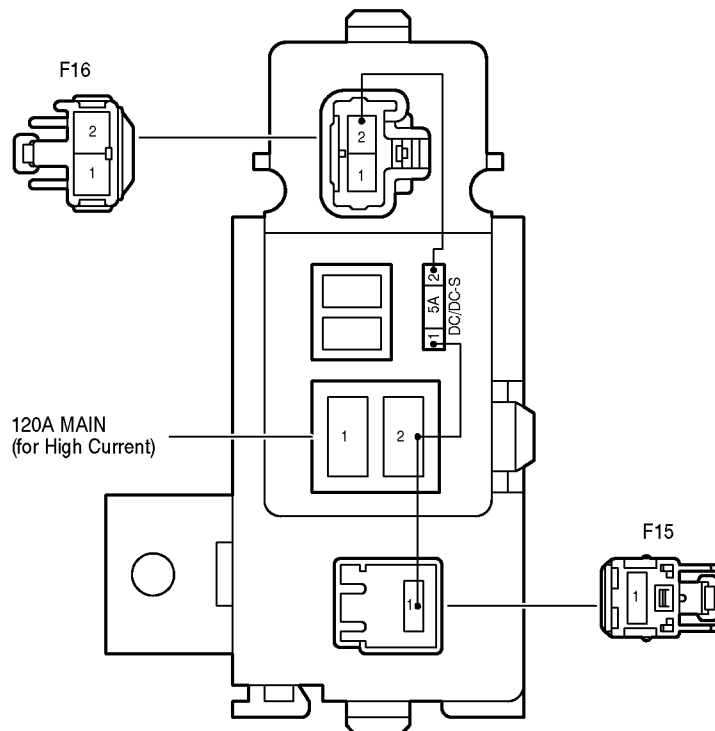





# F RELAY LOCATIONS

○ : Driver Side J/B


Lower Finish Panel (See Page 20)

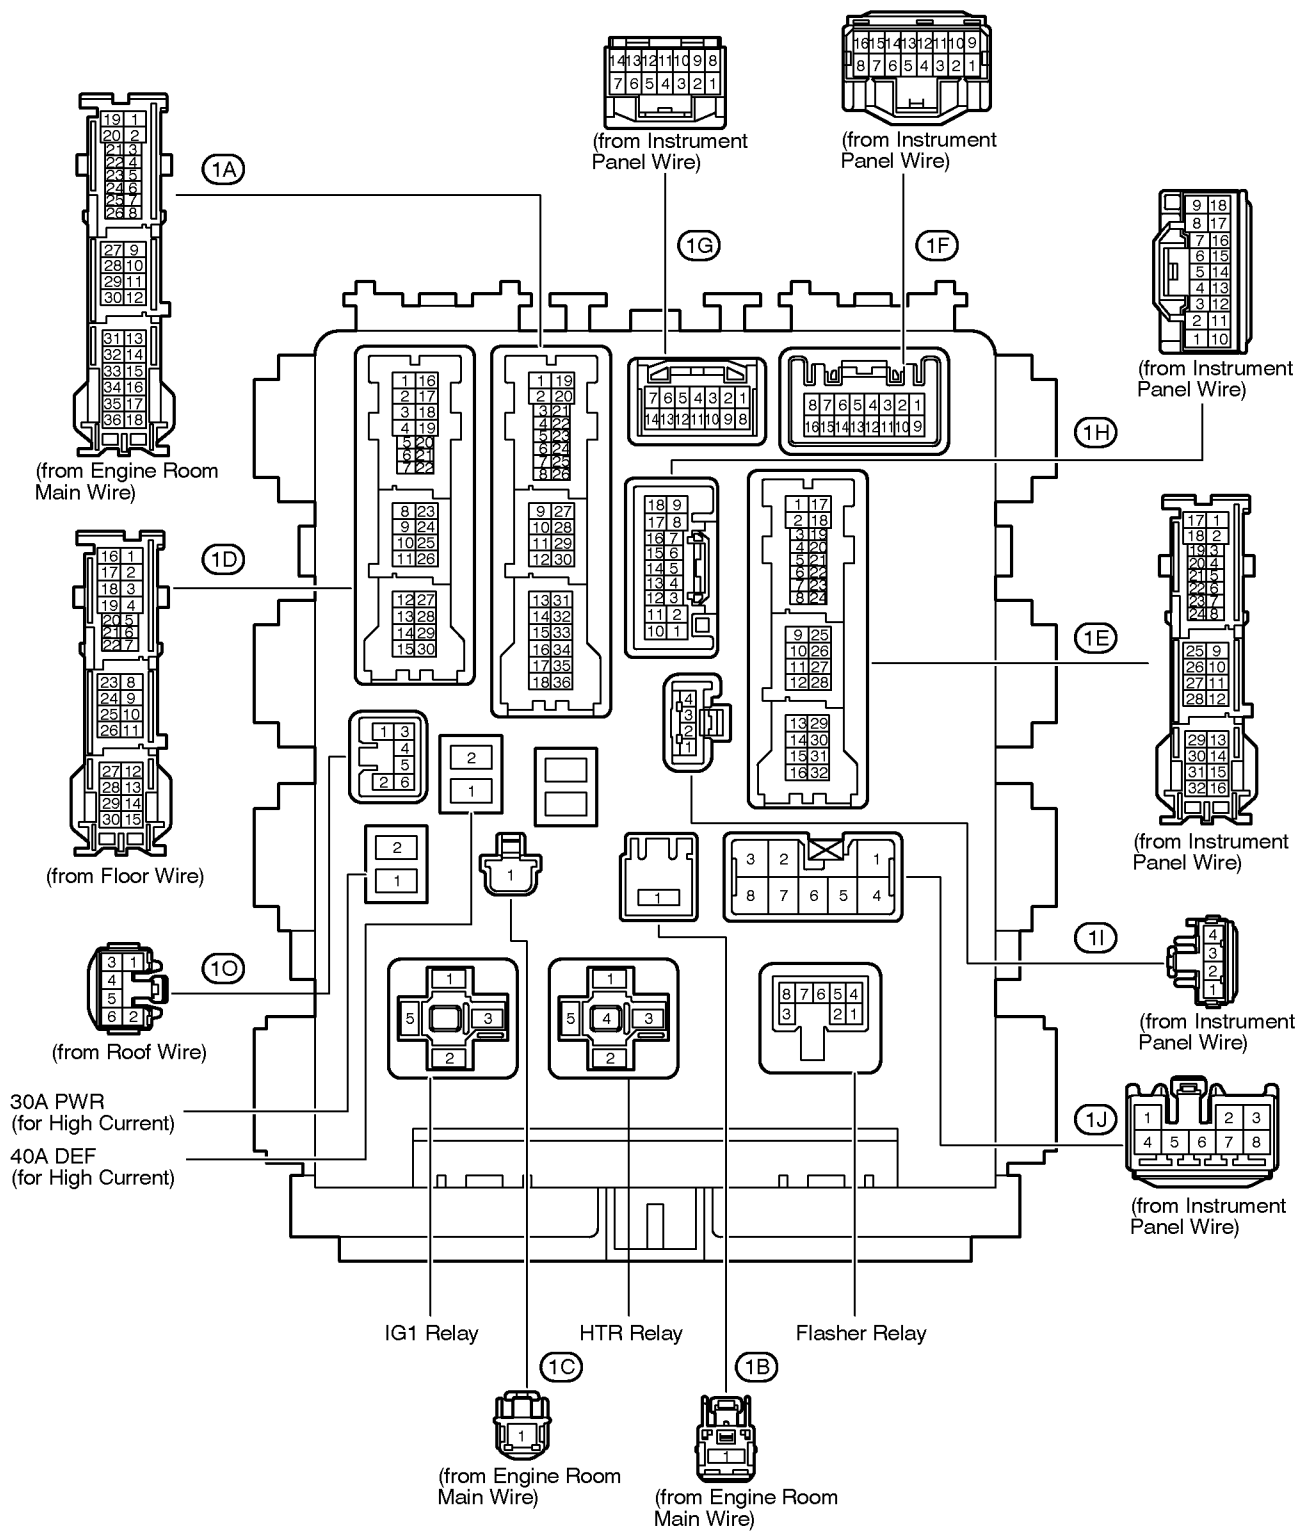

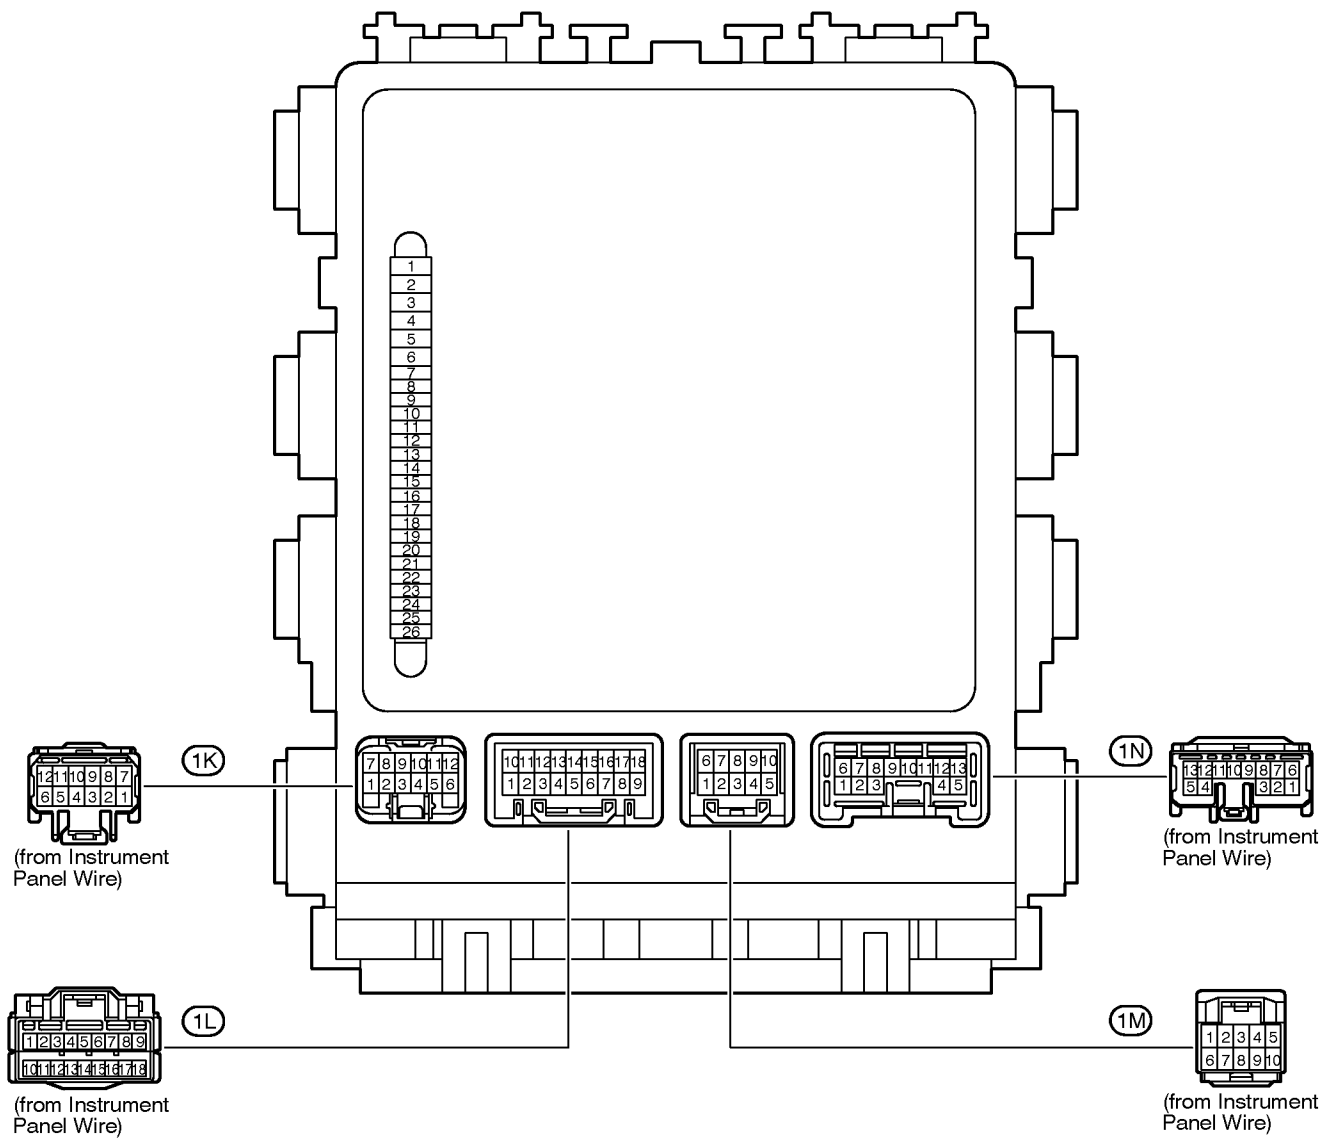

F RELAY LOCATIONS


 : Driver Side J/B	Lower Finish Panel (See Page 20)
---	----------------------------------

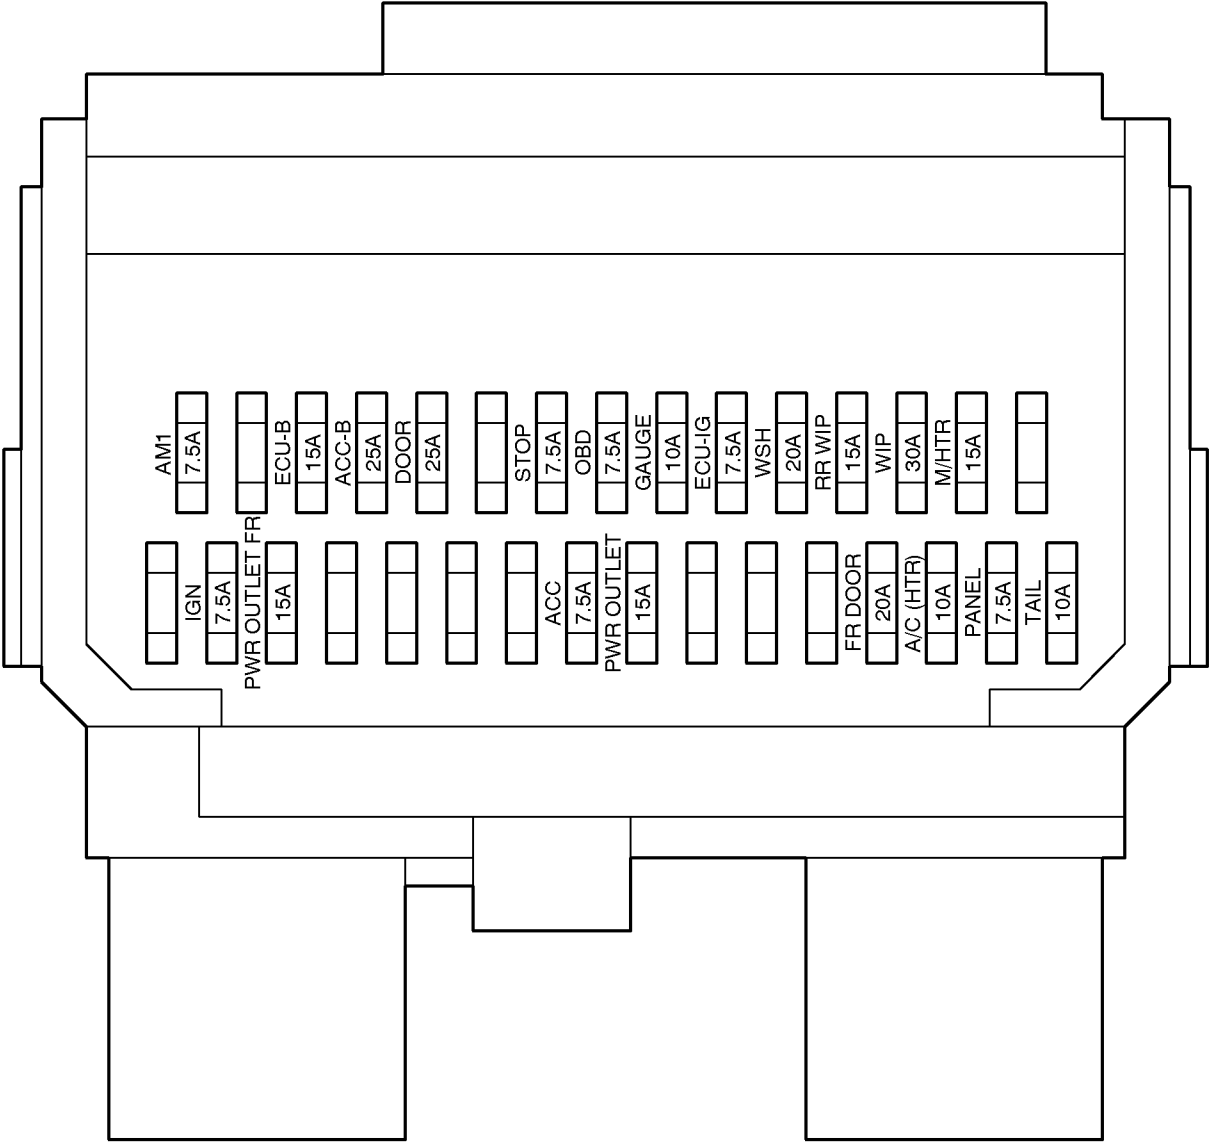




## F RELAY LOCATIONS

### [Driver Side J/B Inner Circuit]

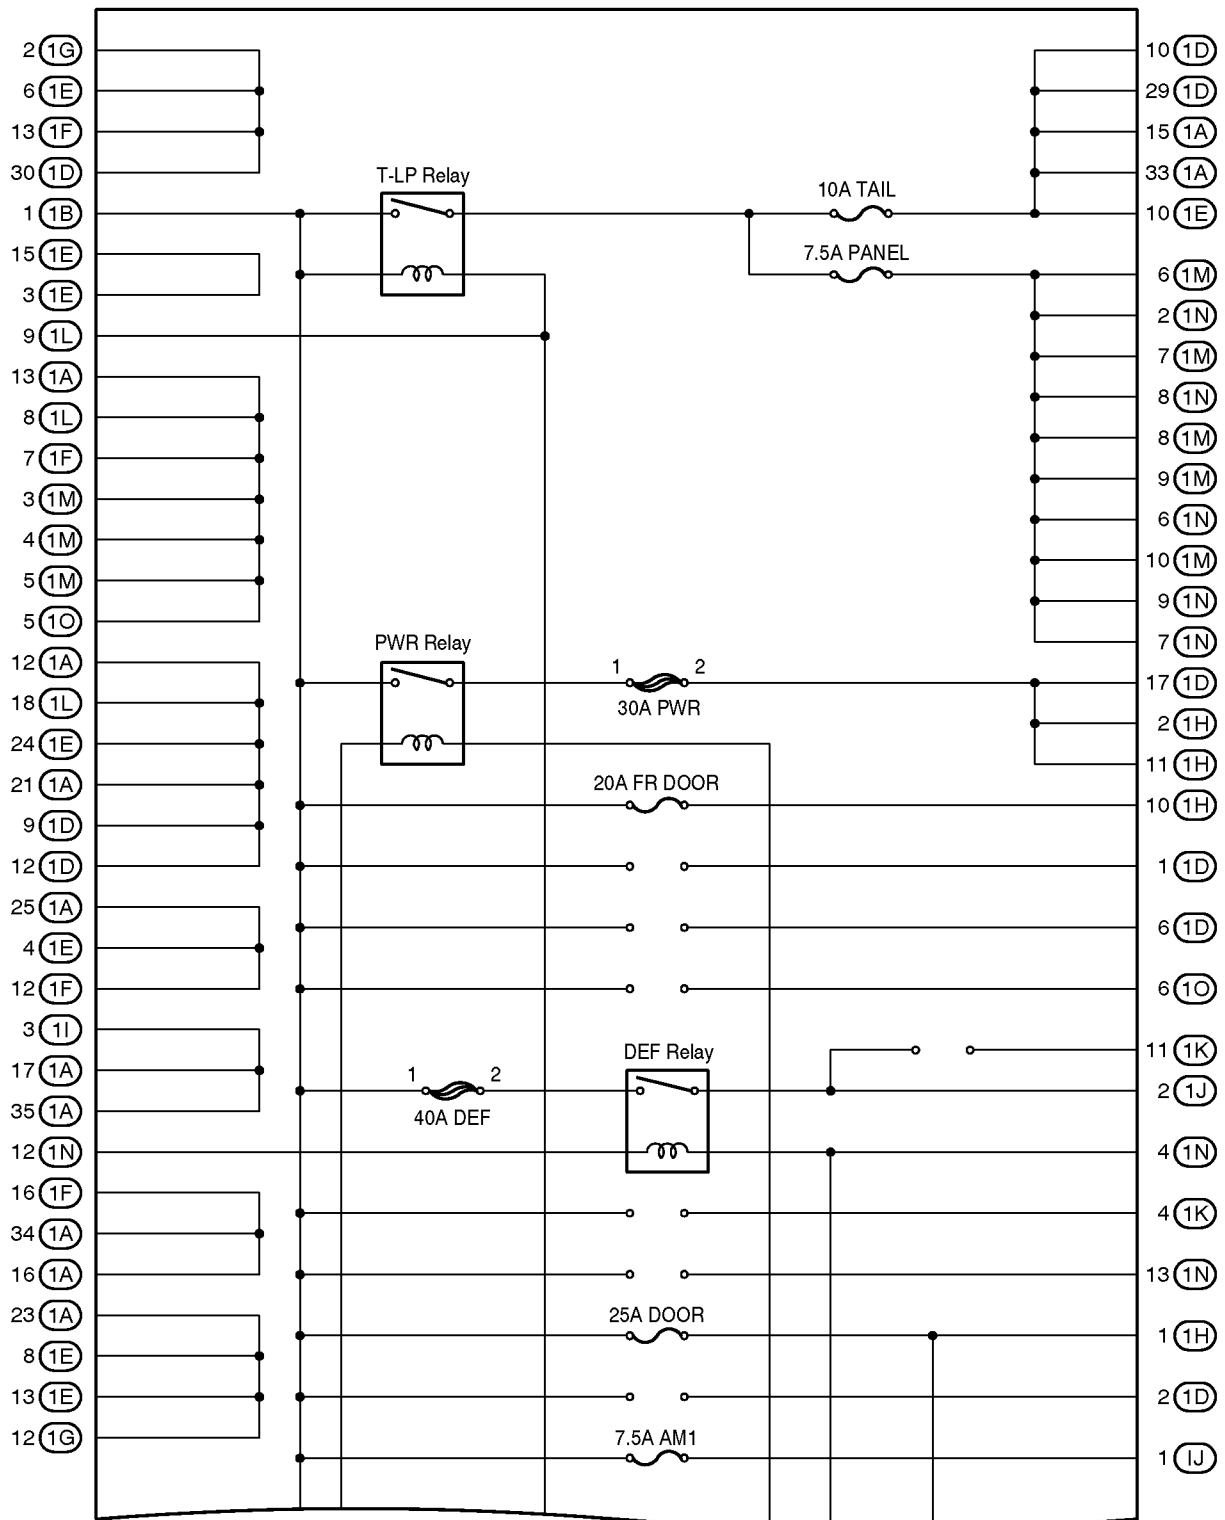

(Cont. Next Page)

(Cont'd)

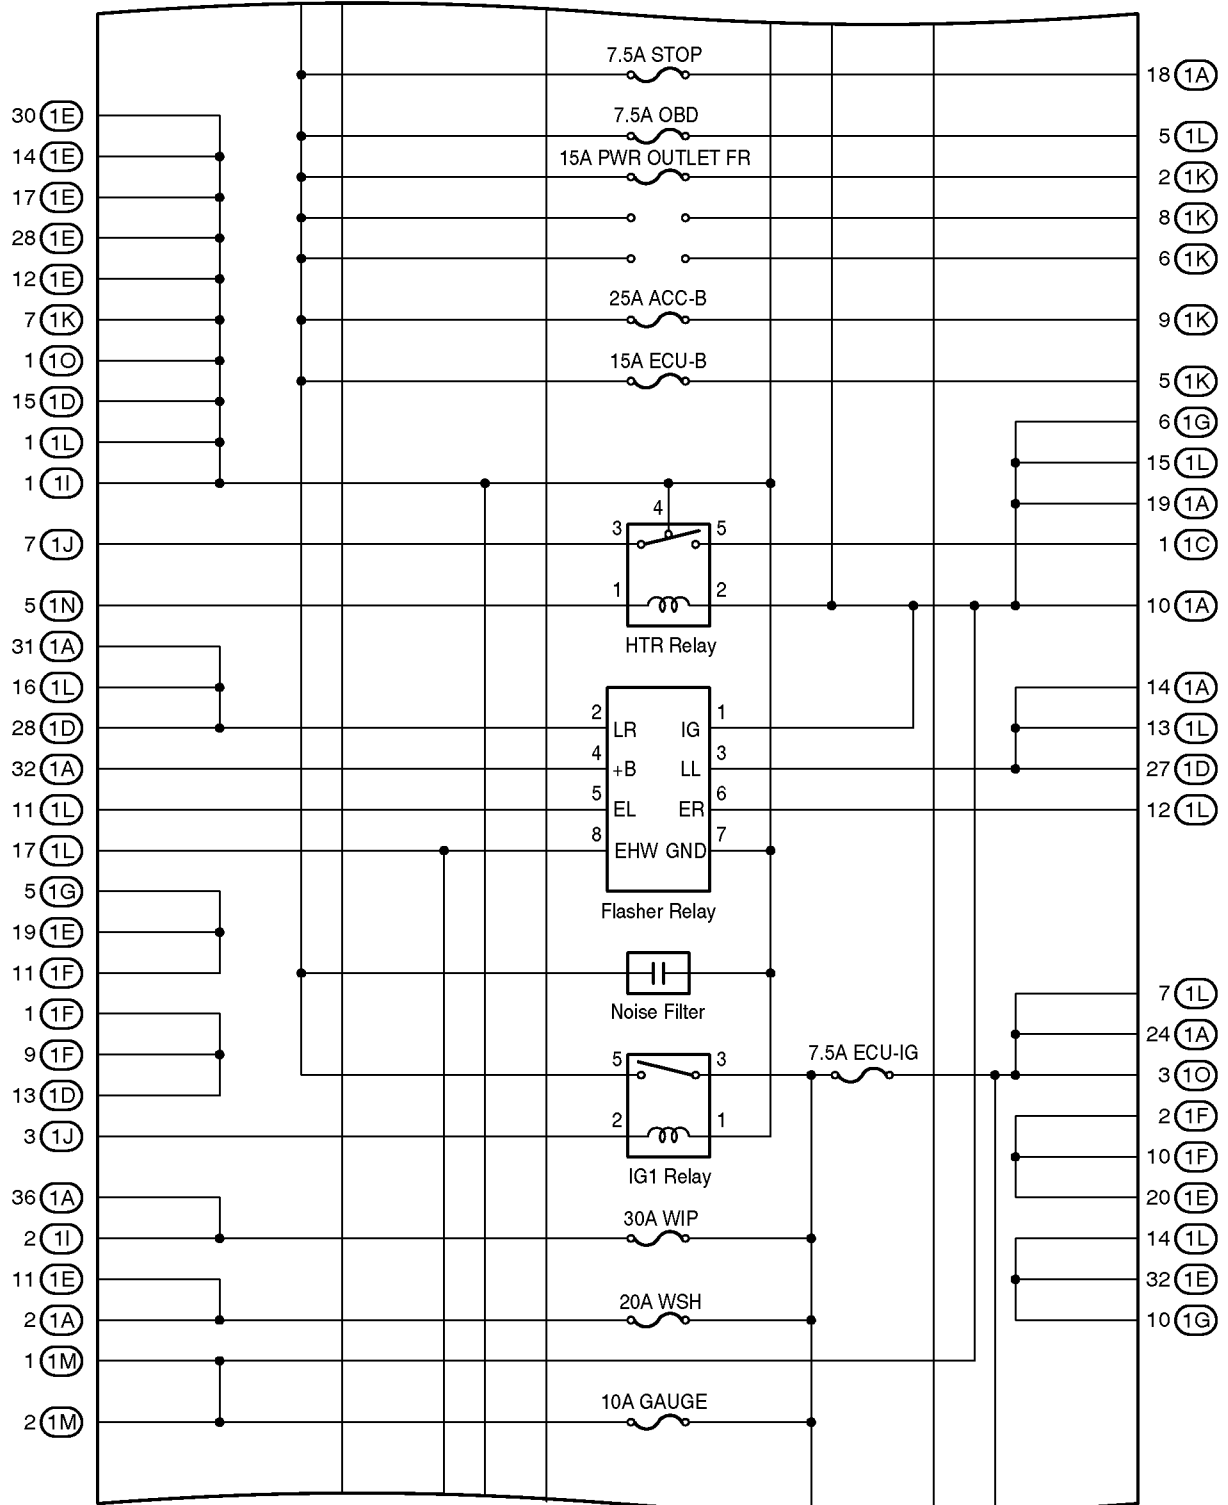


(Cont. Next Page)

## F RELAY LOCATIONS


### [Driver Side J/B Inner Circuit]

(Cont'd)

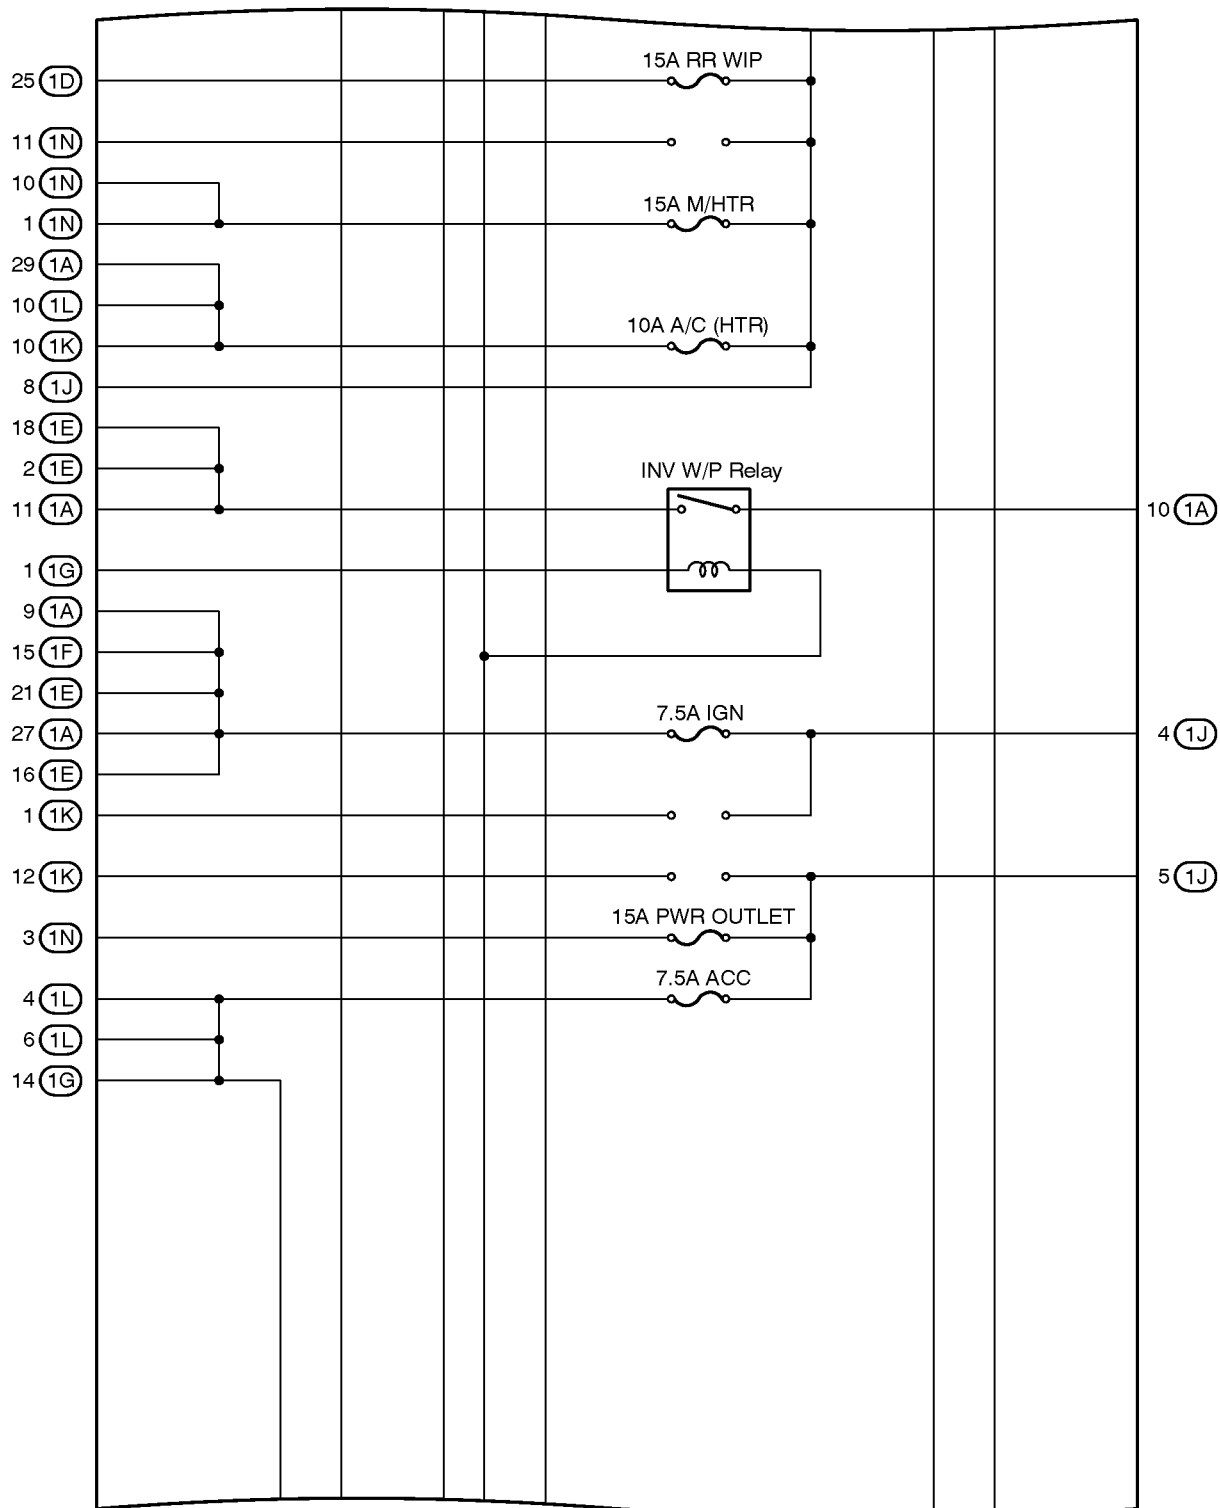

(Cont. Next Page)


(Cont'd)

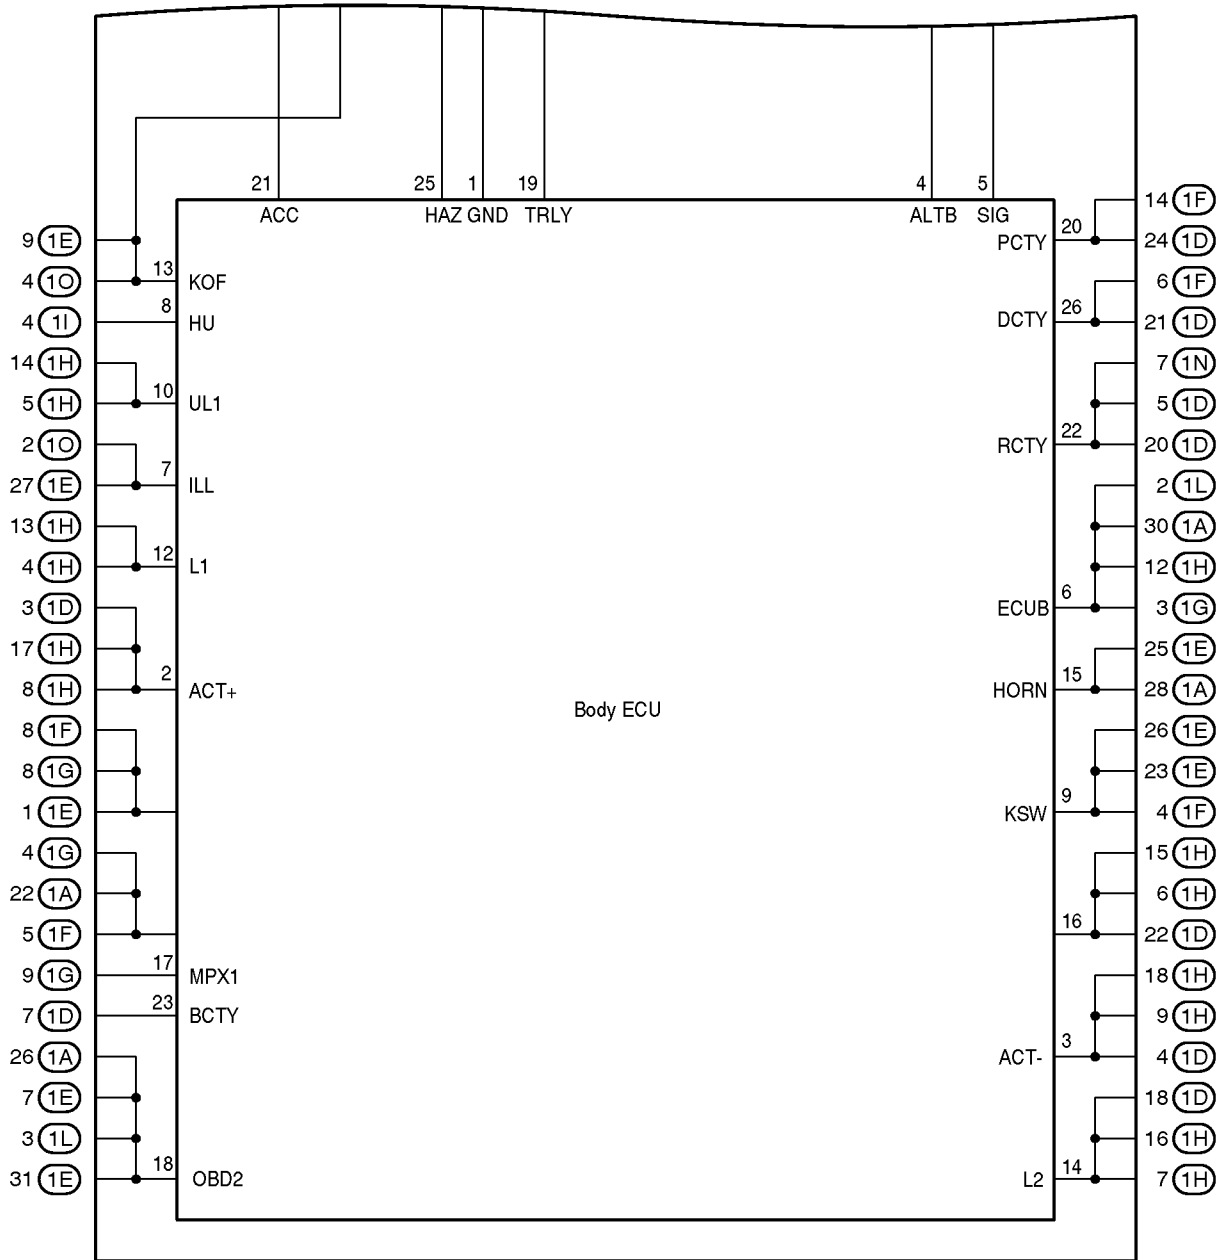



## F RELAY LOCATIONS


 : Center Connector No.1 **Behind the Combination Meter (See Page 20)**

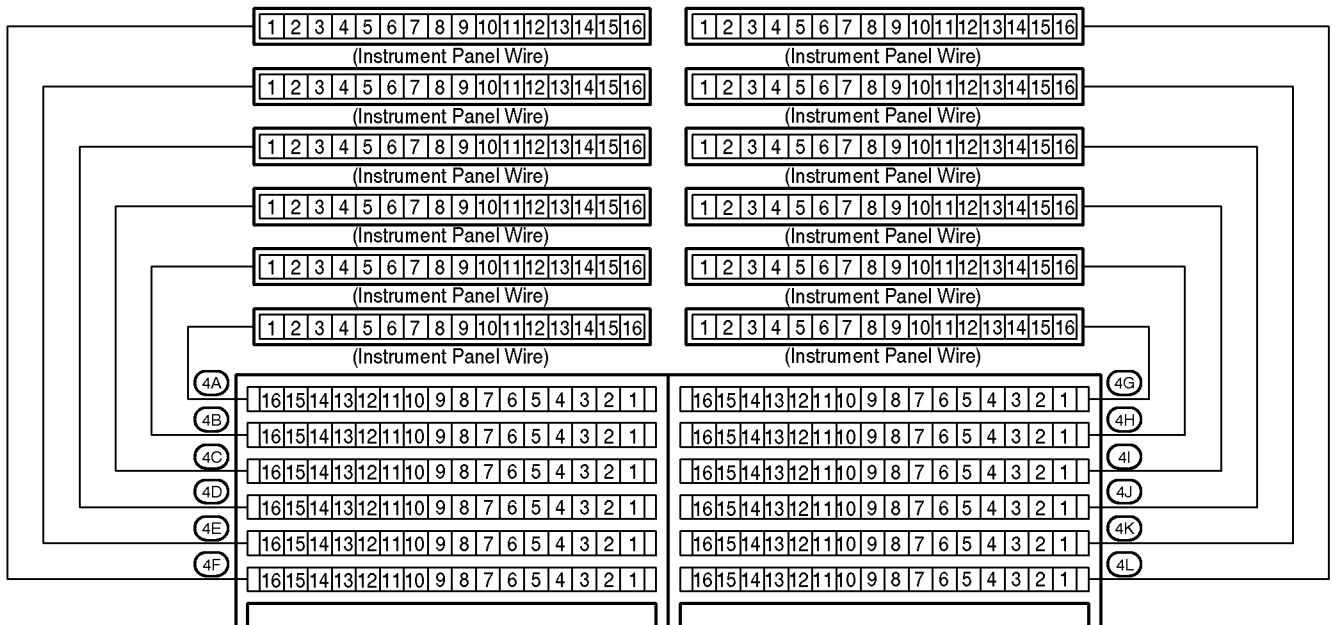



## F RELAY LOCATIONS

### [Center Connector No.1 Inner Circuit]

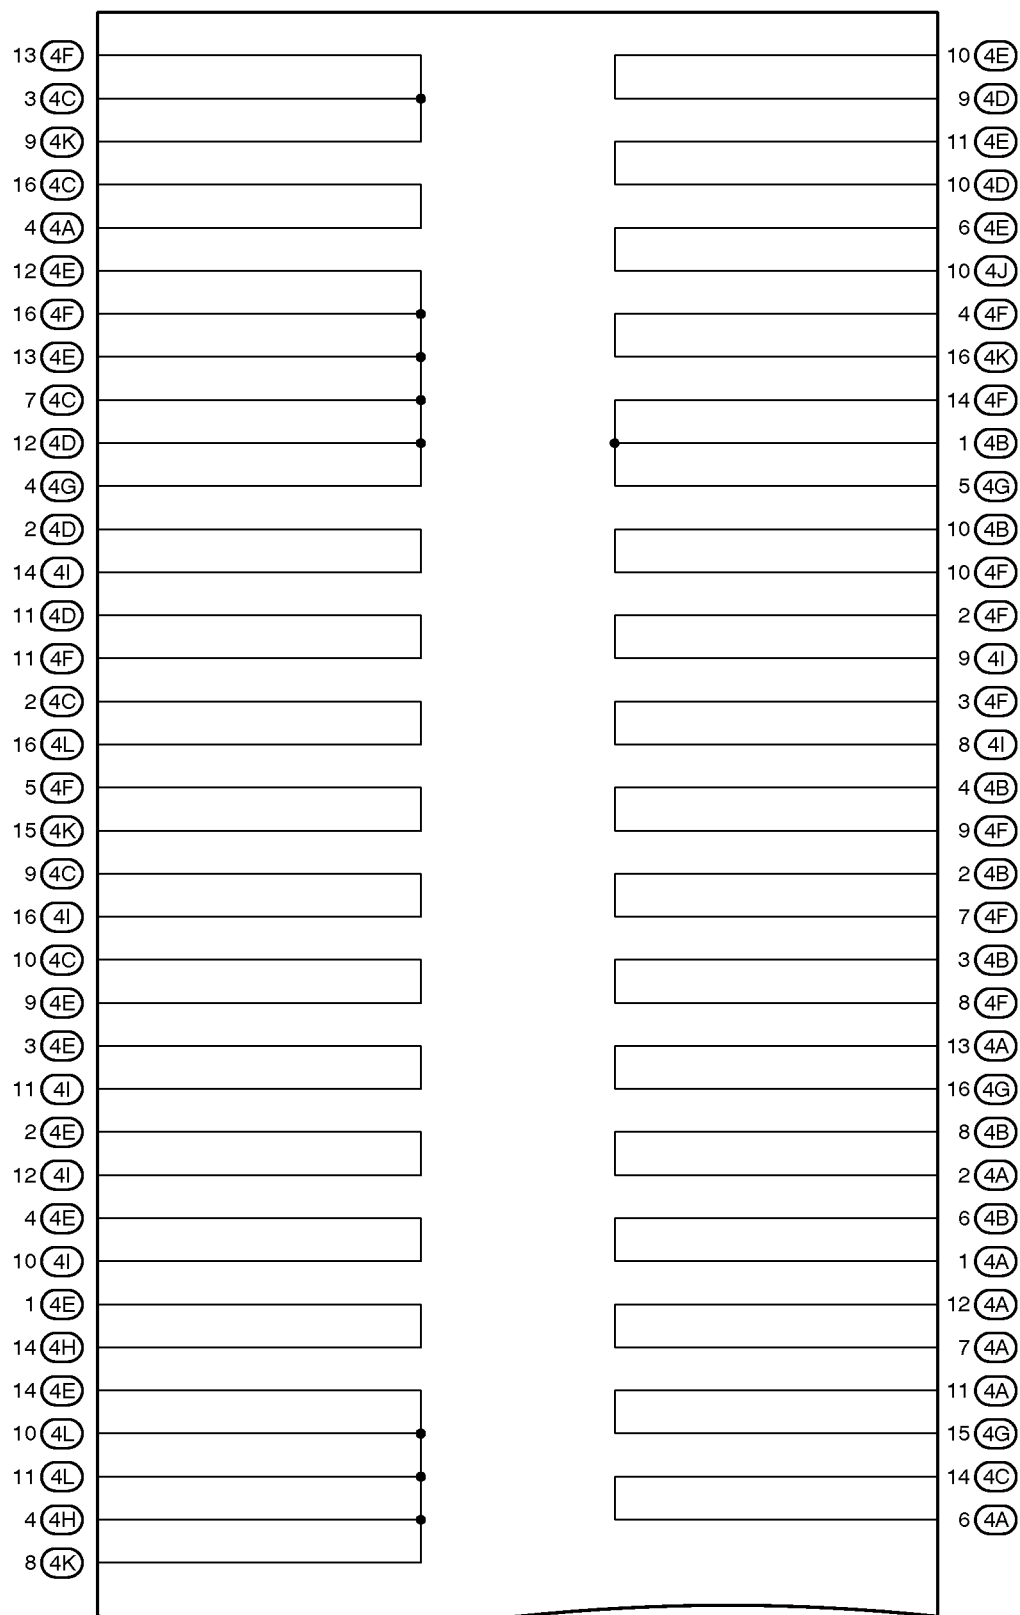


(Cont. Next Page)

(Cont'd)


5 (4C)			11 (4C)
15 (4A)			3 (4A)
10 (4A)			15 (4C)
16 (4H)			15 (4I)
5 (4D)			5 (4B)
15 (4J)			15 (4B)
6 (4D)			14 (4B)
14 (4J)			12 (4F)
7 (4D)			4 (4C)
13 (4J)			15 (4H)
8 (4D)			8 (4C)
12 (4J)			14 (4A)
4 (4D)			6 (4C)
16 (4J)			16 (4A)
5 (4E)			9 (4B)
11 (4J)			14 (4G)
1 (4D)			6 (4L)
13 (4G)			2 (4J)
13 (4D)			2 (4G)
12 (4L)			9 (4J)
5 (4H)			9 (4G)
3 (4G)			8 (4J)
3 (4H)			8 (4G)
14 (4D)			7 (4J)
3 (4J)			7 (4G)
3 (4D)			5 (4J)
13 (4I)			3 (4I)
1 (4C)			6 (4I)
6 (4F)			6 (4G)
15 (4F)			1 (4J)
6 (4K)			3 (4K)
7 (4K)			1 (4I)
1 (4F)			4 (4J)
13 (4H)			2 (4I)
			6 (4J)
1 (4G)			4 (4I)
4 (4K)			7 (4I)
5 (4K)			7 (4L)

## F RELAY LOCATIONS

 : Center Connector No.2 **Instrument Panel Brace RH (See Page 20)**

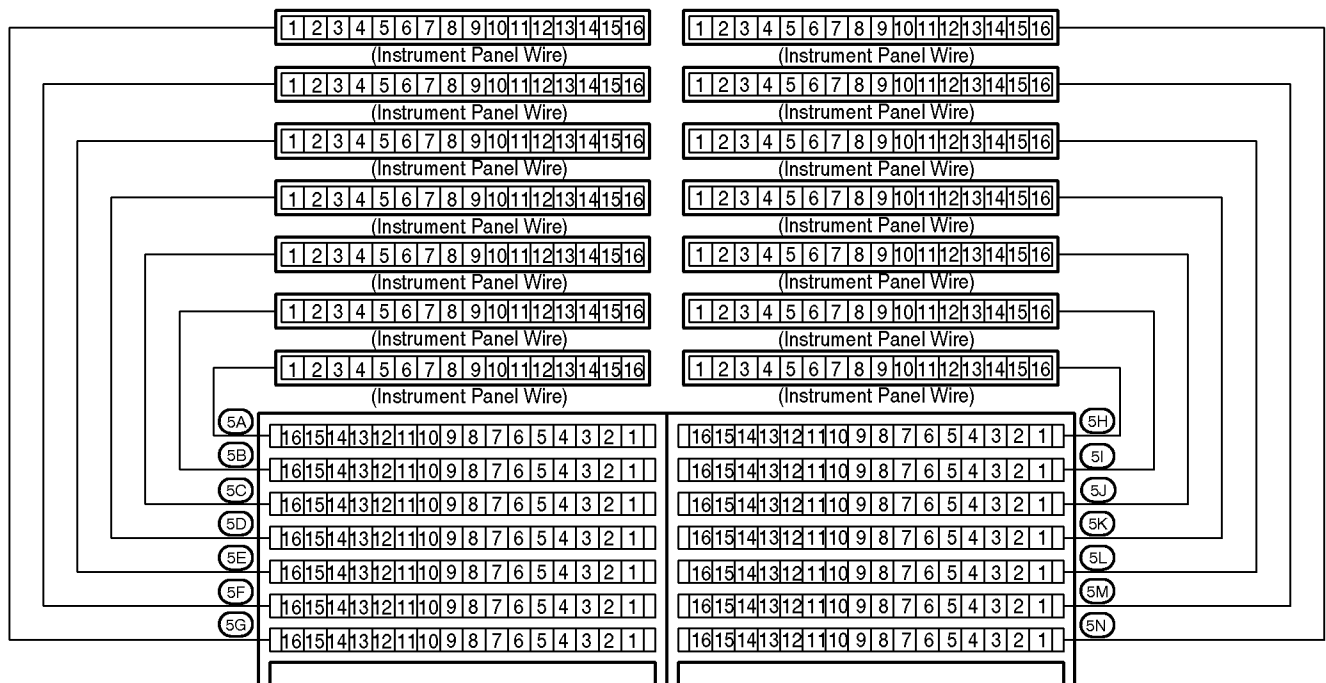

# [Center Connector No.2 Inner Circuit]

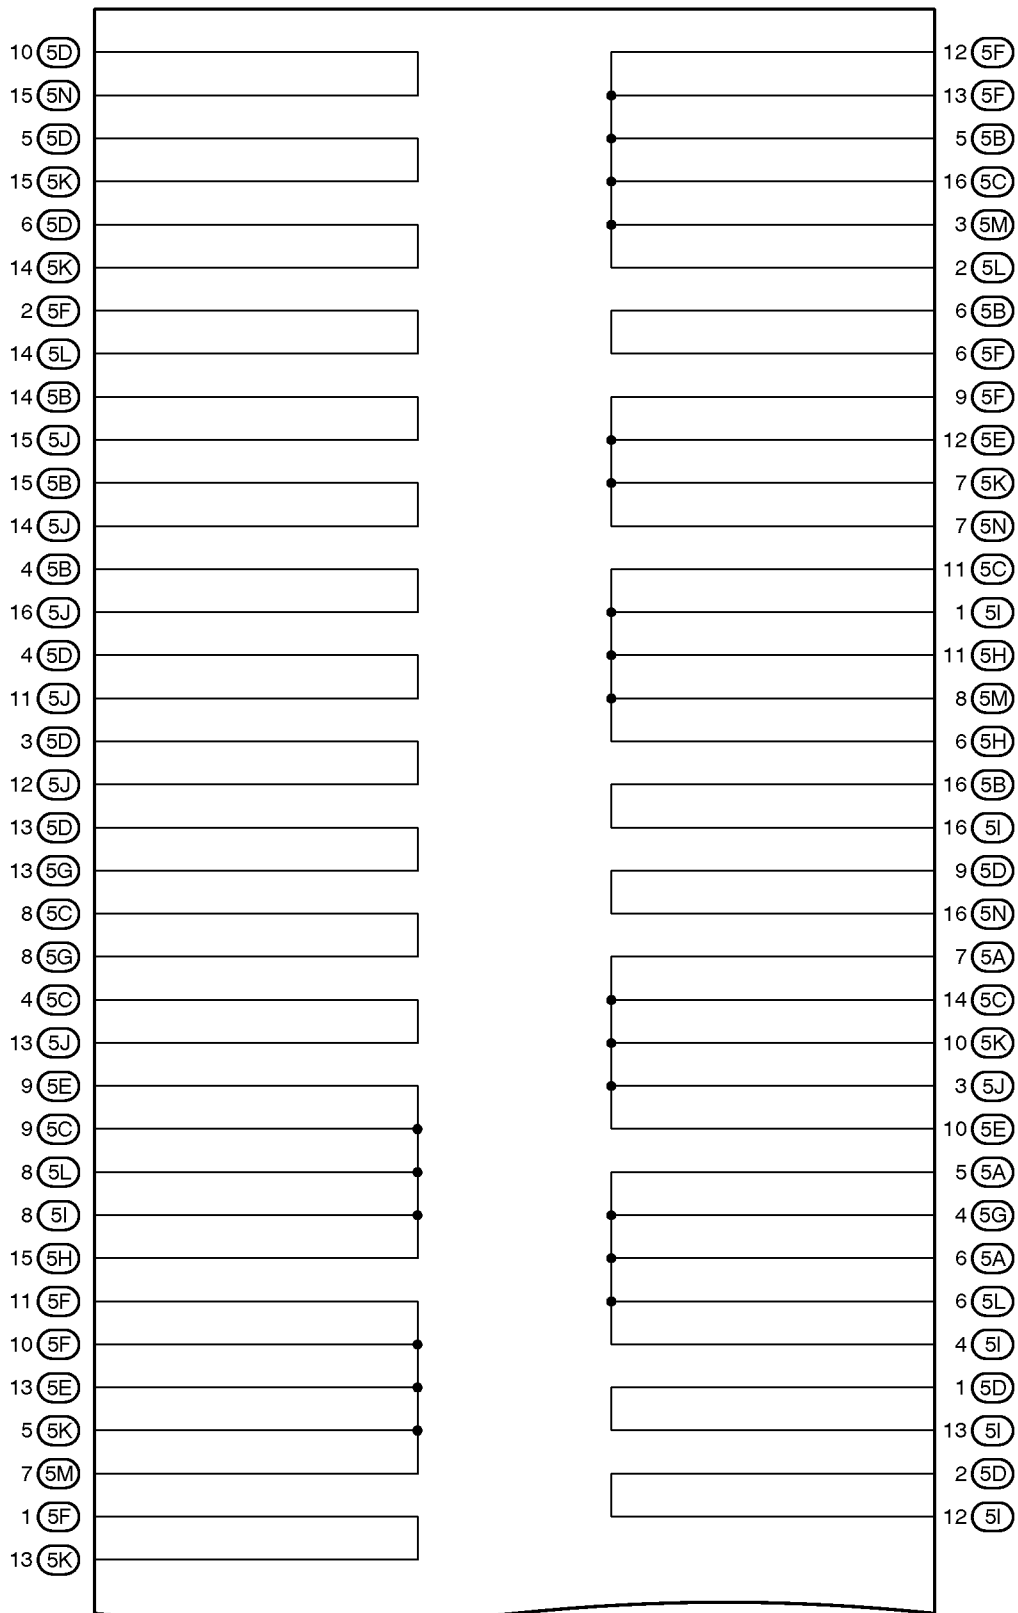


(Cont. Next Page)

## F RELAY LOCATIONS

### [Center Connector No.2 Inner Circuit]

(Cont'd)

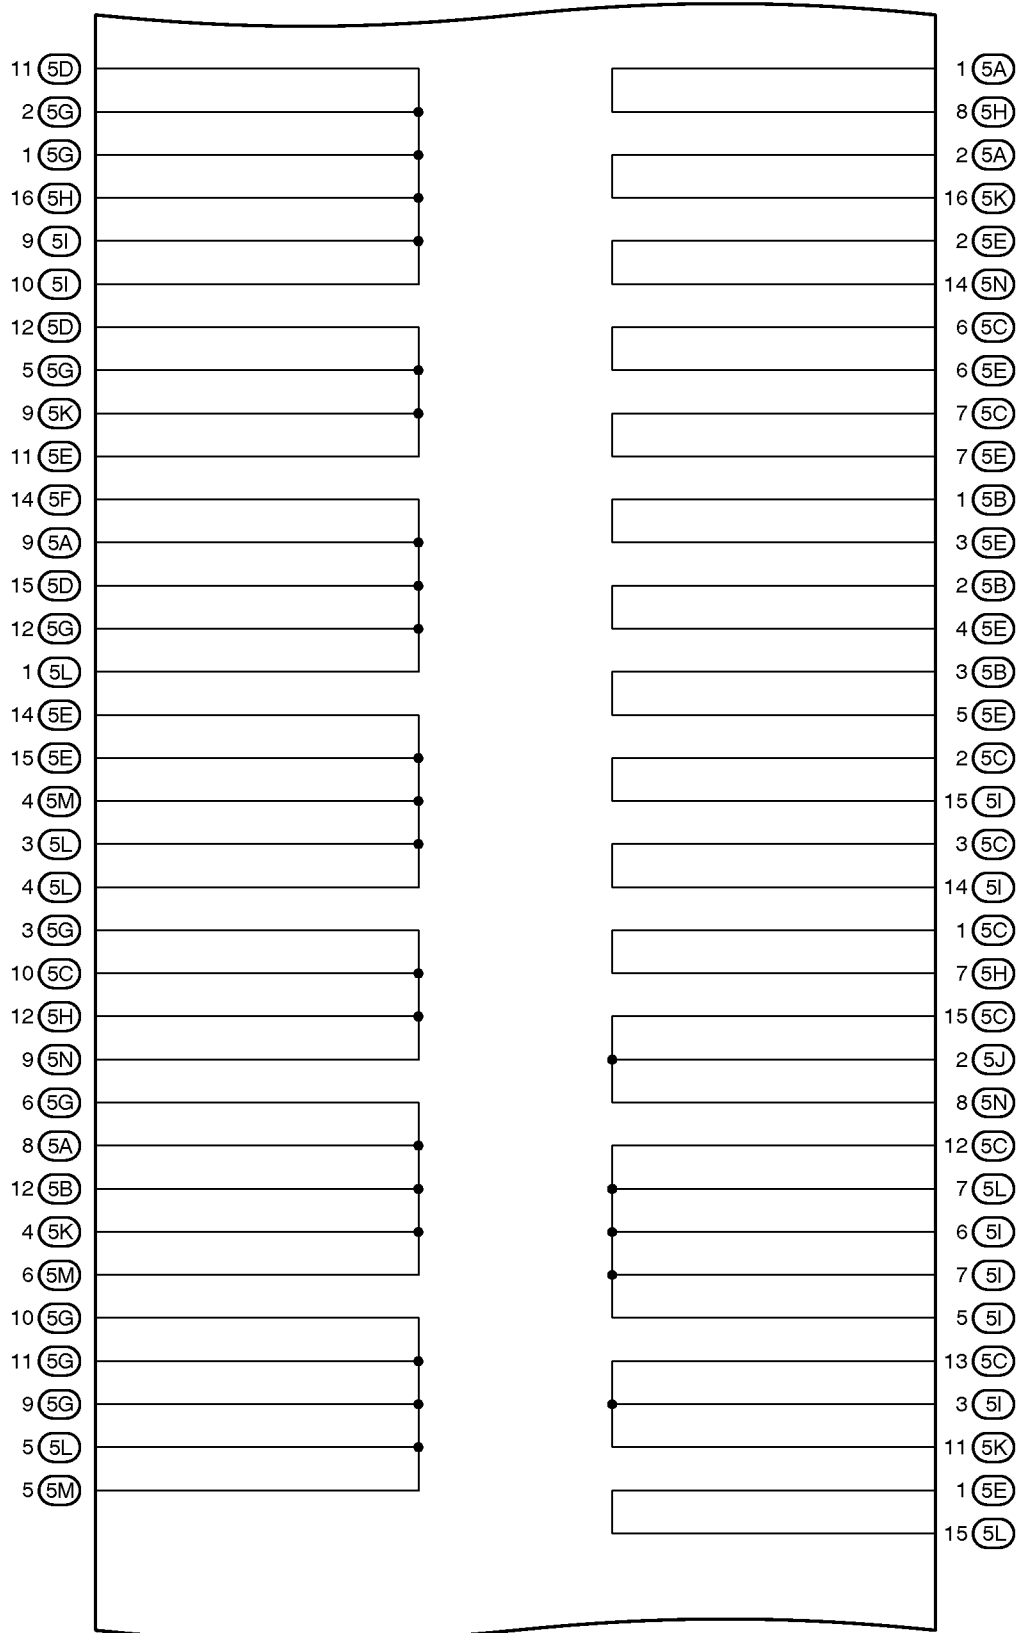

(Cont. Next Page)

(Cont'd)

9 (5J)			10 (5M)
10 (5L)			10 (5N)
10 (5J)			11 (5M)
11 (5L)			11 (5N)
6 (5J)			6 (5N)
4 (5H)		•	6 (5K)
7 (5J)			14 (5D)
5 (5H)			14 (5H)
5 (5J)			13 (5L)
3 (5H)			1 (5J)
4 (5J)		•	2 (5K)
2 (5H)			3 (5K)
8 (5J)			1 (5K)
8 (5K)		•	3 (5N)
12 (5M)			2 (5N)
13 (5H)			2 (5I)
9 (5M)		•	5 (5N)
9 (5L)			4 (5N)
2 (5M)			7 (5D)
1 (5H)			16 (5L)
8 (5D)			
16 (5M)			