

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Condenser Fan Motor	90980-10928	B19	Brake Actuator Resistor	82610-20080
A 2	ABS & BA & TRAC & VSC Actuator	90980-12297	C 1	Camshaft Position Sensor	90980-10947
A 3	ABS Speed Sensor Front LH	90980-11003	C 2	Camshaft Timing Oil Control Valve	90980-11162
A 4	ABS Speed Sensor Front RH		C 3	Circuit Breaker Sensor	90980-11898
A 5	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-10869	C 4	Compressor Assembly (Motor)	6189-1164
A 6	Ambient Temp. Sensor	90980-11070	C 5	Converter	90980-11034
A 7	A/C Control Assembly	90980-12150	C 6	Converter	90980-11963
A 8	A/C Control Assembly	90980-12149	C 7	Crankshaft Position Sensor	90980-12028
A 9	A/C Room Temp. Sensor	90980-11950	C 8	Center Speaker	90980-10860
A10	A/C Solar Sensor	90980-11918	C 9	Clock	90980-11013
A11	A/C Thermistor		C10	Combination Meter	90980-12153
A12	ACC Relay	82660-20340	C11	Combination SW	90980-12266
A13	Accel Position Sensor	90980-11858	C12	Combination SW	90980-12265
A14	Air Inlet Control Servo Motor	90980-11909	C13	Combination SW	90980-12358
A15	Air Mix Control Servo Motor		C14	Combination SW	90980-12359
A16	Air Vent Mode Control Servo Motor		C15	Curtain Shield Airbag Sensor LH	90980-12241
A17	Airbag Sensor Assembly	90980-12392	C16	Curtain Shield Airbag Sensor RH	
A18	Airbag Sensor Assembly	90980-12391	C17	Curtain Shield Airbag Squib LH	90980-12219
A19	Airbag Sensor Assembly	90980-12390	C18	Curtain Shield Airbag Squib RH	
A20	Airbag Squib (Front Passenger Airbag Assembly No.1)	90980-12224	C19	Coolant Heat Storage Tank Outlet Temp. Sensor	90980-11061
A21	Airbag Squib (Front Passenger Airbag Assembly No.2)	90980-12219	C20	Coolant Heat Storage Water Pump	90980-11156
A22	Airbag Squib (Steering Wheel Pad)	90980-12160	D 1	Data Link Connector 3	90980-11665
A23	Antenna Amplifier	90980-10871	D 2	Daytime Running Light Relay	90980-12034
A24	Automatic Light Control Sensor	90980-11107	D 3	Diode (Daytime Running Light)	90980-10962
A25	ABS Speed Sensor Rear LH	90980-11900	D 4	Door Control Receiver	90980-12366
A26	ABS Speed Sensor Rear RH		D 5	Door Courtesy Light Front LH	90980-11148
B 1	Brake Fluid Level Warning SW	90980-11207	D 6	Door Courtesy Light Front RH	
B 2	Blower Motor	90980-10214	D 7	Door Courtesy SW Front LH	90980-10871
B 3	Blower Motor Controller	90980-11667	D 8	Door Courtesy SW Front RH	
B 4	Blower Motor Controller	90980-11579	D 9	Door Courtesy SW Rear LH	
B 5	Body ECU	90980-12458	D10	Door Courtesy SW Rear RH	
B 6	Body ECU	90980-12329	D11	Door Lock Control SW Front RH	90980-10797
B 7	Body ECU	90980-12150	D12	Door Lock Motor Front LH	90980-12226
B 8	Brake Pedal Stroke Sensor	90980-11150		Door Unlock Detection SW Front LH	
B 9	Battery Blower Motor	90980-10916	D13	Door Lock Motor Front RH	
B10	Battery Blower Motor Controller	90980-11676		Door Unlock Detection SW Front RH	
B11	Battery ECU	90980-12203	D14	Door Lock Motor Rear LH	
B12	Battery ECU	90980-11915		Door Unlock Detection SW Rear LH	
B13	Battery ECU	90980-12155	D15	Door Lock Motor Rear RH	
B14	Battery Fan Relay	82660-20340		Door Unlock Detection SW Rear RH	
B15	Buckle SW Front LH	90980-11918	D16	Door Oscillator Front LH (w/ Sensor)	90980-12217
B16	Buckle SW Front RH	90980-10908	D17	Door Oscillator Front RH (w/ Sensor)	
B17	Brake Master Stroke Simulator Cylinder Assembly	90980-11003	D18	Diode (Rear Wiper)	90980-10962
B18	Brake Control Power Supply	82824-50190	E 1	Engine Coolant Temp. Sensor	90980-10735
			E 3	Engine Hood Courtesy SW	90980-11003

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
E 4	Engine Control Module	90980-12144	H17	Hybrid Vehicle Control ECU	90980-12430
E 5	Engine Control Module	90980-12145	H18	Height Control Sensor	90980-11860
E 6	Engine Control Module	90980-12142	H19	High Mounted Stop Light	90980-11967
E 7	Engine Control Module	90980-12146	H20	Hybrid Vehicle Battery	82675-47060
E 8	Electrical Key Antenna (Driver's Side)	90980-12382	H21	Hybrid Vehicle Battery	82675-47070
E 9	Electrical Key Antenna (Front Passenger's Side)		I 1	Ignition Coil and Igniter No.1	90980-11885
E10	Electrical Key Antenna (Luggage Compartment Door)	90980-10824	I 2	Ignition Coil and Igniter No.2	
			I 3	Ignition Coil and Igniter No.3	
F 1	Front Airbag Sensor LH	90980-11856	I 4	Ignition Coil and Igniter No.4	
F 2	Front Airbag Sensor RH		I 5	Injector No.1	90980-11875
F 3	Front Fog Light LH	90980-11096	I 6	Injector No.2	
F 4	Front Fog Light RH		I 7	Injector No.3	
F 5	Front Side Marker Light LH	90980-11156	I 8	Injector No.4	
F 6	Front Side Marker Light RH		I 9	Inverter	90980-11148
F 7	Front Turn Signal Light LH	90980-11019	I10	Inverter	90980-12153
F 8	Front Turn Signal Light RH		I11	Inverter	90980-10988
F 9	Front Washer Motor		I12	Inverter	90980-12465
F10	Front Wiper Motor	90980-11599	I13	Inverter	90980-12464
F11	Front Passenger Seat Belt Warning Light	90980-12012	I14	Inverter	90980-12434
F12	Front Door Speaker LH	90980-10935	I15	Inverter	90980-12433
F13	Front Door Speaker RH		I16	Inverter	90980-11147
F14	Fuel Pump	82824-47160	I17	Inter Lock SW	90980-11918
	Fuel Sender		I18	Interior Light	81366-68010
F15	Fusible Link Block	90980-11775	J 1	Junction Connector	90980-10803
F16	Fusible Link Block	90980-10916	J 2	Junction Connector	
G 1	Gateway ECU	90980-12404	J 3	Junction Connector	
G 2	Glove Box Light	90980-11918	J 4	Junction Connector	
G 3	Garage Door Opener	82824-47180	J 5	Junction Connector	90980-10830
	Inner Mirror		J 6	Junction Connector	90980-10803
H 1	Headlight Beam Level Control Actuator LH	90980-11016	J 7	Junction Connector	90980-11661
H 2	Headlight Beam Level Control Actuator RH		J 8	Junction Connector	
H 3	Headlight Assembly LH	90980-11255	J 9	Junction Connector	90980-11915
H 4	Headlight Assembly LH	90980-10869	J10	Junction Connector	
H 5	Headlight Assembly RH	90980-11255	J11	Junction Connector	90980-10803
H 6	Headlight Assembly RH	90980-10869	J12	Junction Connector	90980-11661
H 7	Headlight LH	90980-11314	J13	Junction Connector	
H 8	Headlight RH		J14	Junction Connector	90980-11915
H 9	Horn (High)	90980-10619	J15	Junction Connector	
H10	Horn (Low)		J16	Junction Connector	90980-10803
H11	Hazard SW	90980-12091	J17	Junction Connector	
	ODO/TRIP SW		J18	Junction Connector	90980-11915
H12	Headlight Beam Level Control ECU	90980-12200	J19	Junction Connector	
H13	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	J20	Junction Connector	90980-11661
H14	Hybrid Vehicle Control ECU	90980-12431	J21	Junction Connector	
H15	Hybrid Vehicle Control ECU	90980-12429			
H16	Hybrid Vehicle Control ECU	90980-12428			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J22	Junction Connector	90980-10803	O 2	Option Connector (Glass Breakage Sensor)	90980-10908
J23	Junction Connector		O 3	Overhead J/B	90980-12183
J24	Junction Connector		P 1	Pressure SW	90980-10943
J25	Junction Connector		P 2	Parking Brake SW	90980-10871
J26	Junction Connector	90980-11529	P 3	Power Outlet No.1	90980-10760
J27	Junction Connector		P 4	Power Outlet No.2	
J30	Junction Connector	90980-10803	P 5	Power Outlet Relay	82660-20340
J31	Junction Connector	90980-11915	P 6	Power Source Control ECU	90980-12388
J32	Junction Connector	90980-10803	P 7	Power Steering ECU	90980-12300
J33	Junction Connector	90980-11915	P 8	Power Steering ECU	90980-12290
J34	Junction Connector	90980-10799	P 9	Power Steering Motor	90980-12299
J35	Junction Connector	90980-10803	P10	Power Steering Torque Sensor	90980-12221
K 1	Knock Sensor (Bank 1)	90980-11875	P11	Power SW	90980-11989
K 2	Key Slot	90980-12366	P12	PTC Heater	90980-11136
K 3	Key Slot	90980-12092	P13	PTC Heater	90980-10903
L 1	License Plate Light LH	90980-11148	P14	Power Window Control SW Front RH	90980-10789
L 2	License Plate Light RH		P15	Power Window Control SW Rear LH	
L 3	Luggage Compartment Courtesy SW	90980-10795	P16	Power Window Control SW Rear RH	
	Luggage Compartment Door Opener Motor		P17	Power Window Master SW	90980-12122
L 4	Luggage Compartment Door Lock SW	90980-12212	P18	Power Window Motor Front LH	90980-10797
	Luggage Compartment Door Opener SW		P19	Power Window Motor Front RH	
L 5	Luggage Compartment Light	90980-10860	P20	Power Window Motor Rear LH	
L 6	Luggage Oscillator (Inner)	90980-12366	P21	Power Window Motor Rear RH	
L 7	Luggage Oscillator (Outer)	90980-12217	P22	Pretensioner LH	90980-12253
M 1	Mass Air Flow Meter	90980-11317	P23	Pretensioner RH	
M 2	Motor Generator No.1	90980-12432	R 1	Radiator Fan Motor	90980-10928
M 3	Motor Generator No.1		R 2	Rear Washer Motor	90980-11051
M 4	Motor Generator No.1		R 3	Radio and Player	90980-10997
M 5	Motor Generator No.1	90980-11034	R 4	Radio and Player	90980-10996
M 6	Motor Generator No.2	90980-12432	R 5	Radio and Player	90980-12259
M 7	Motor Generator No.2		R 6	Radio and Player	90980-12038
M 8	Motor Generator No.2		R 7	Rheostat	90980-11989
M 9	Motor Generator No.2	90980-11034	R 8	Room Oscillator	90980-12366
M10	Motor Generator No.2		R 9	Rear Combination Light LH	90980-11011
M11	Main SW	90980-11986	R10	Rear Combination Light RH	
M12	Mirror Heater Relay	82660-20340	R11	Rear Door Speaker LH	90980-10935
M13	Multi-Display	90980-12203	R12	Rear Door Speaker RH	
M14	Multi-Display	90980-12410	R13	Rear Window Defogger	90980-10914
N 1	Noise Filter (Ignition)	90980-10843	R14	Rear Window Defogger	90980-10913
N 2	Navigation ECU	90980-11973	R15	Rear Window Defogger	90980-10914
N 3	Navigation ECU	90980-11923	R16	Rear Window Defogger	90980-10913
N 4	Navigation ECU	90980-12221	R17	Rear Wiper Motor	90980-10795
N 5	Noise Filter (High Mounted Stop Light)	90980-10916	R18	Rear Wiper Relay	90980-10797
N 6	Noise Filter (Rear Window Defogger)				
N 7	Noise Filter (Rear Window Defogger)				
O 1	Oil Pressure SW	90980-11363			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
R19	Mirror Heater LH	90980-12189	S25	System Main Relay	82675-28380
	Remote Control Mirror LH		S26	System Main Relay	
R20	Mirror Heater RH		S27	Short Connector (Water Pump)	90980-11162
	Remote Control Mirror RH		S28	Short Connector (Water Pump)	90980-11168
R21	Remote Control Mirror SW	90980-11657	T 1	Theft Deterrent Horn	90980-10619
S 1	Shift Control Actuator	90980-12446	T 2	Throttle Control Motor	90980-11162
S 2	Short Connector	90980-11002	T 3	Throttle Position Sensor	90980-10711
S 3	Short Connector	90980-11003	T 4	Transmission Control ECU	90980-12203
S 4	Shift Lever Position Sensor	90980-11989	T 5	Transponder Key Computer	90980-12404
S 5	Shift Lever Position Sensor	90980-12303	T 6	Tweeter Front LH	90980-12304
S 6	Skid Control Buzzer	90980-10906	T 7	Tweeter Front RH	
S 7	Skid Control ECU	90980-12144	T 8	Tweeter Rear LH	
S 8	Skid Control ECU	90980-12145	T 9	Tweeter Rear RH	
S 9	Skid Control ECU	90980-12146	V 1	VSV (EVAP)	90980-11156
S10	Skid Control ECU	90980-12142	V 2	Vanity Light LH	90980-10935
S11	Smart Key ECU	90980-12388	V 3	Vanity Light RH	
S12	Smart Key System Cancel SW	90980-10825	V 4	Vanity Light SW LH	90980-11918
S13	Steering Sensor	90980-12162	V 5	Vanity Light SW RH	
S14	Stereo Component Amplifier	90980-10821	V 6	Vapor Pressure Sensor	90980-11143
S15	Stereo Component Amplifier	90980-12200	V 7	VSV (Canister Closed Valve)	90980-11156
S16	Stop Light SW	90980-11118	V 8	VSV (Purge Flow Switching Valve)	90980-11859
S17	Seat Position Airbag Sensor	90980-10942	W 1	Water Pump Motor (A/C)	90980-10887
S18	Side Airbag Sensor LH	90980-12241	W 3	Water Pump Motor (Inverter)	90980-11162
S19	Side Airbag Sensor RH		W 4	Water Temp. SW	90980-11235
S20	Side Airbag Squib LH	90980-12452	W 5	Water Valve	90980-10988
S21	Side Airbag Squib RH		W 6	Wireless Door Lock Buzzer	90980-11142
S22	System Main Relay	90980-10795	Y 1	Yaw Rate Sensor	90980-11904
S23	System Main Relay	90980-09938			
S24	System Main Relay				