





Ignition

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E4	49	I2	47	J2	47
F15	28, 53	I3	47	N1	47
I1	47	I4	47	P6	51

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3I	24	
3K		
3M	23	Frame Wire and Engine Room J/B (Engine Compartment Left)
4I	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4J		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	56	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	58	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
BE1	60	Frame Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
ED	56	Engine Block
EF	56	Left Side of the Suspension Tower

