




Headlight

B 5(A), B 6(B), B 7(C)
Body ECU

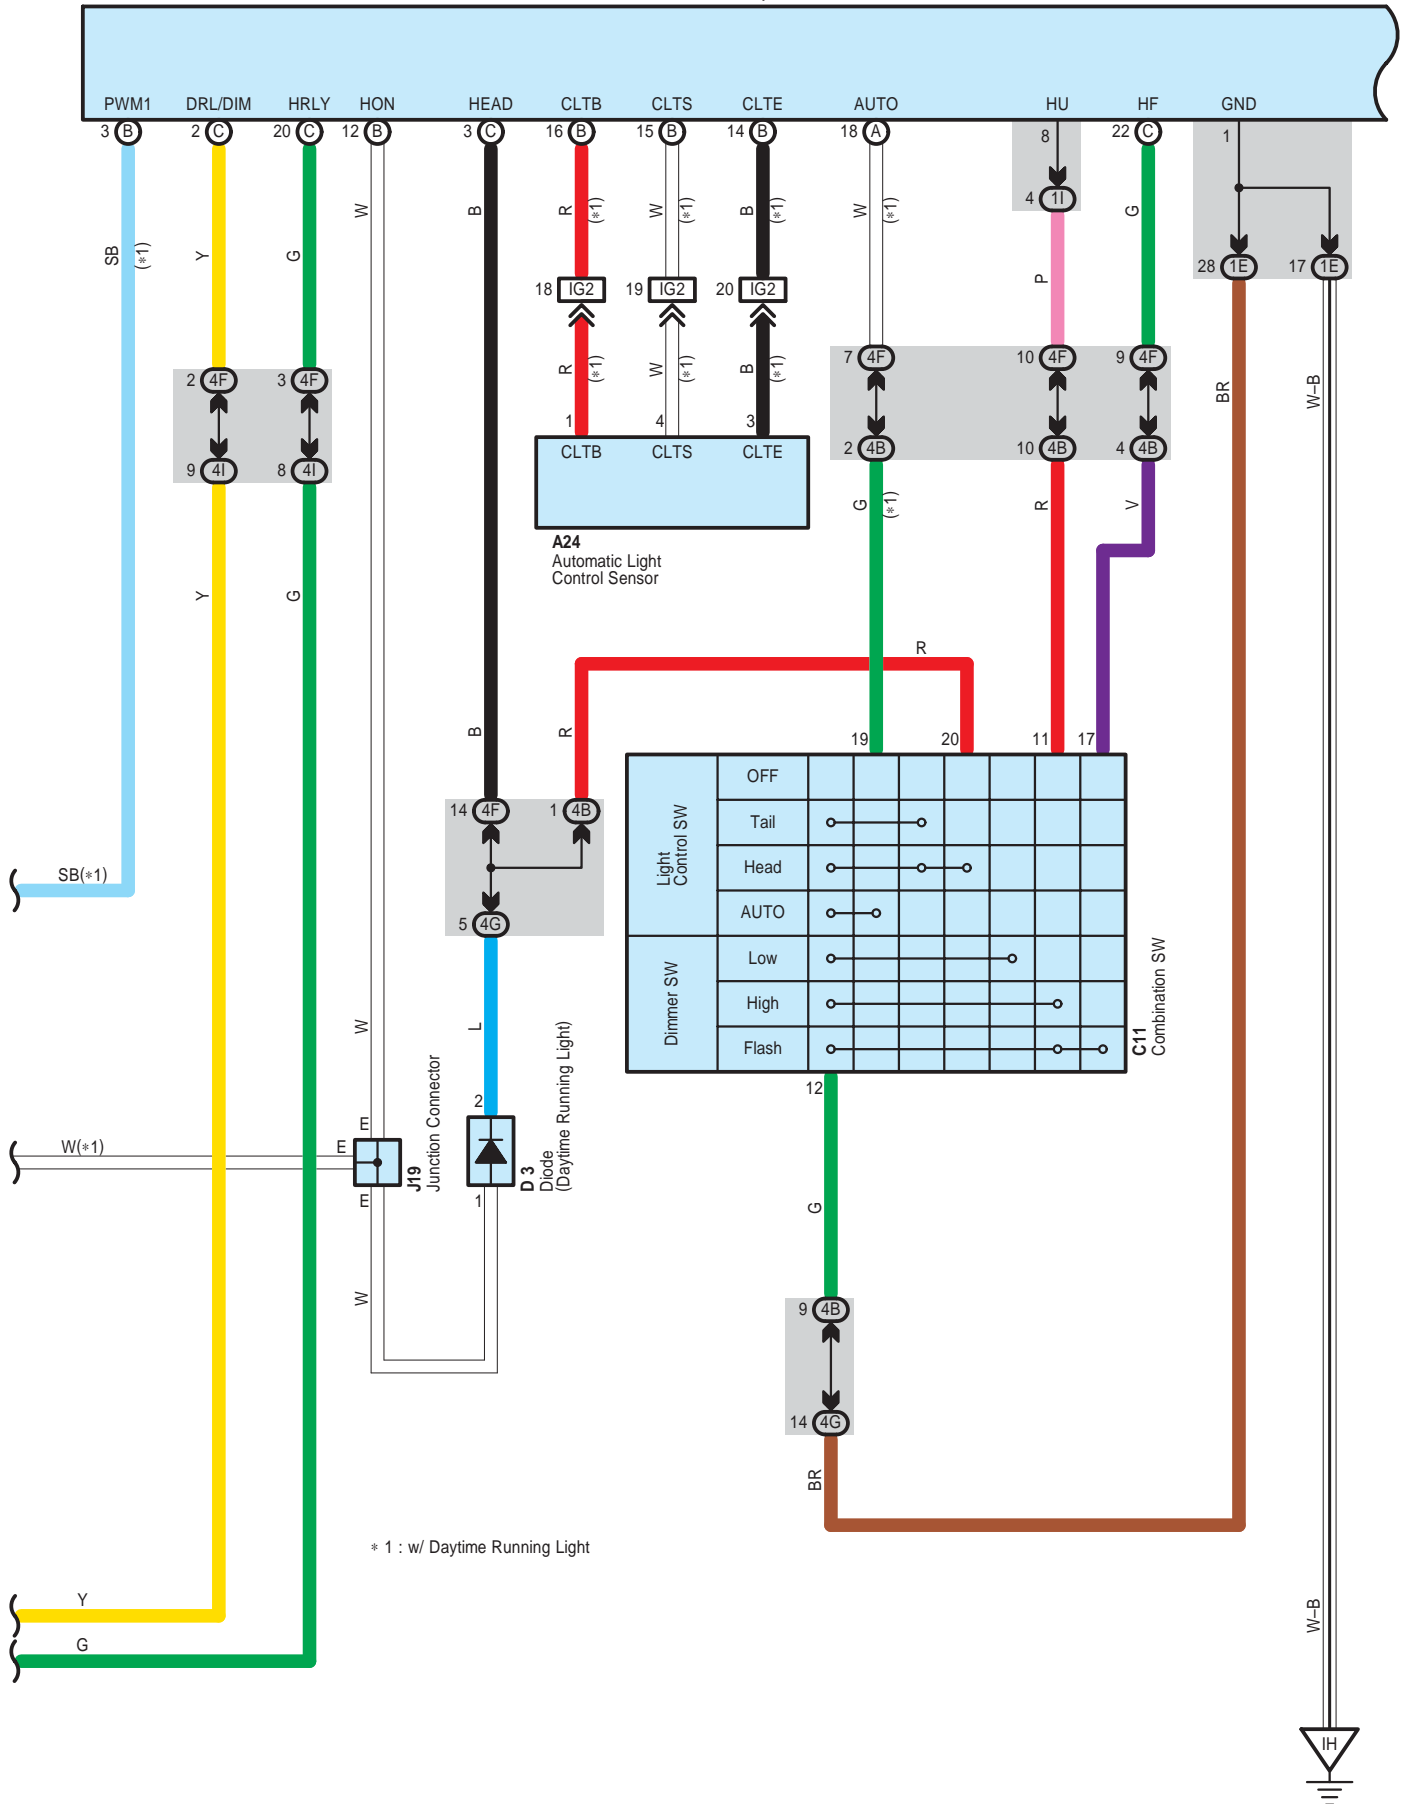

B 5(A), B 6(B), B 7(C)
Body ECU

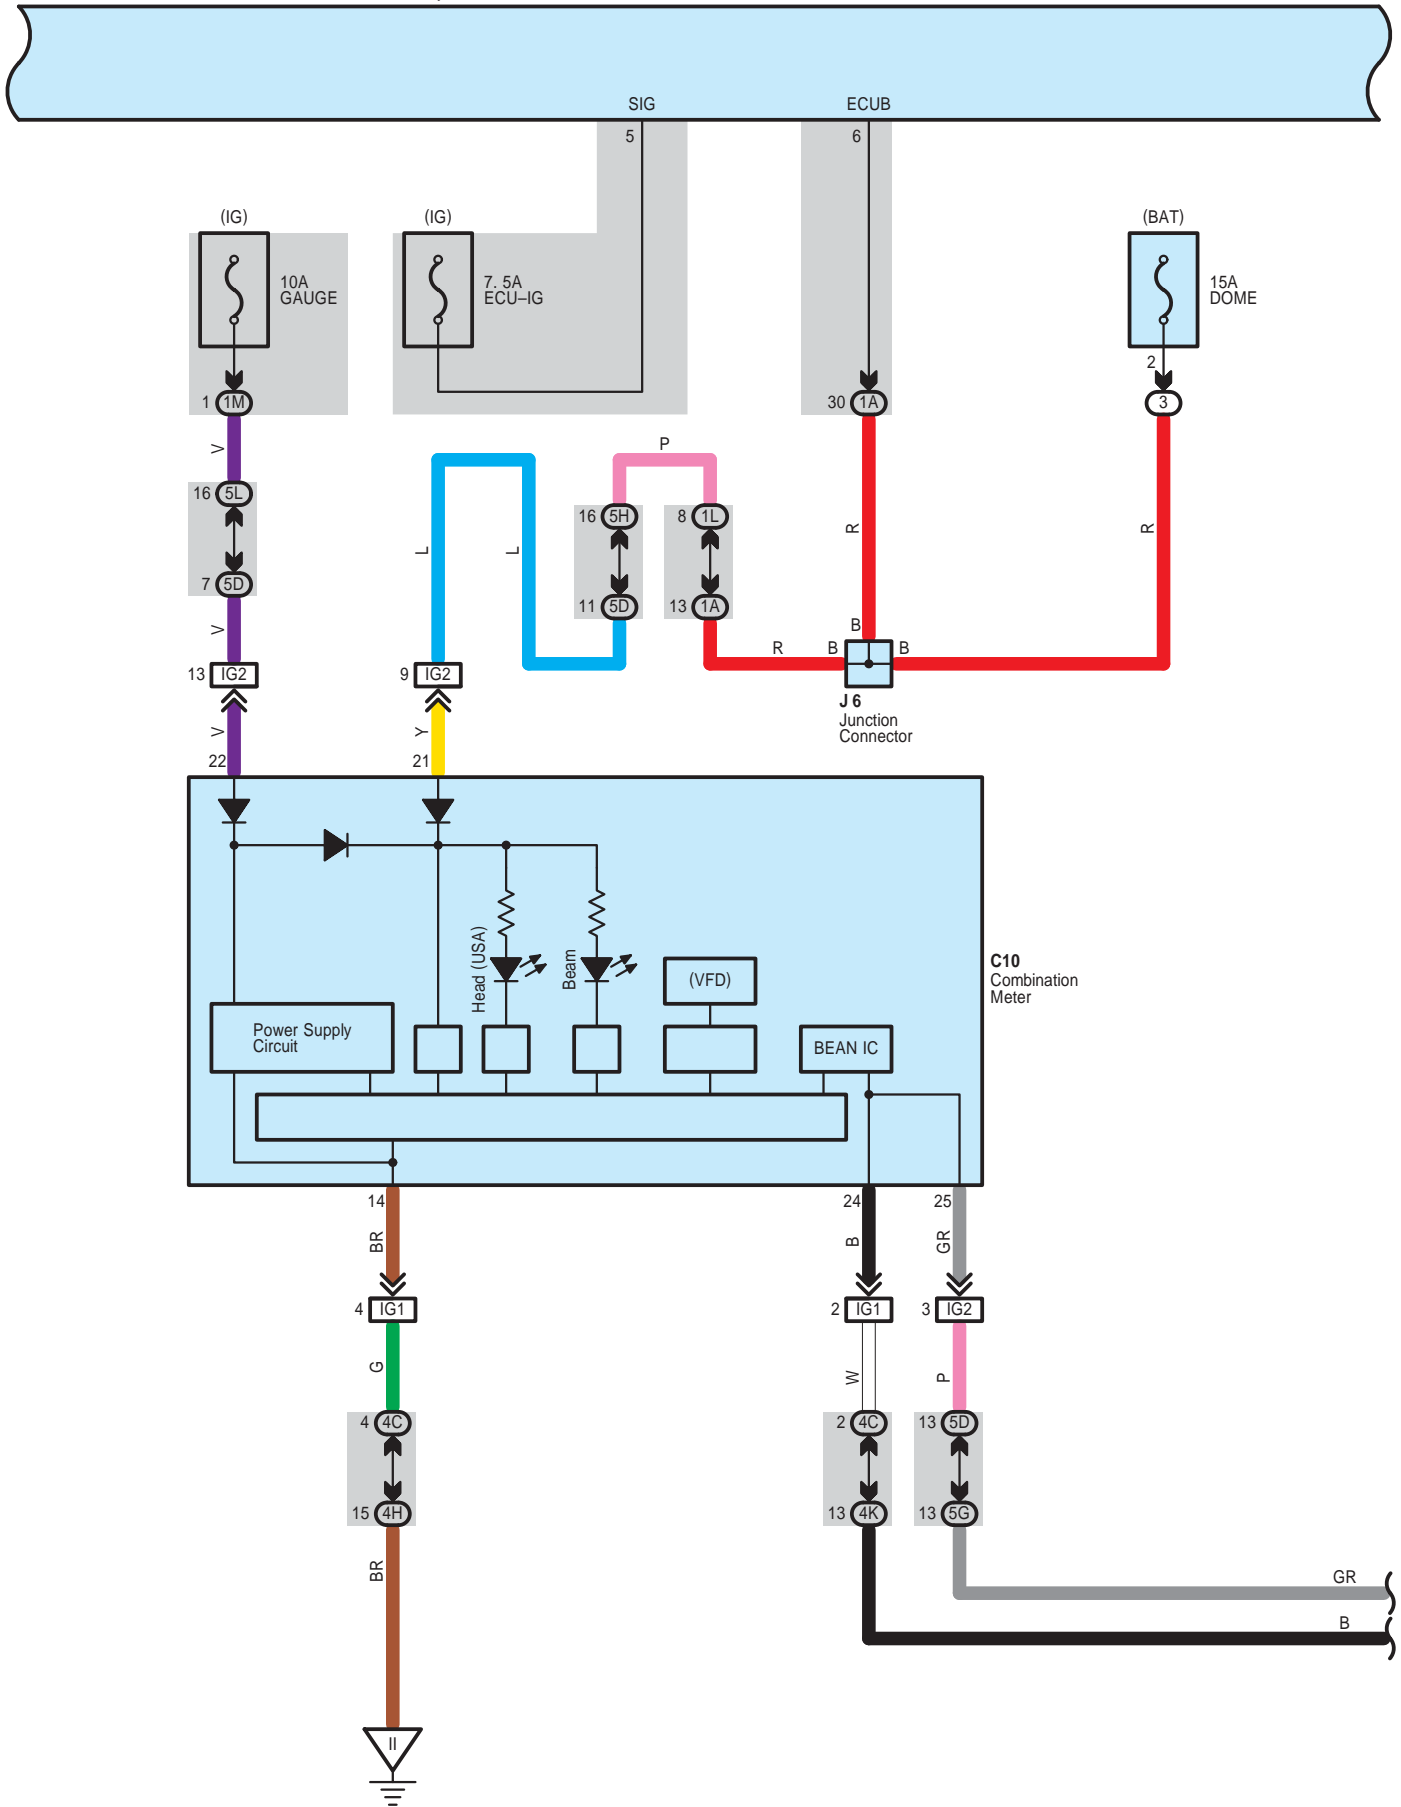

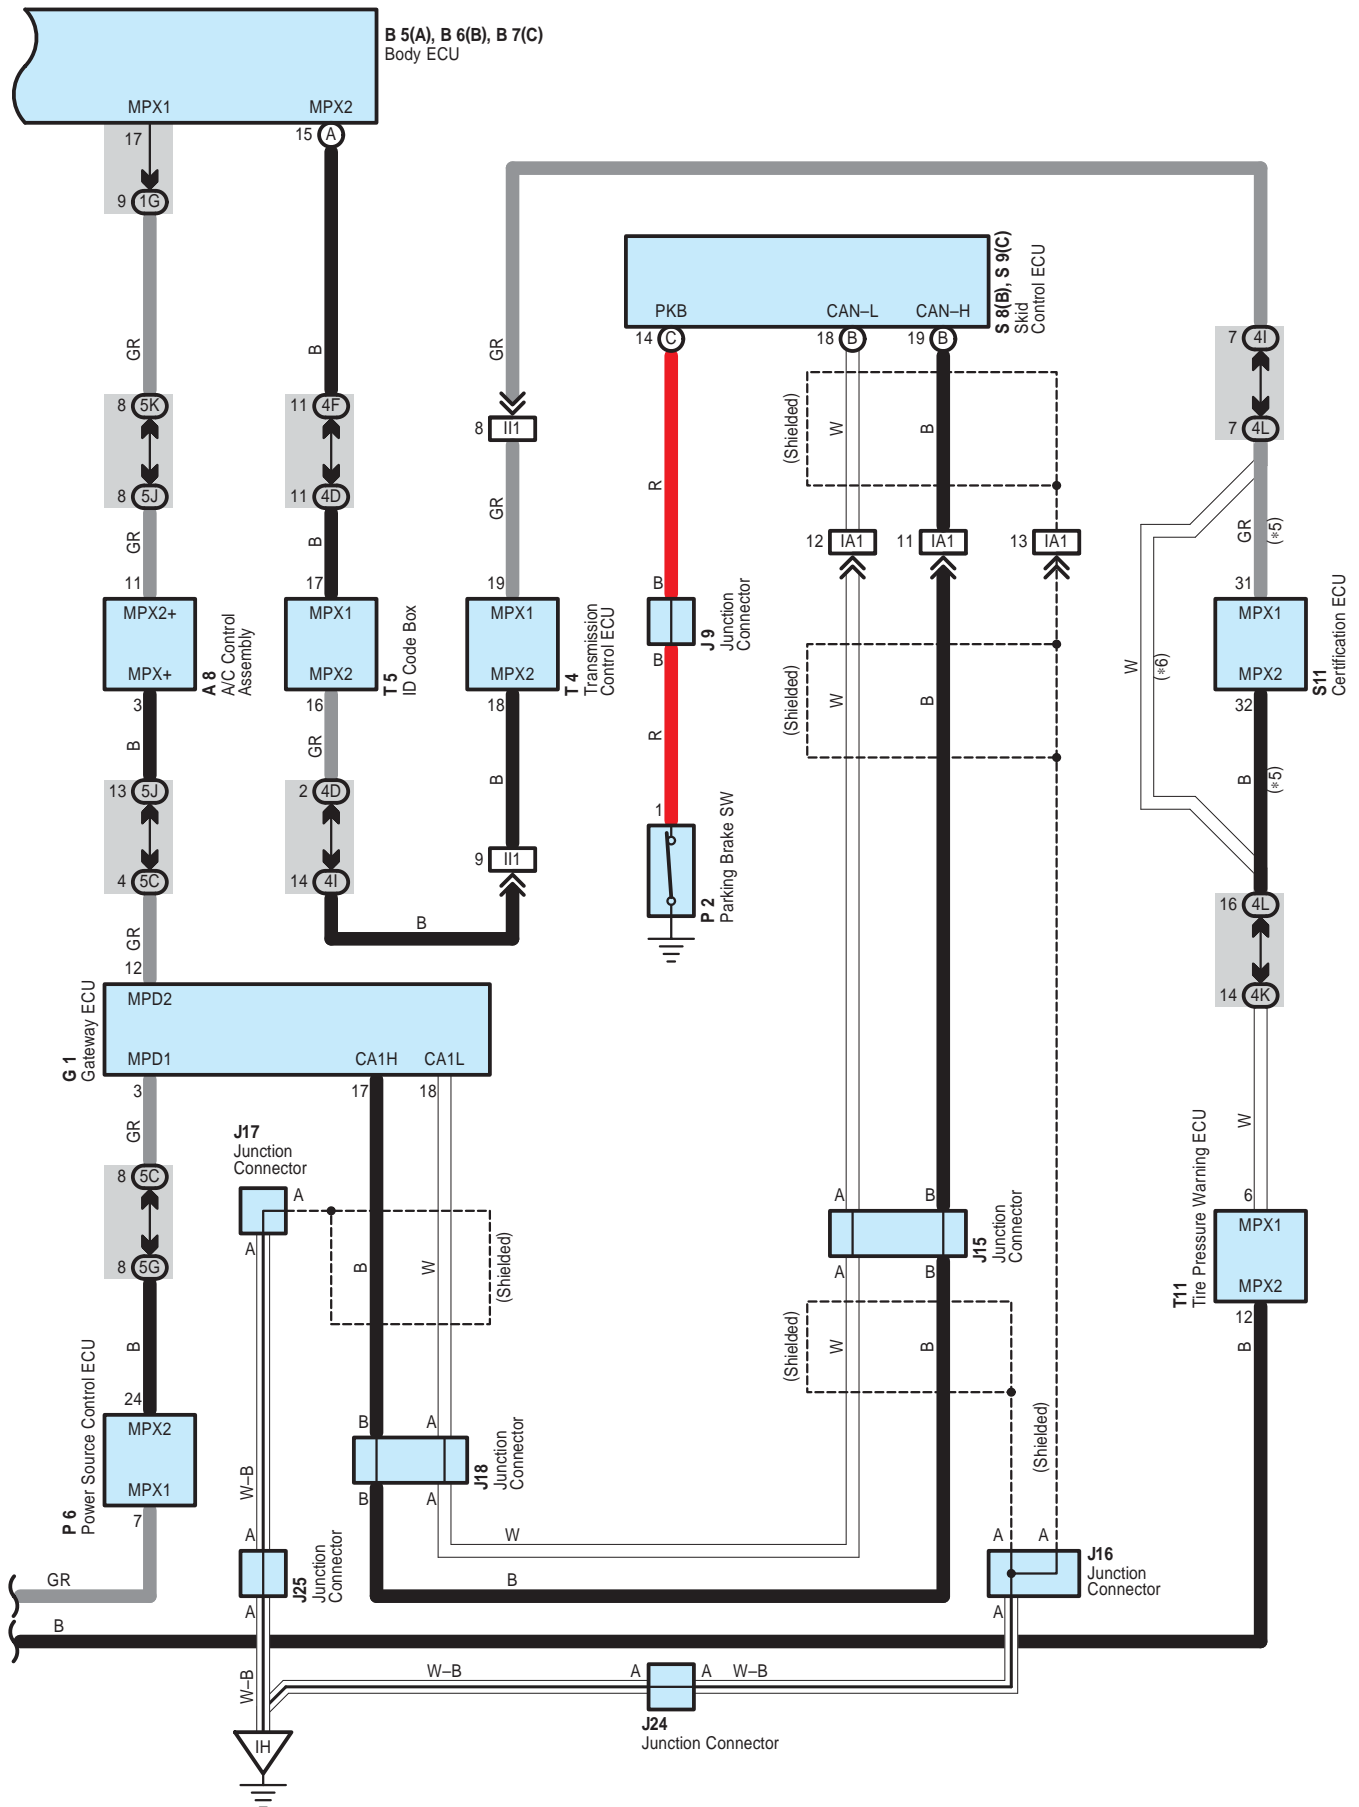

System Outline

Daytime Running Light Function (Canada)

When power SW is at IG ON position and the vehicle is ready to drive (READY lamp on the display in combination meter is on), releasing parking brake makes signal go into TERMINAL PKB of body ECU. In this condition, when light control SW is at Off/Tail/AUTO position (Headlight is not lit), body ECU sends daytime operation request from TERMINAL DRL/DIM to daytime running light relay. As a result, daytime running light relay duty- operates headlights (Dimmer than regular lighting)

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A8		48	H5	A	46	J18		50
A24		48	H6	B	46	J19		50
B5	A	48	H7		46	J24		50
B6	B	48	H8		46	J25		50
B7	C	48	J6		50	P2		51
C10		49	J7	A	50	P6		51
C11		49	J8	B	50	S8	B	51
D2		49	J9		50	S9	C	51
D3		49	J11		50	S11		51
G1		49	J15		50	T4		51
H3	A	46	J16		50	T5		51
H4	B	46	J17		50	T11		51

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Right Side of Reserve Tank)
3	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1I		
1K		
1L		
1M	31	
3B	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4B	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4C		
4D		
4F		
4G		
4H		
4I		
4K		
4L		
5A	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5G		
5H		
5J		
5K		
5L		

Headlight

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	58	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	59	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ3	59	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
EA	56	Right Side of the Fender Apron
EB		
EE	56	Left Side of the Suspension Tower
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH

