



Turn Signal and Hazard Warning Light

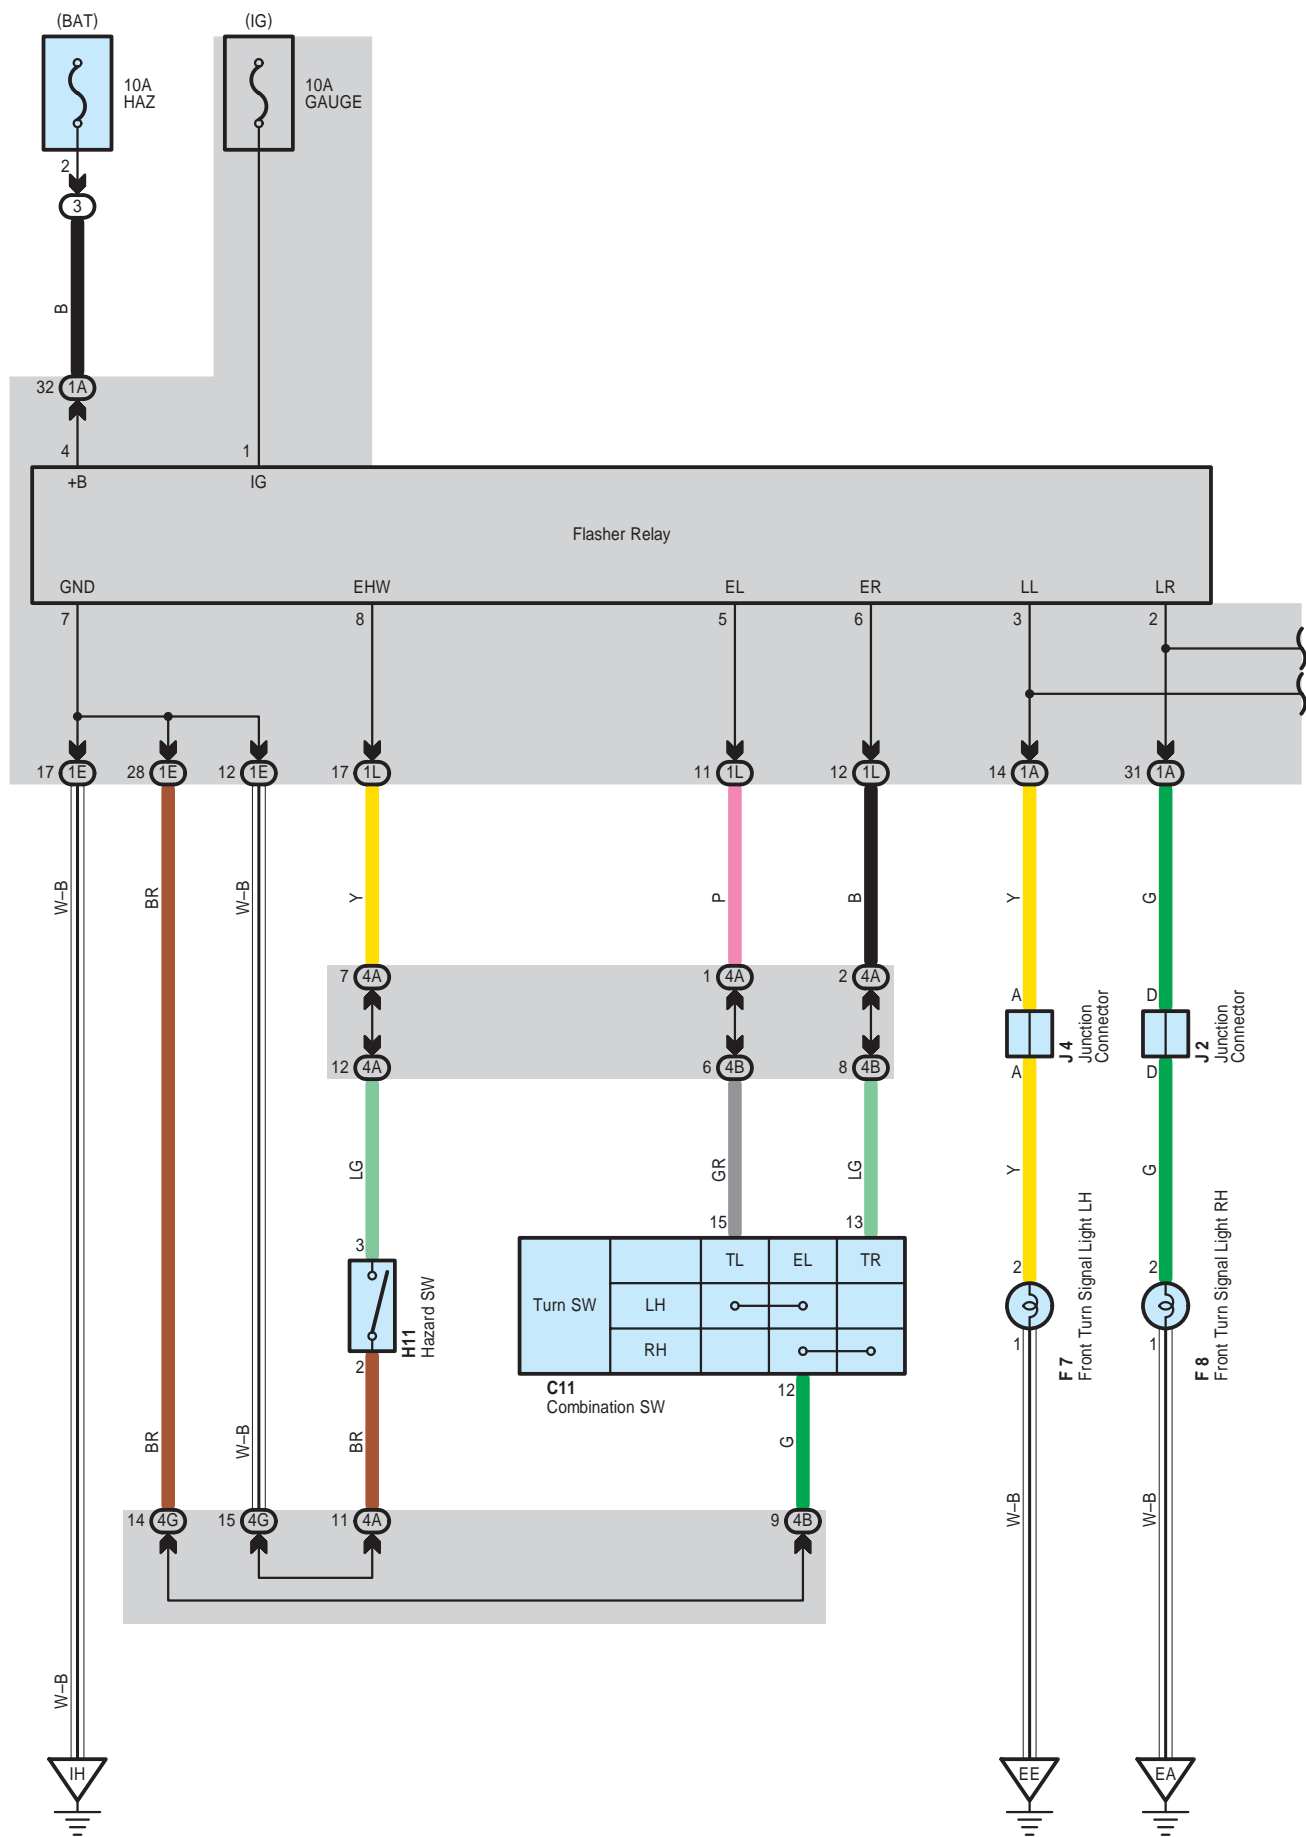

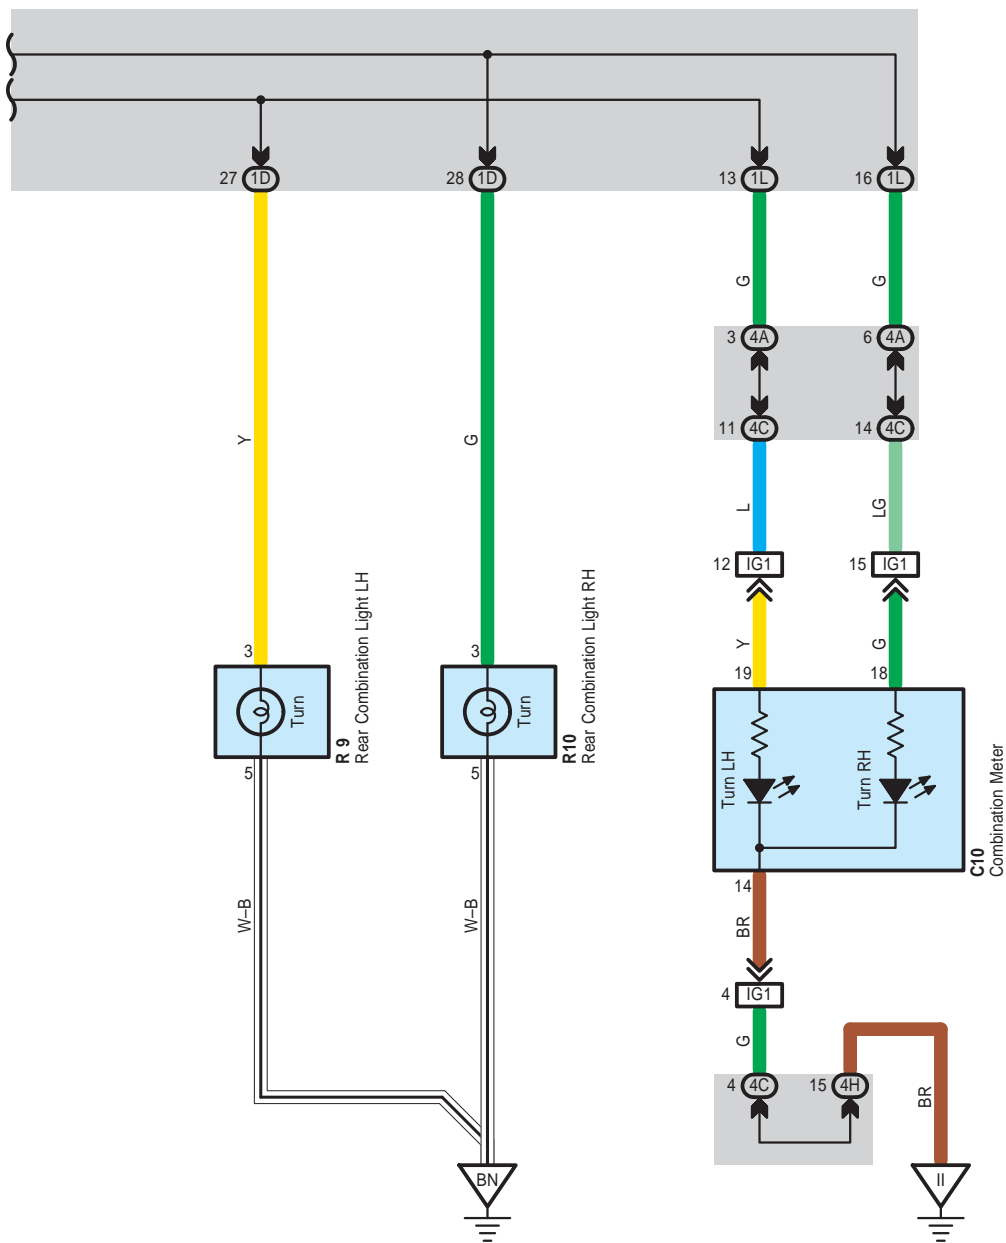

Turn Signal and Hazard Warning Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	49	F8	46	J4	47
C11	49	H11	49	R9	54
F7	46	J2	47	R10	54

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	30	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
4A	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4B		
4C		
4G		
4H		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)

: Ground Points

Code	See Page	Ground Points Location
EA	56	Right Side of the Fender Apron
EE	56	Left Side of the Suspension Tower
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH
BN	60	Lower Back Panel Center

