




Interior Light

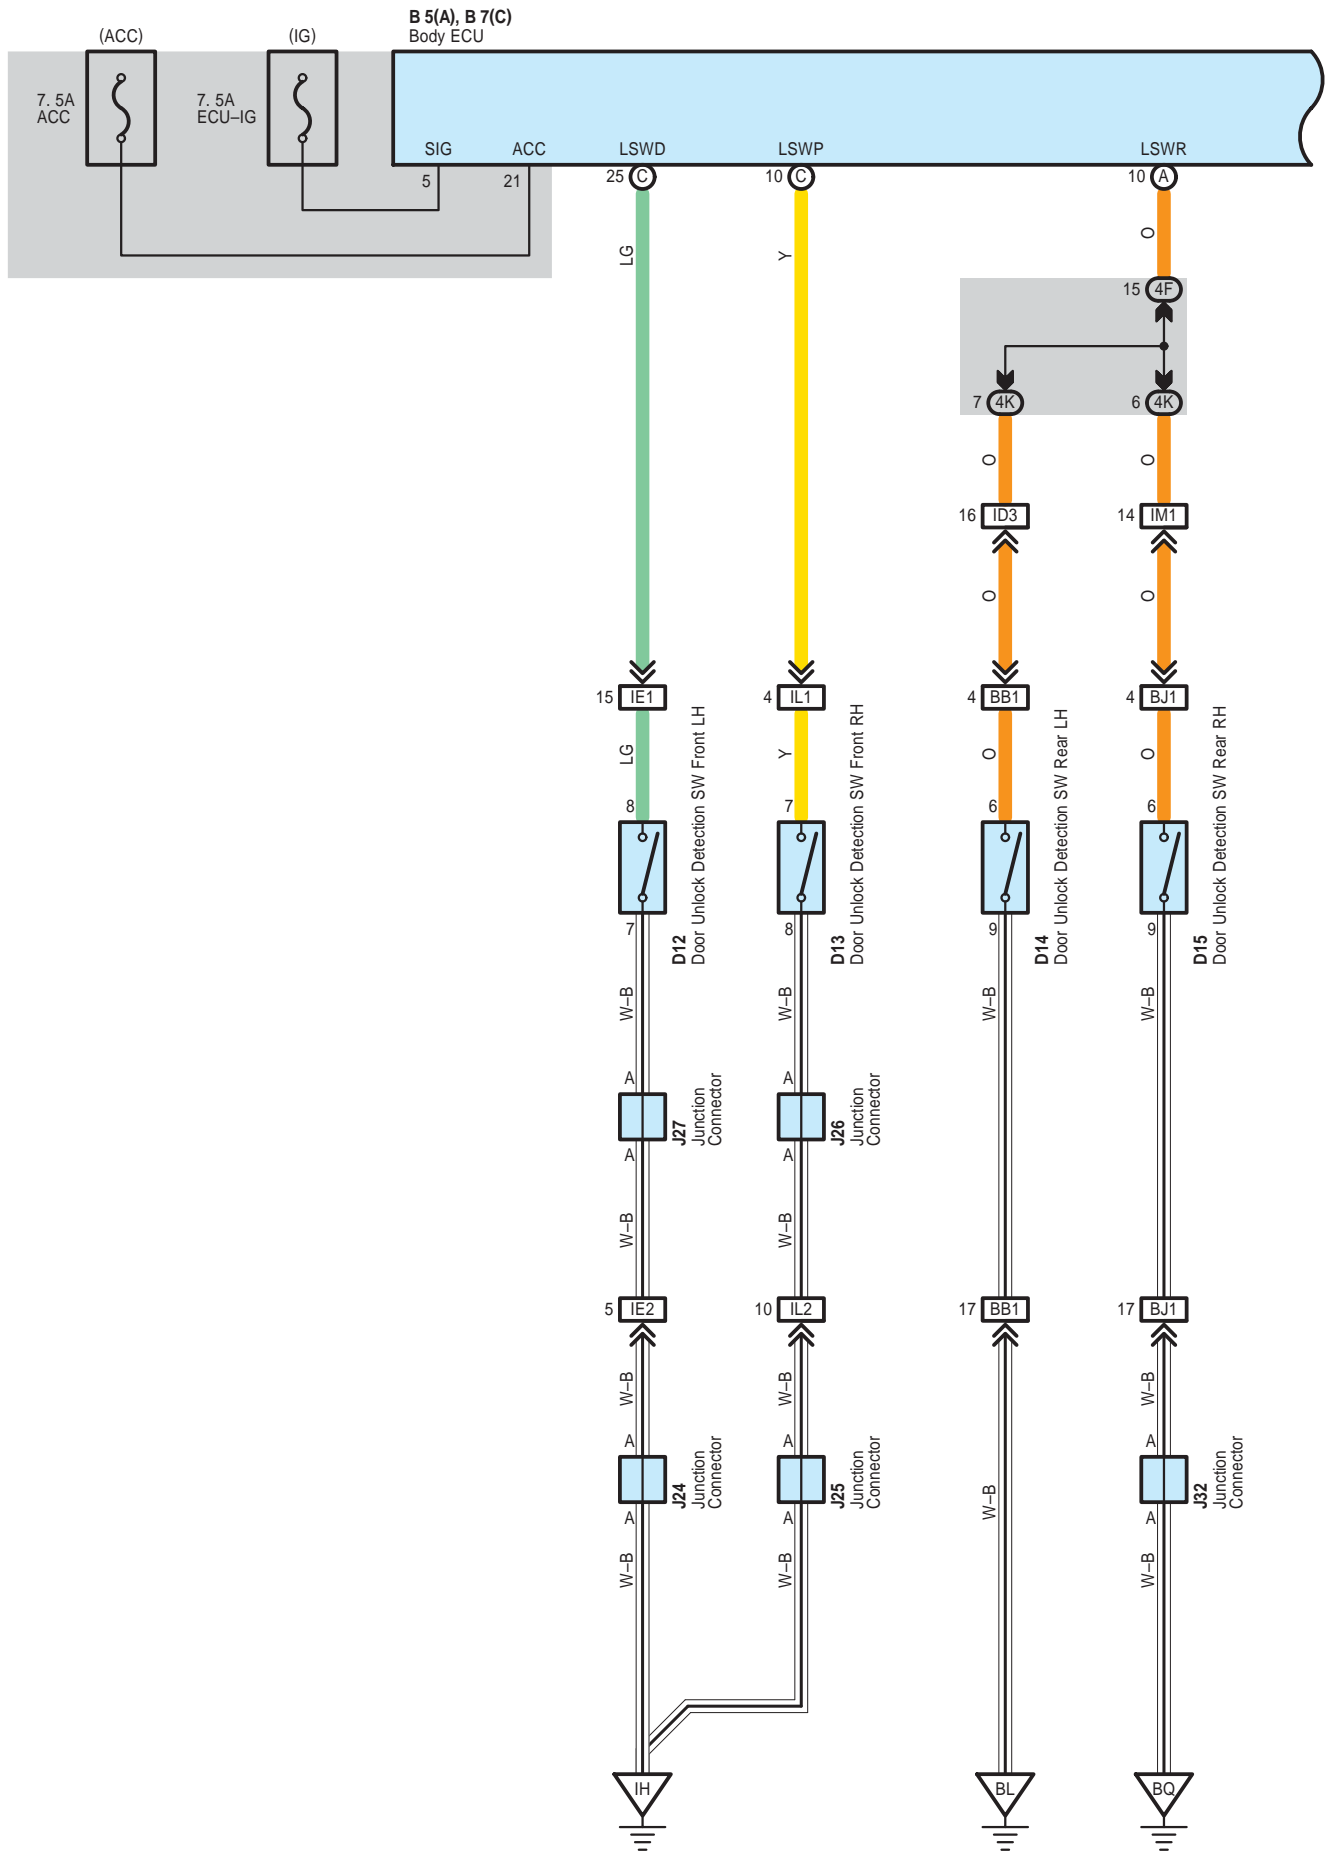


B 5(A), B 7(C)
Body ECU

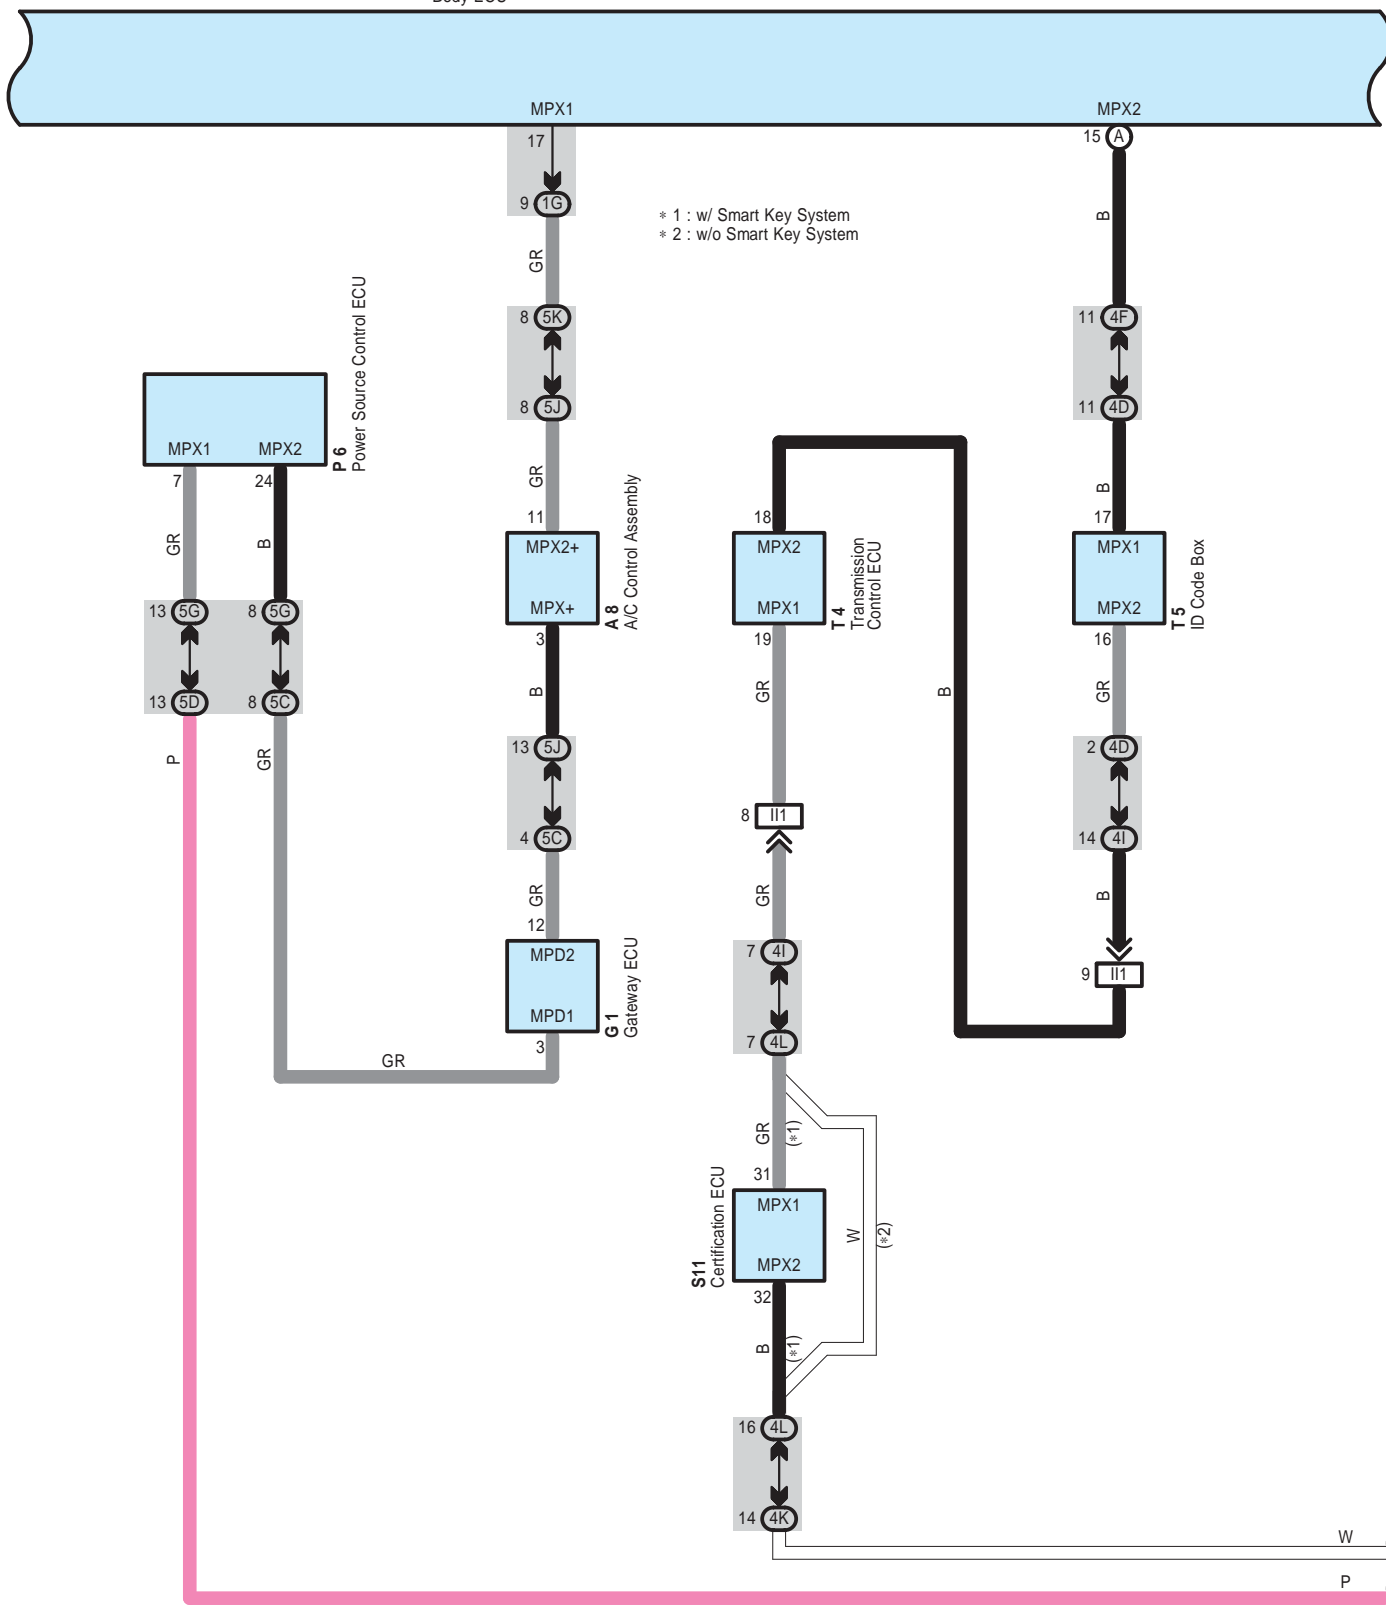


Interior Light

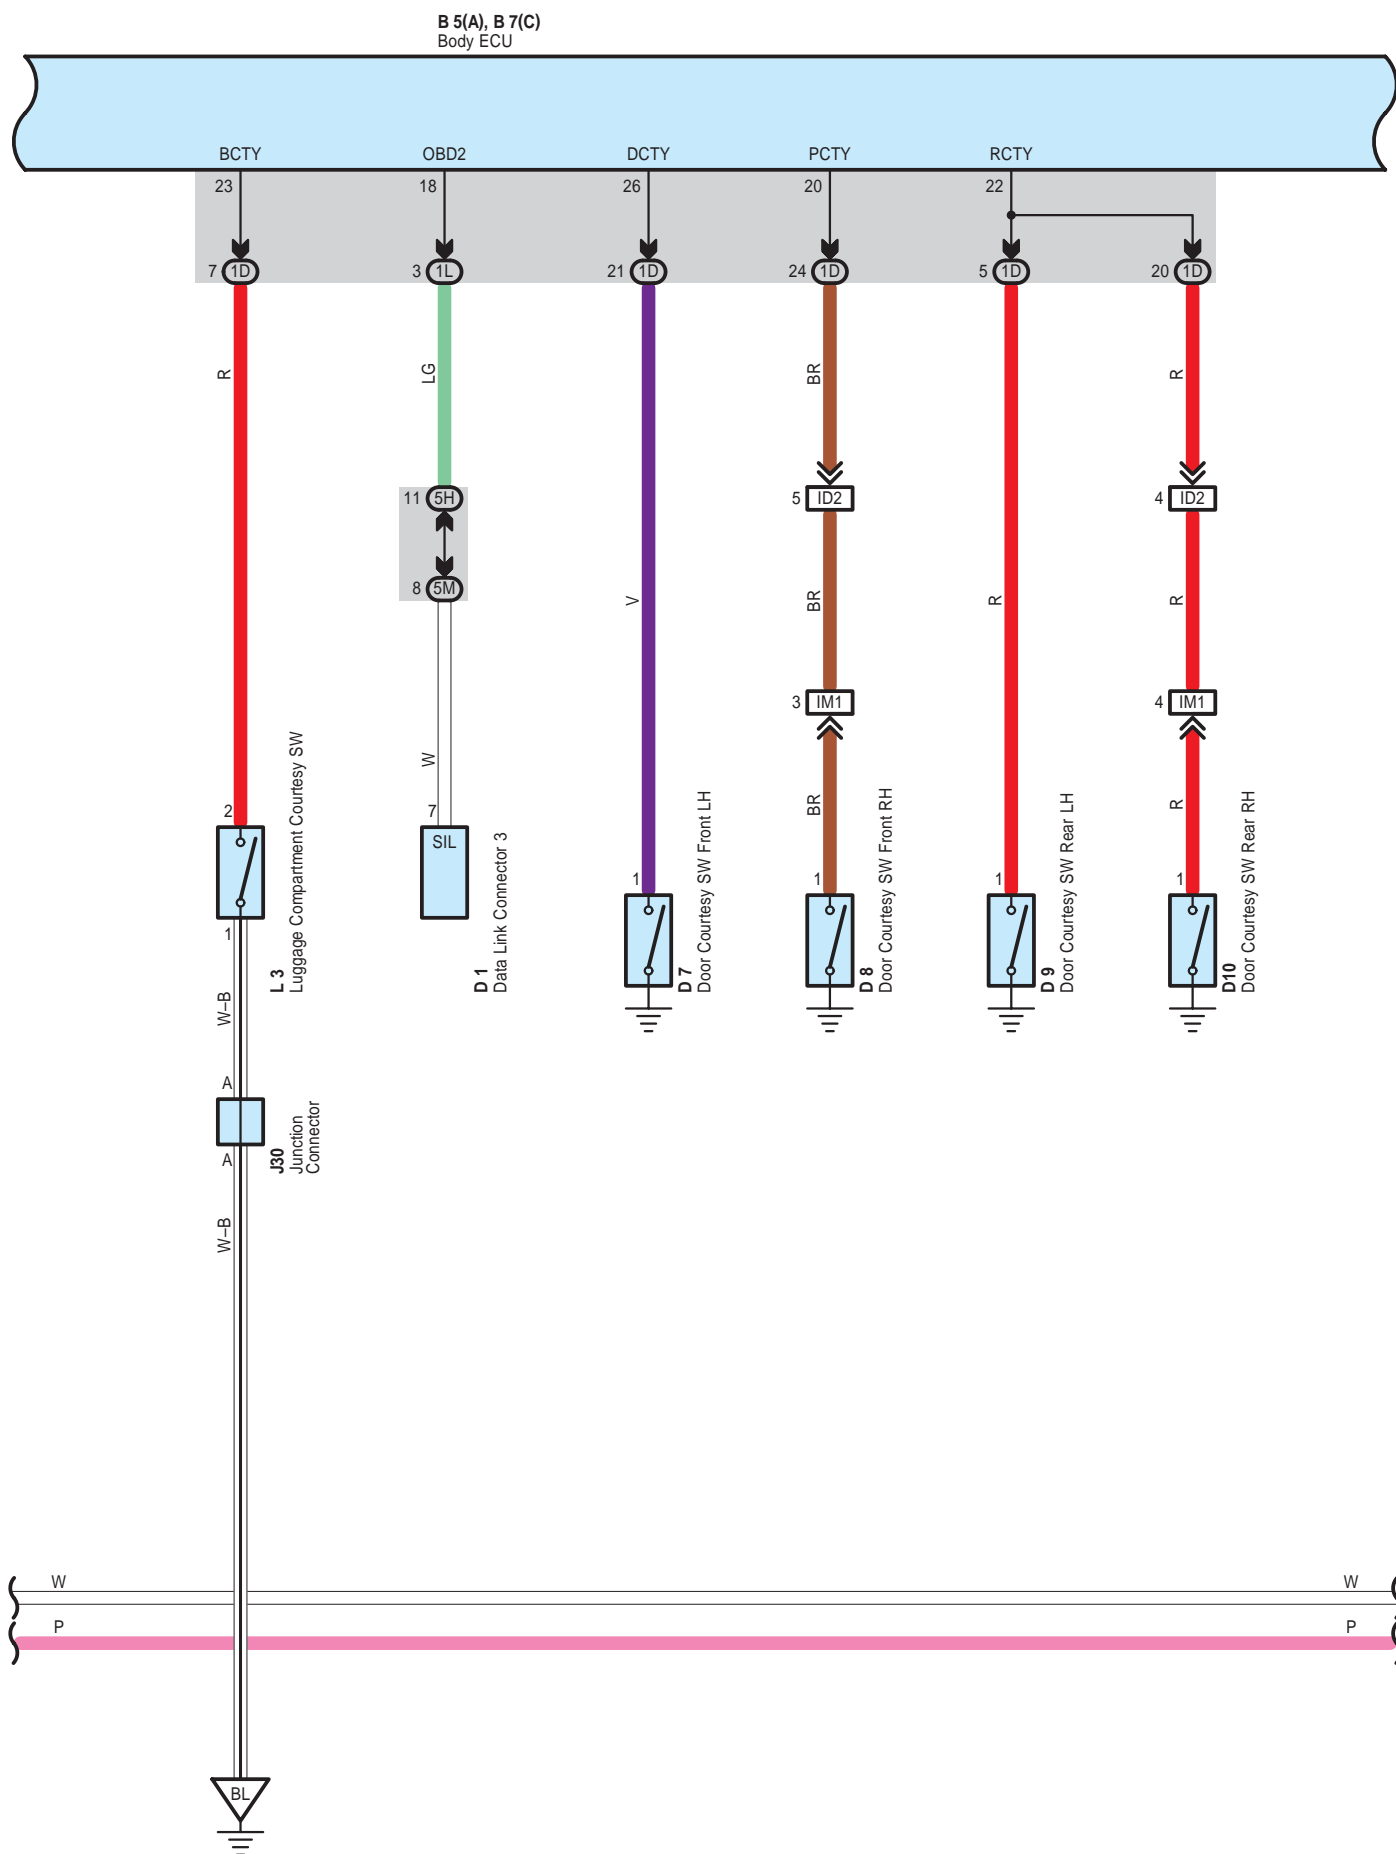

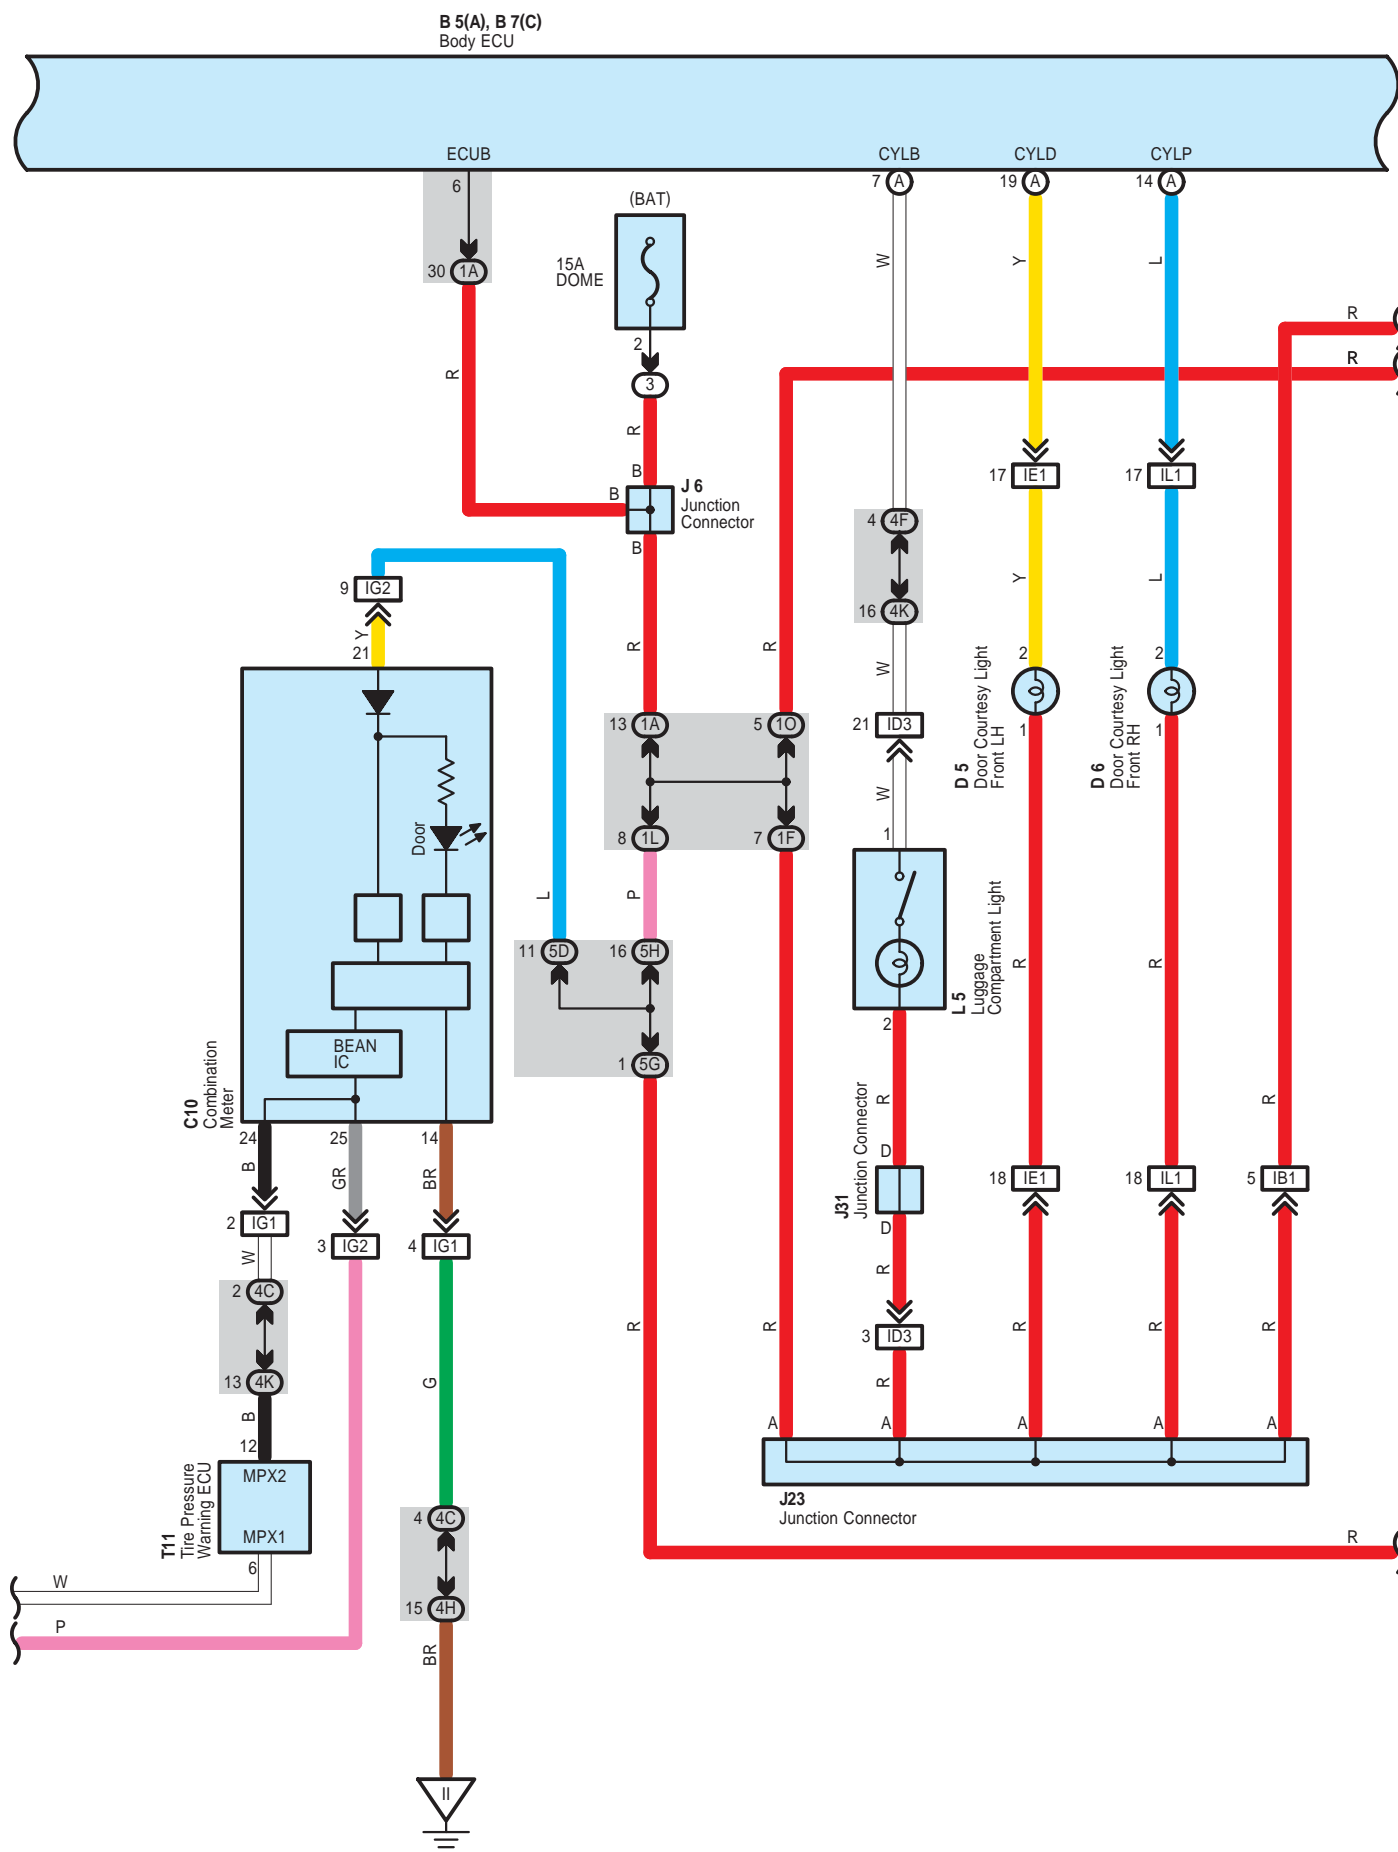

Interior Light

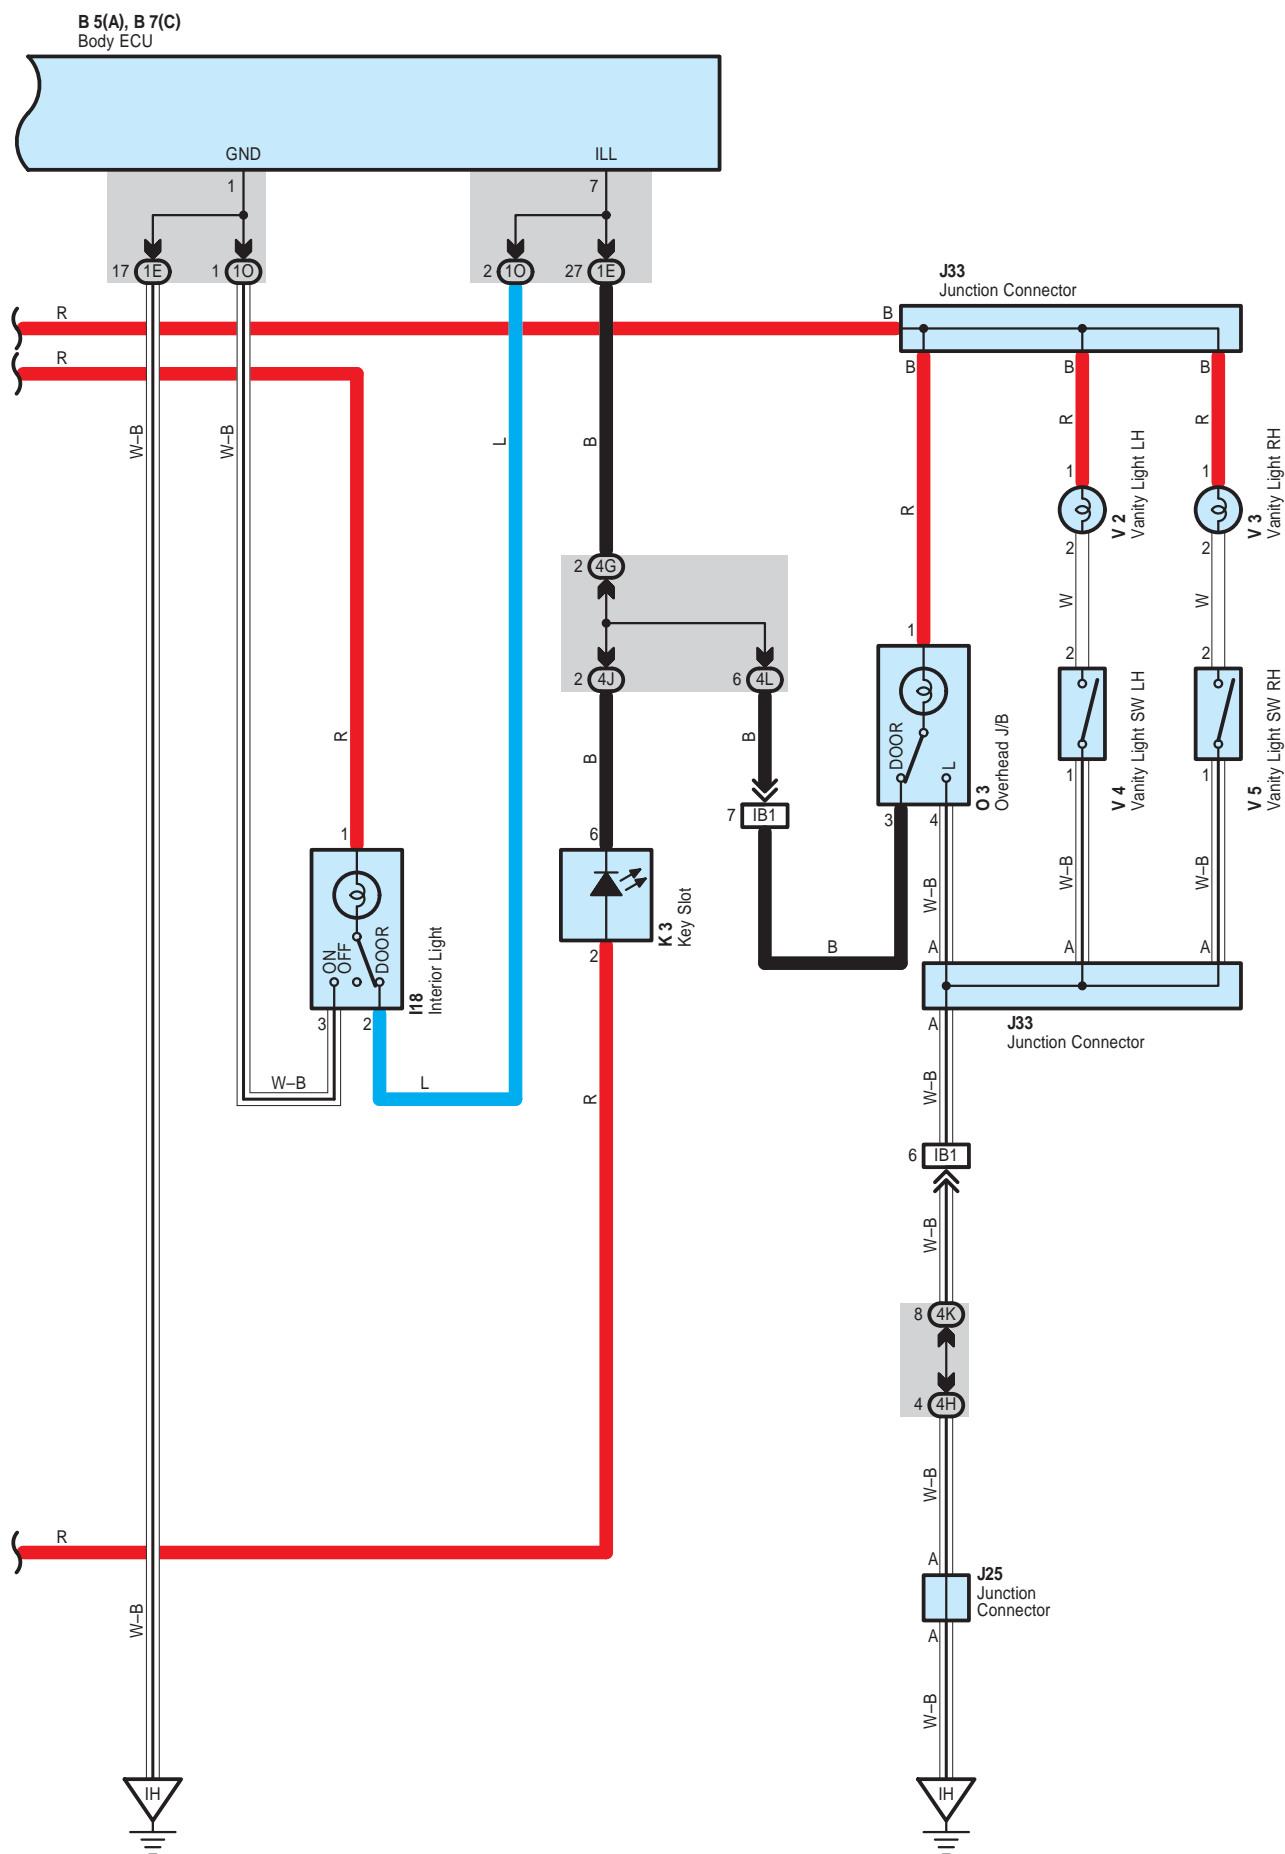

System Outline

Interior light operates with control of body ECU.

Illumination Control

Lighting function of interior light, overhead J/B, electrical key holder

When any door is opened, signal is sent from door courtesy SW to body ECU. Interior light, overhead J/B and key slot light on gradually from unlit condition to fully lit condition within 1.5 seconds if lighting SW of interior light and overhead J/B is set for door.

After that, when all the doors are shut and any one of the door is unlocked, interior light, overhead J/B and key slot are lit up for about 15 seconds (Timer lighting) and then are lit off gradually.

Under conditions that power SW is set at OFF position and all the doors are closed, when any one of the door is unlocked, interior light, overhead J/B and key slot light on gradually from unlit condition to fully lit condition within 1.5 seconds, stay on for the certain time (Timer lighting) and then light off gradually. If power SW is turned from OFF position to ACC ON or IG ON position during timer lighting, the timer lighting function is cut off immediately and the light goes off gradually.

Even though timer lighting conditions are satisfied when power SW is at ACC ON or IG ON position, the light does not stay on for certain time (For 15 sec.) after lighting, but goes off gradually.

All the doors are locked during timer lighting, the timer lighting function is cut off immediately and the light goes off gradually.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	48	D15	52	L3	53
B5	A 48	G1	49	L5	53
B7	C 48	I18	53	O3	54
C10	49	J6	50	P6	51
D1	49	J23	50	S11	51
D5	52	J24	50	T4	51
D6	52	J25	50	T5	51
D7	52	J26	53	T11	51
D8	52	J27	53	V2	55
D9	52	J30	53	V3	55
D10	52	J31	53	V4	55
D12	52	J32	53	V5	55
D13	52	J33	53		
D14	52	K3	50		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

Interior Light



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	30	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1L	31	
1O	30	Roof Wire and Driver Side J/B (Lower Finish Panel)
4C	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4G		
4H		
4I		
4J		
4K		
4L		
5C	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5G		
5H		
5J		
5K		
5M		



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	58	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID2	58	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID3		
IE1	58	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	59	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	59	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IM1	59	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BJ1	61	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)



: Ground Points

Code	See Page	Ground Points Location
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH
BL	60	Rear Side of Left Quarter Panel
BQ	60	Rear Side of Right Quarter Panel

