



Taillight and Illumination

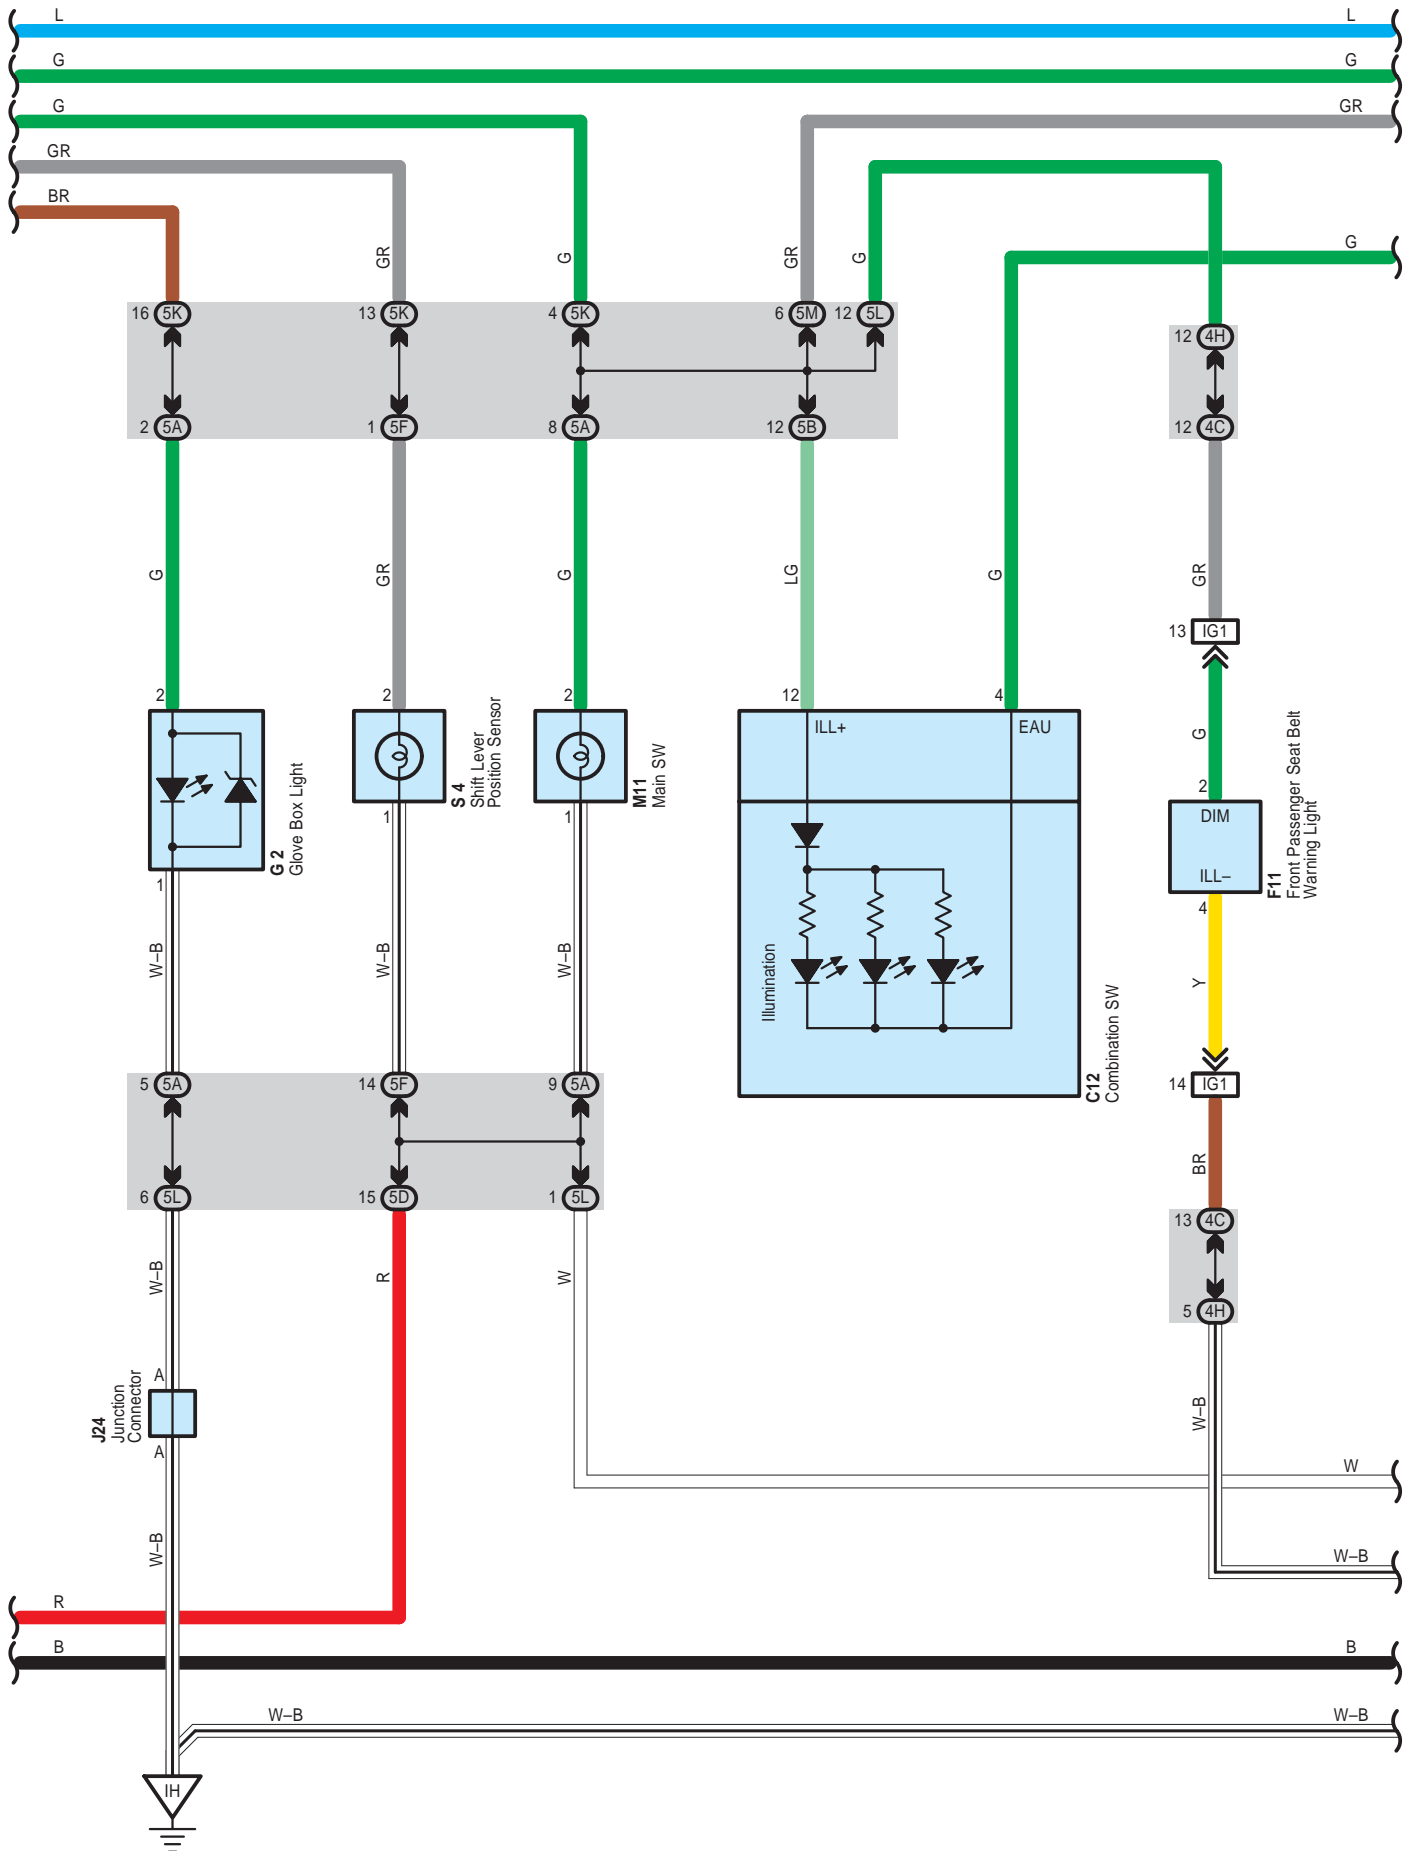

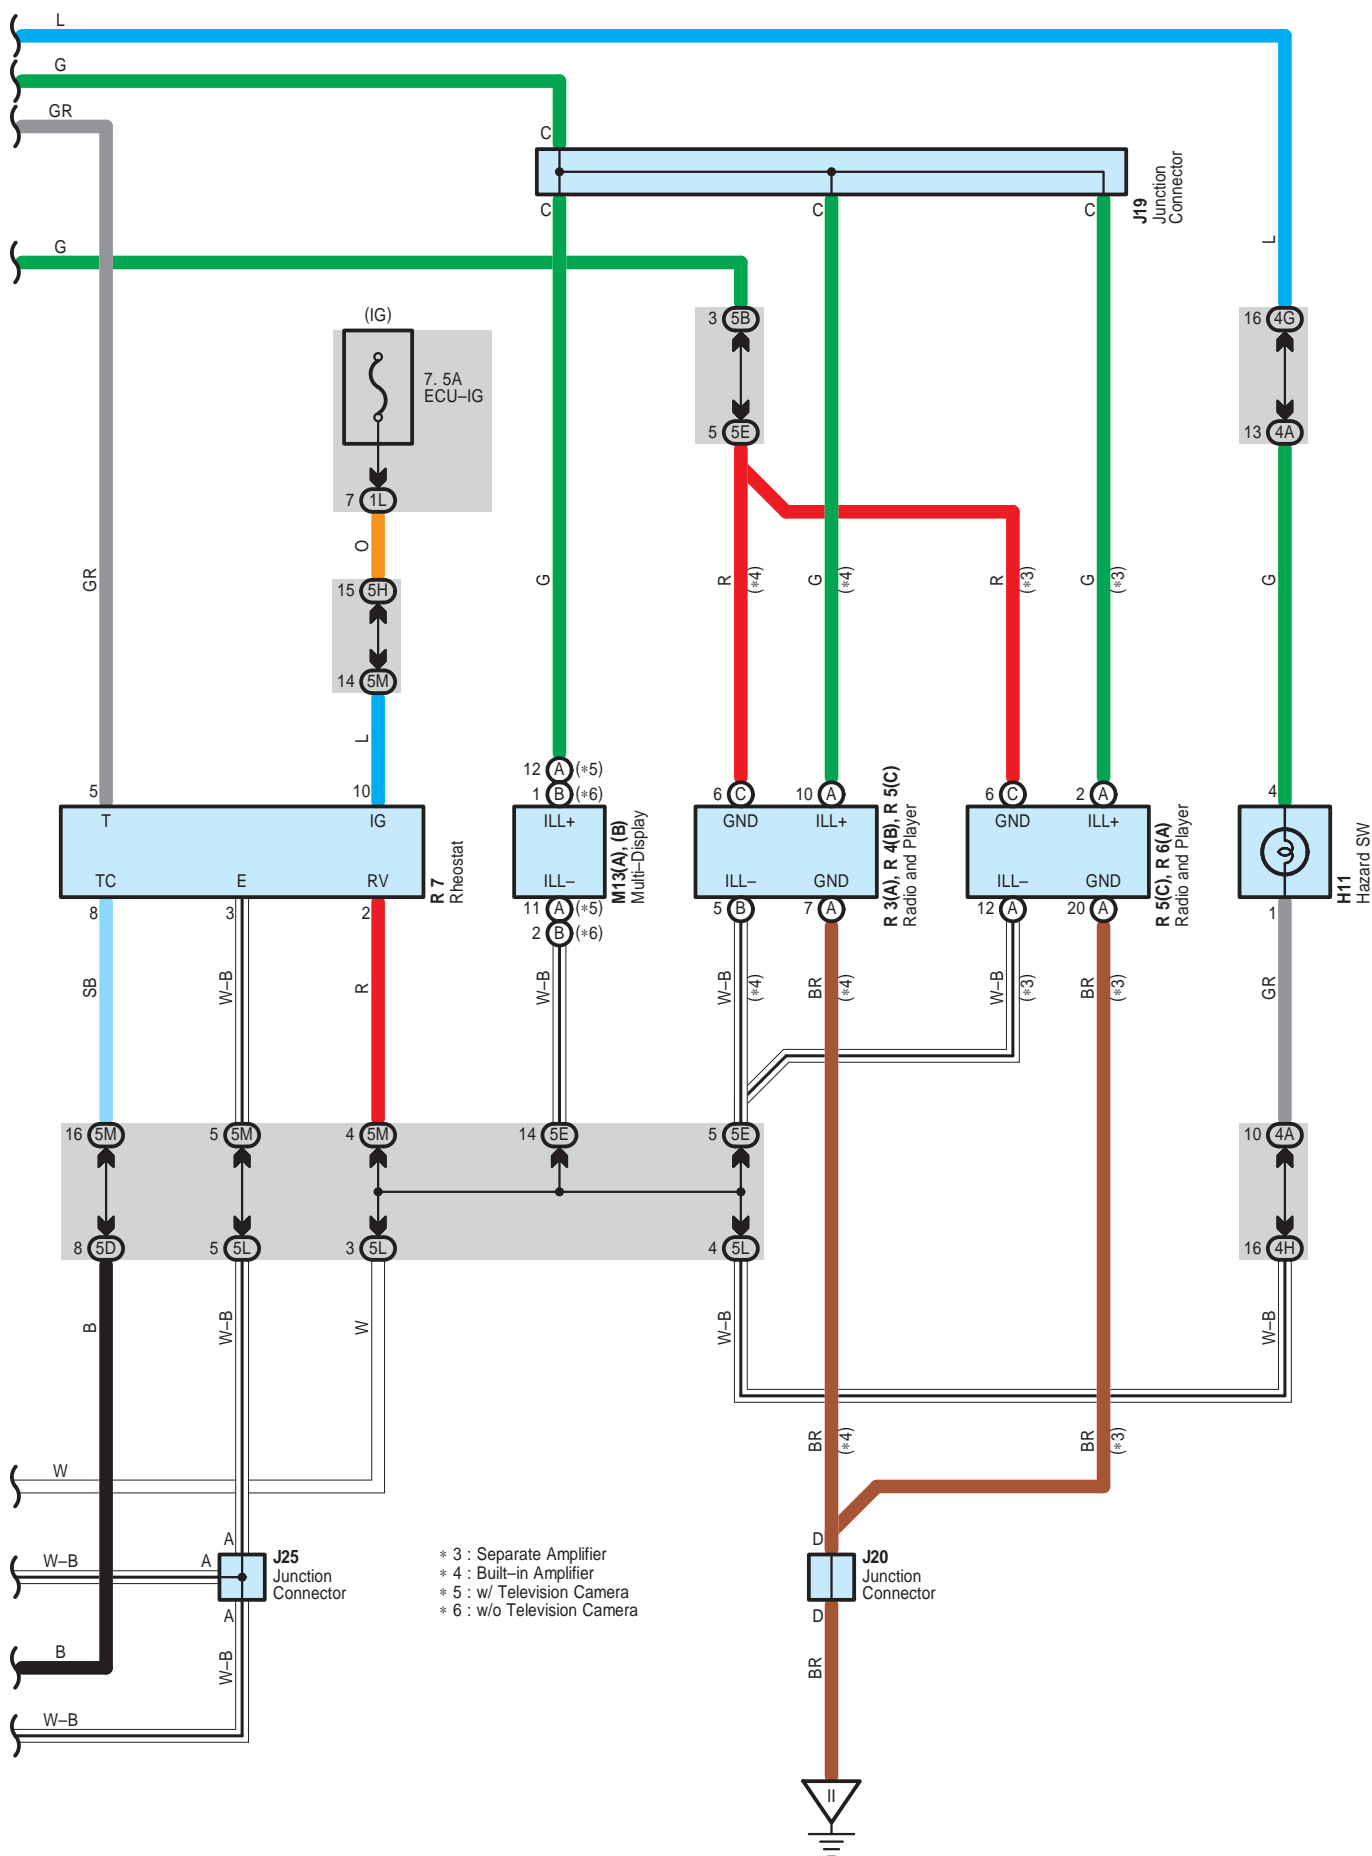

Taillight and Illumination

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	48	J11	50	P11	51
B5	A 48	J19	50	R3	A 51
B7	C 48	J20	50	R4	B 51
C10	49	J24	50	R5	C 51
C11	49	J25	50	R6	A 51
C12	49	J31	53	R7	51
F5	46	J34	53	R9	54
F6	46	L1	53	R10	54
F11	49	L2	53	S4	51
G1	49	M11	50	S11	51
G2	49	M13	A 50	T4	51
H11	49		B 50	T5	51
J6	50	P6	51	T11	51

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	30	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L	31	
1M		
1N		
3D	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3I	24	
4A	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4B		
4C		
4D		
4F		
4G		
4H		
4I		
4J		
4K		
4L		
5A	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5B		
5C		
5D		
5E		
5F		
5G		
5H		
5J		
5K		
5L		
5M		

**: Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	58	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	59	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
BH1	61	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK2	61	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

**: Ground Points**

Code	See Page	Ground Points Location
EA	56	Right Side of the Fender Apron
EF	56	Left Side of the Suspension Tower
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH
BN	60	Lower Back Panel Center
BO	60	Center of the Back Door Panel