



Back-Up Light

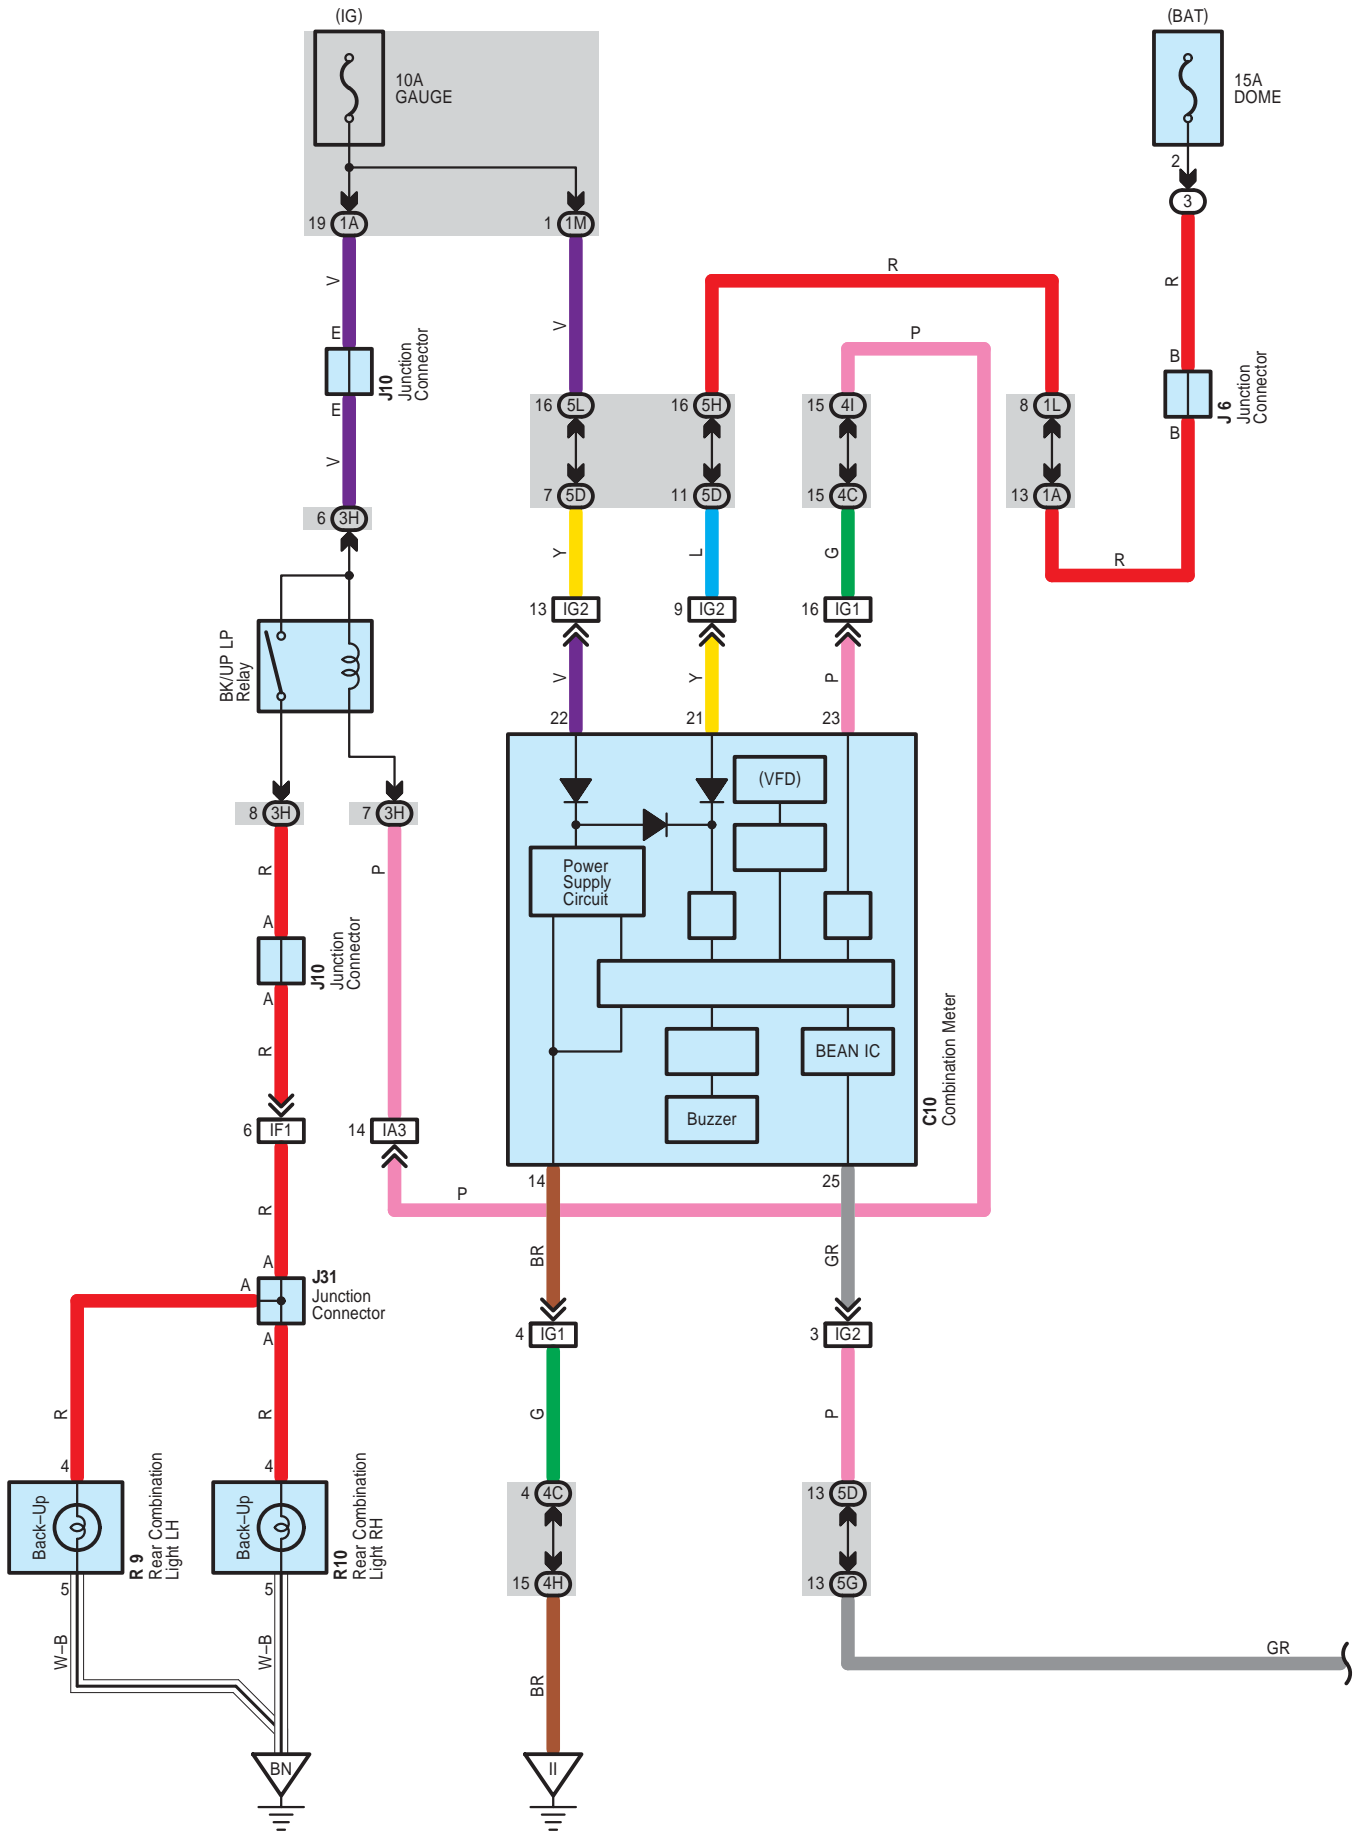

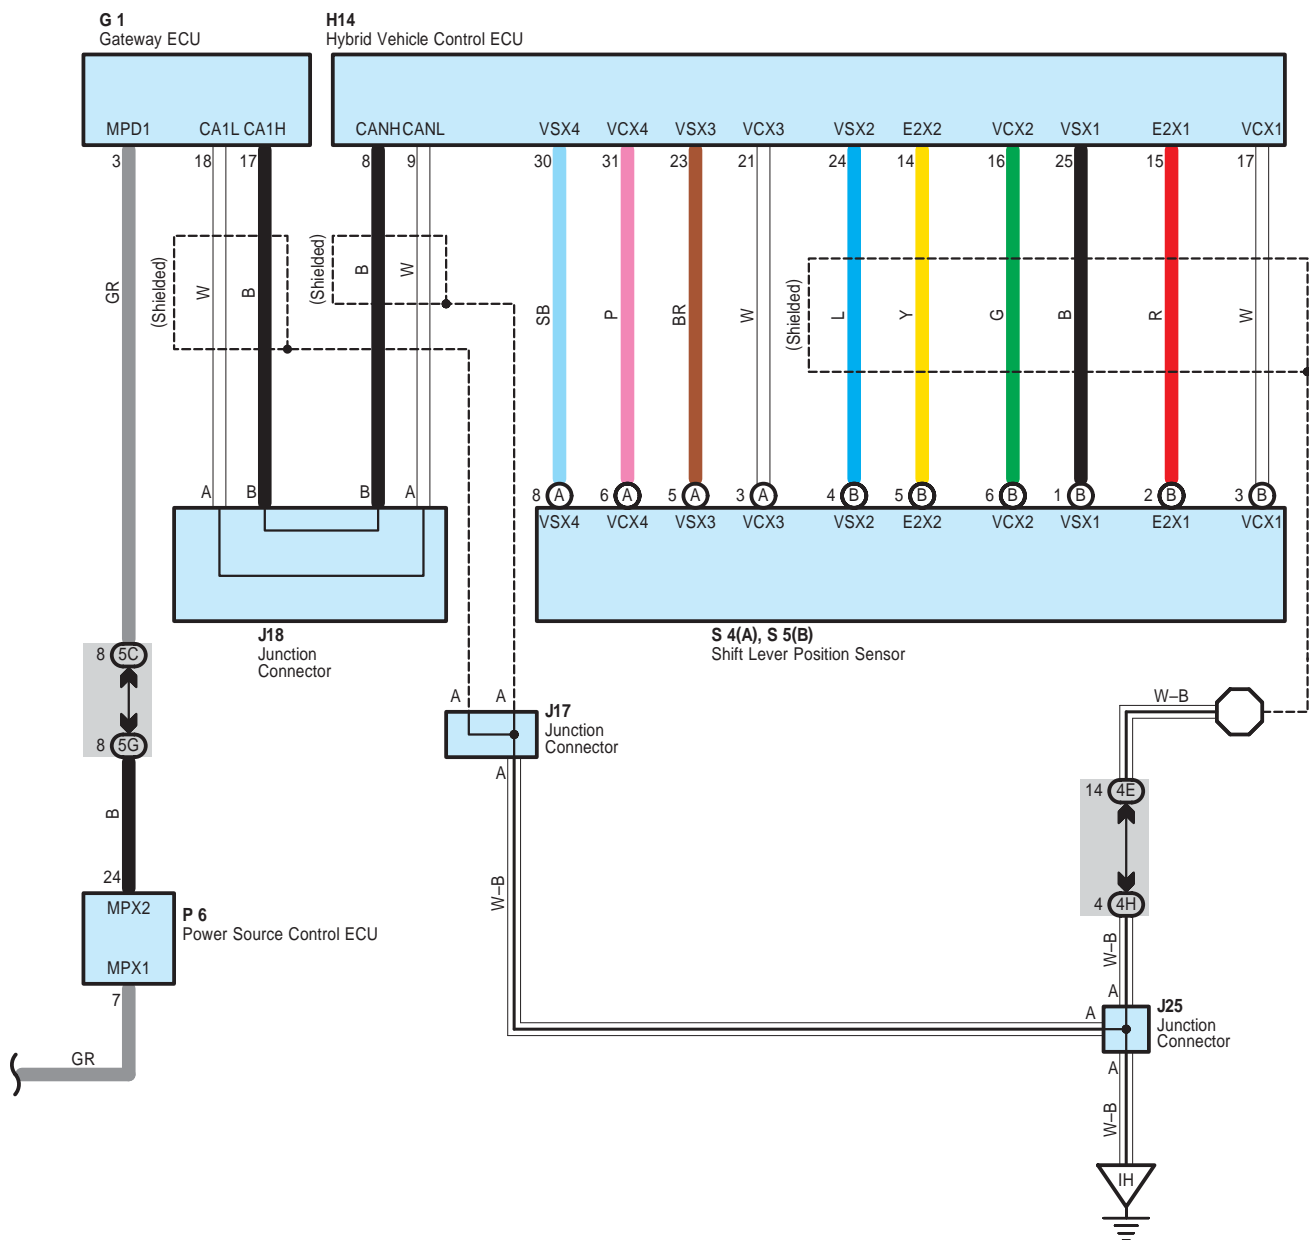

Back-Up Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	49	J17	50	R9	54
G1	49	J18	50	R10	54
H14	49	J25	50	S4	A 51
J6	50	J31	53	S5	B 51
J10	50	P6	51		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1M		
3H	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4C	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4E		
4H		
4I		
5C	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5G		
5H		
5L		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	58	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IF1	58	Floor Wire and Engine Room Main Wire (Left Kick Panel)
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		

: Ground Points

Code	See Page	Ground Points Location
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH
BN	60	Lower Back Panel Center

