


Seat Belt Warning

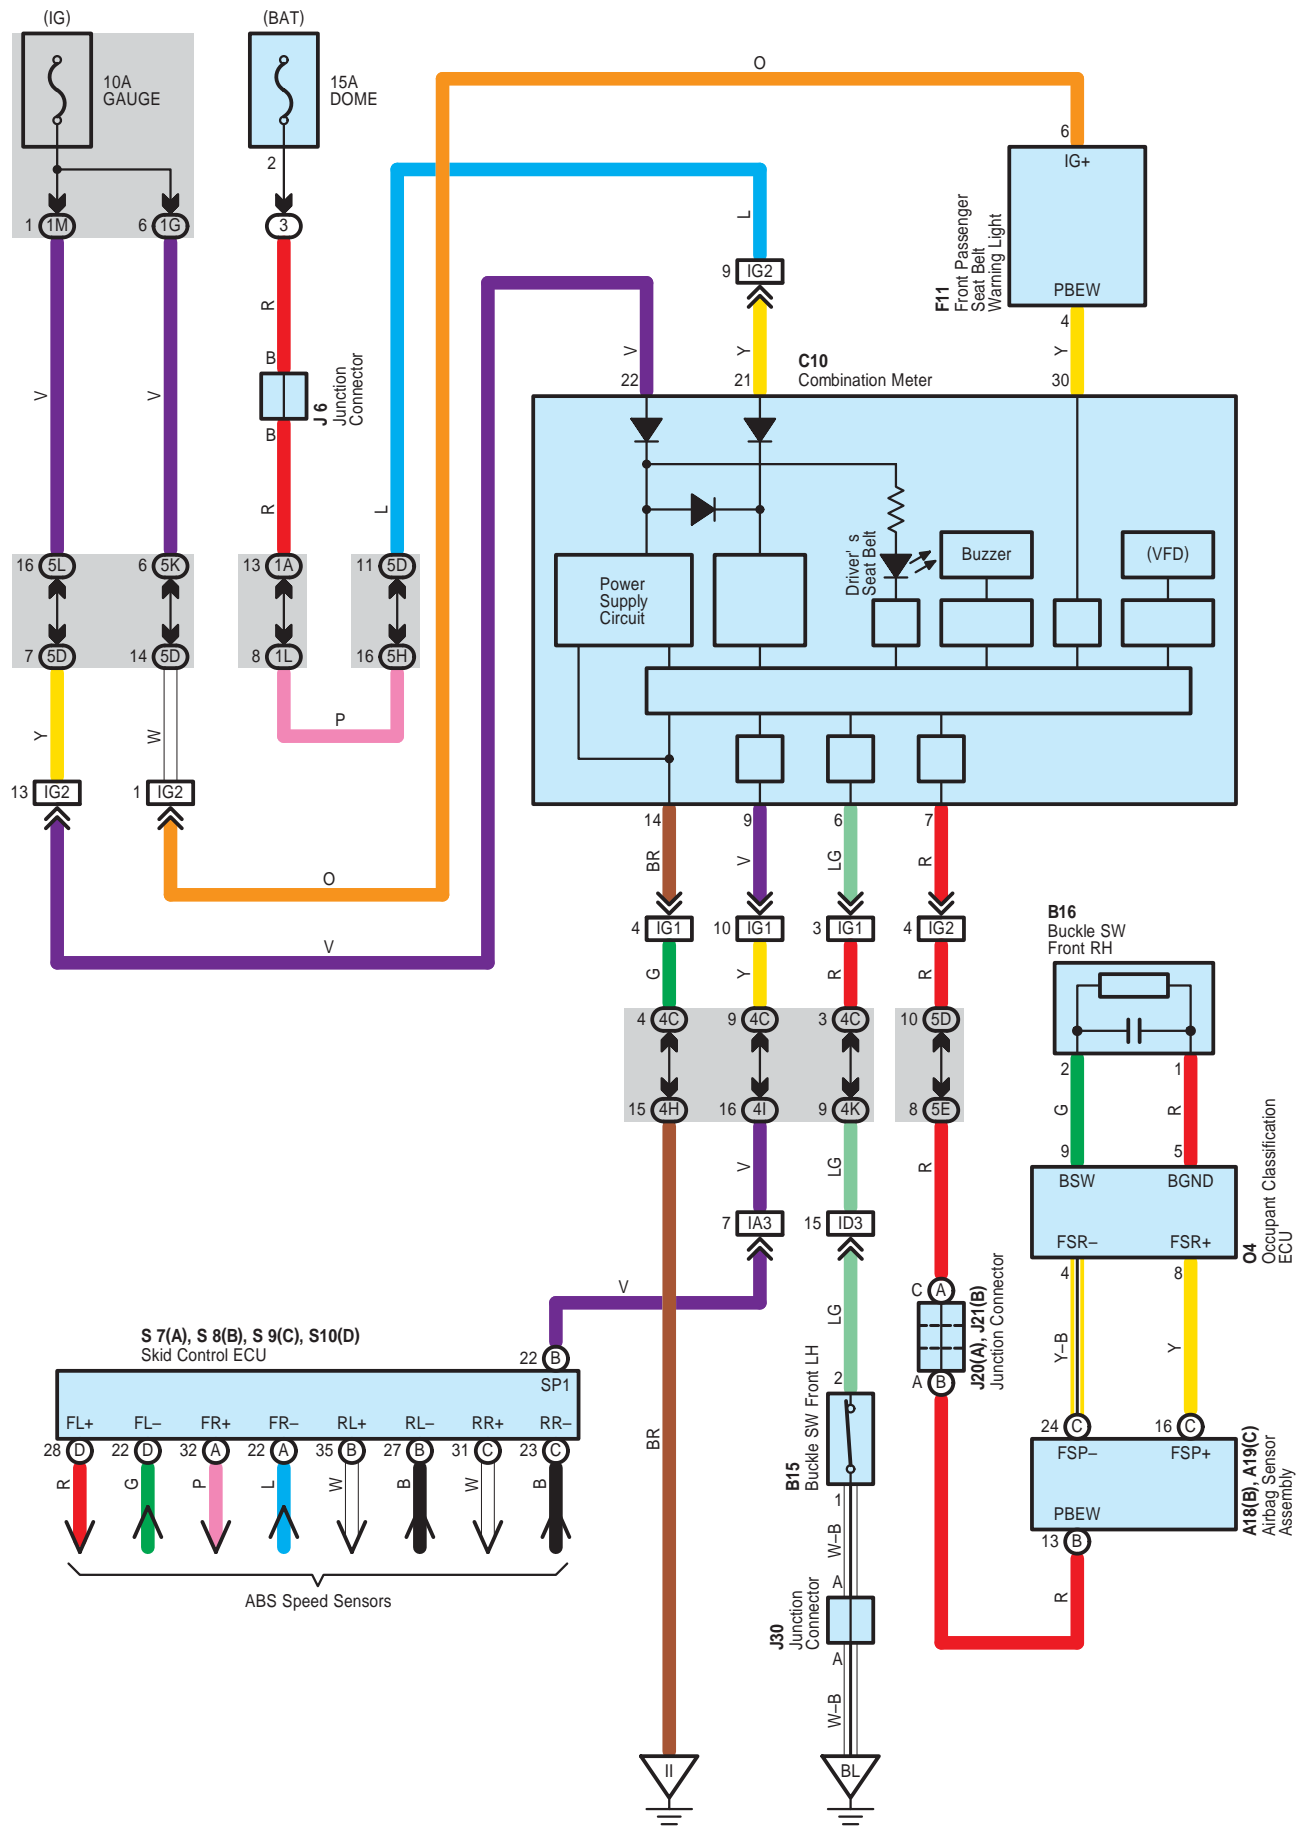

System Outline

If the driver does not have seat belt fastened when power SW is turned to IG ON position, the indicator in combination meter lights up. Buzzer sound for 6 seconds reminds the driver of seat belt fastening. After that, if seat belt has not been fastened yet, another buzzer sound goes on for 30 seconds when vehicle speed is 15 km/h or more. The buzzer sound also goes on when the driver unfastens seat belt from fastening condition with vehicle speed over 15 km/h.

Sensor installed in front passenger seat detects whether passenger(s) is(are) seated on front passenger seat(s). If a passenger does not have seat belt fastened in front seat, passenger seat belt warning light blinks.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A18	B	48	F11		49	O4		54
A19	C	48	J6		50	S7	A	51
B15		52	J20	A	50	S8	B	51
B16		52	J21	B	50	S9	C	51
C10		49	J30		53	S10	D	51

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
1M	31	
4C	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4H		
4I		
4K		
5D	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5E		
5H		
5K		
5L		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	58	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID3	58	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		

▽ : Ground Points

Code	See Page	Ground Points Location
II	58	Instrument Panel Brace LH
BL	60	Rear Side of Left Quarter Panel