



Tire Pressure Warning System

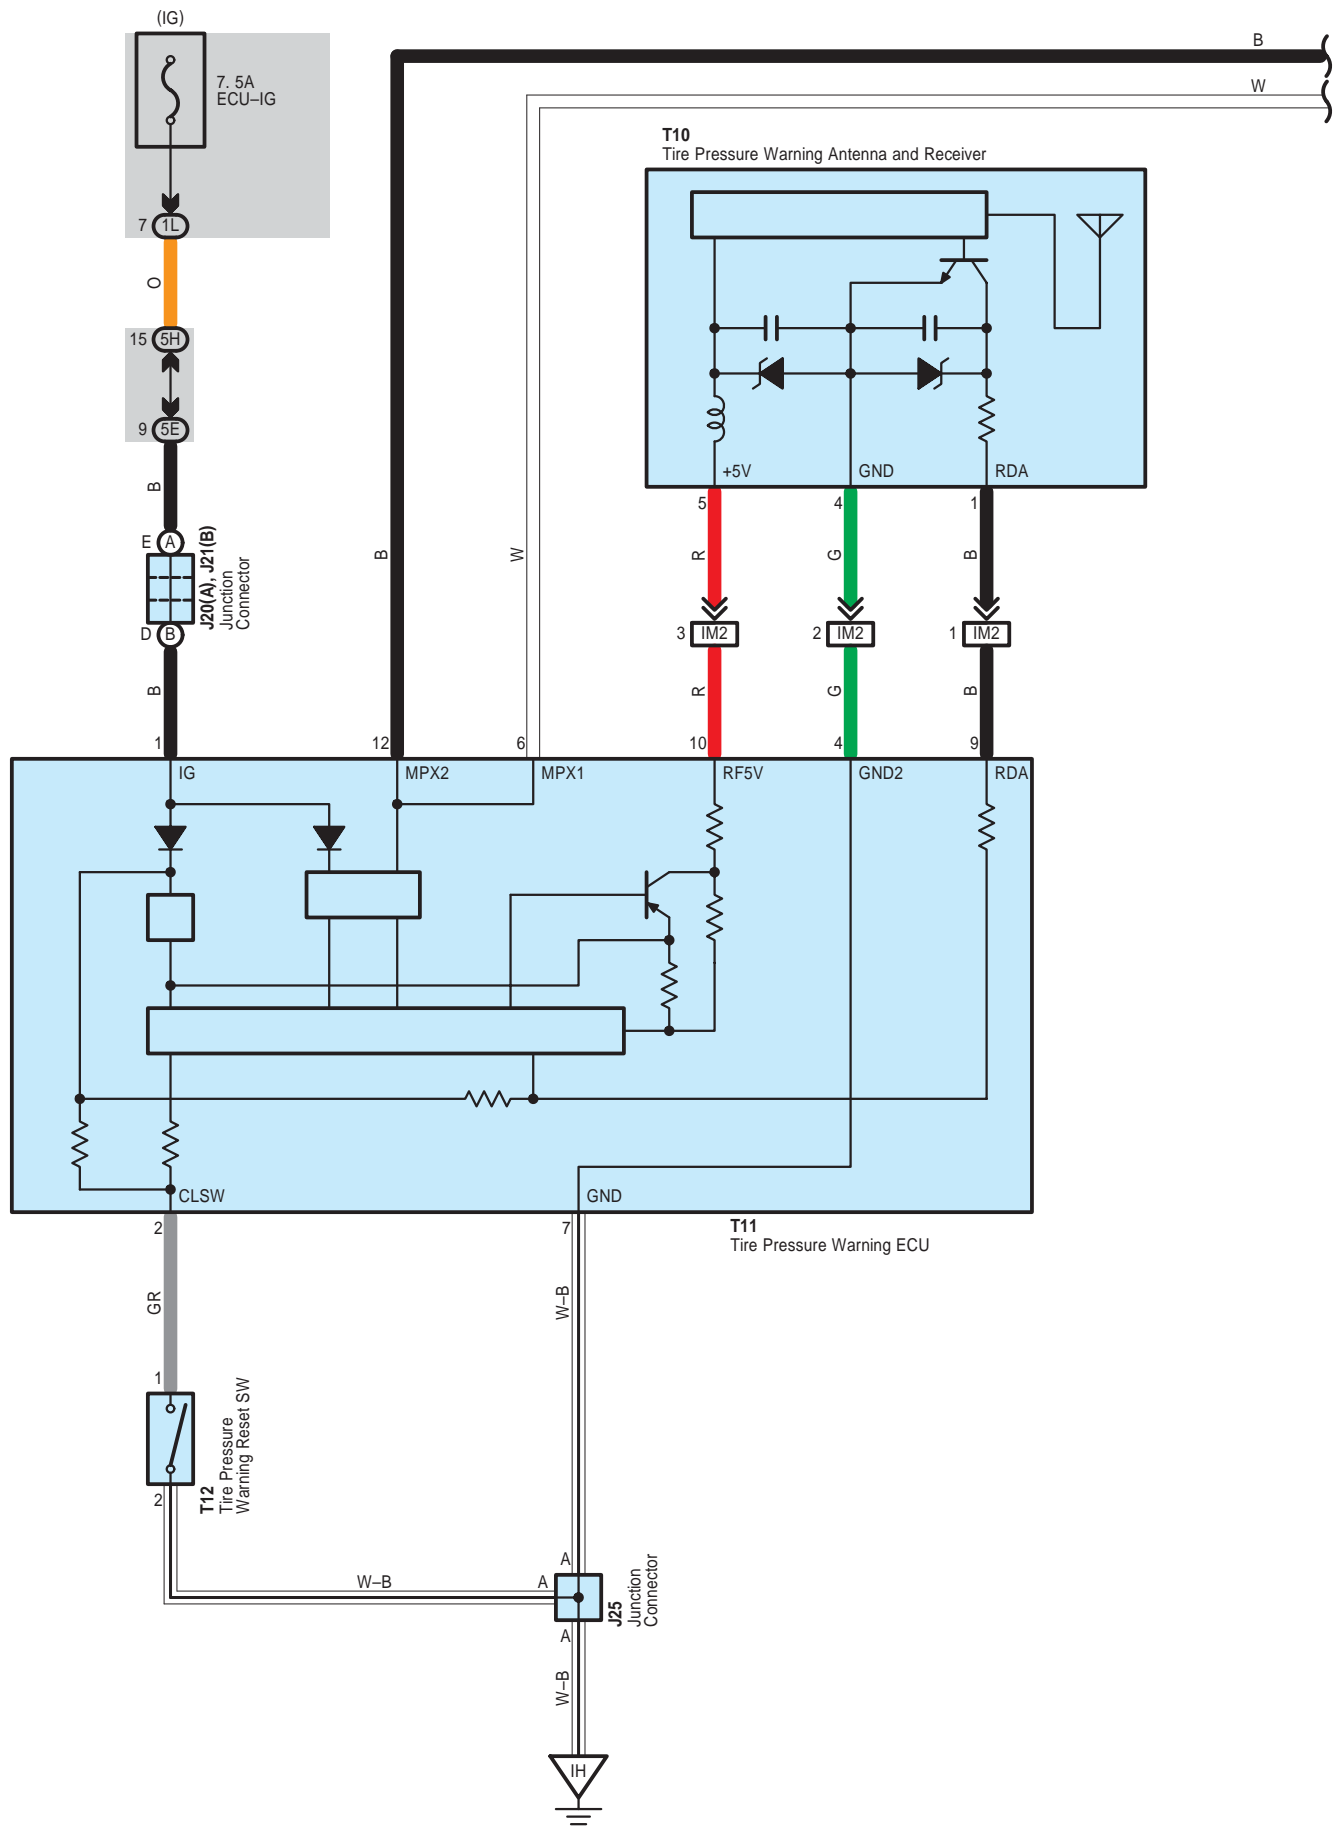

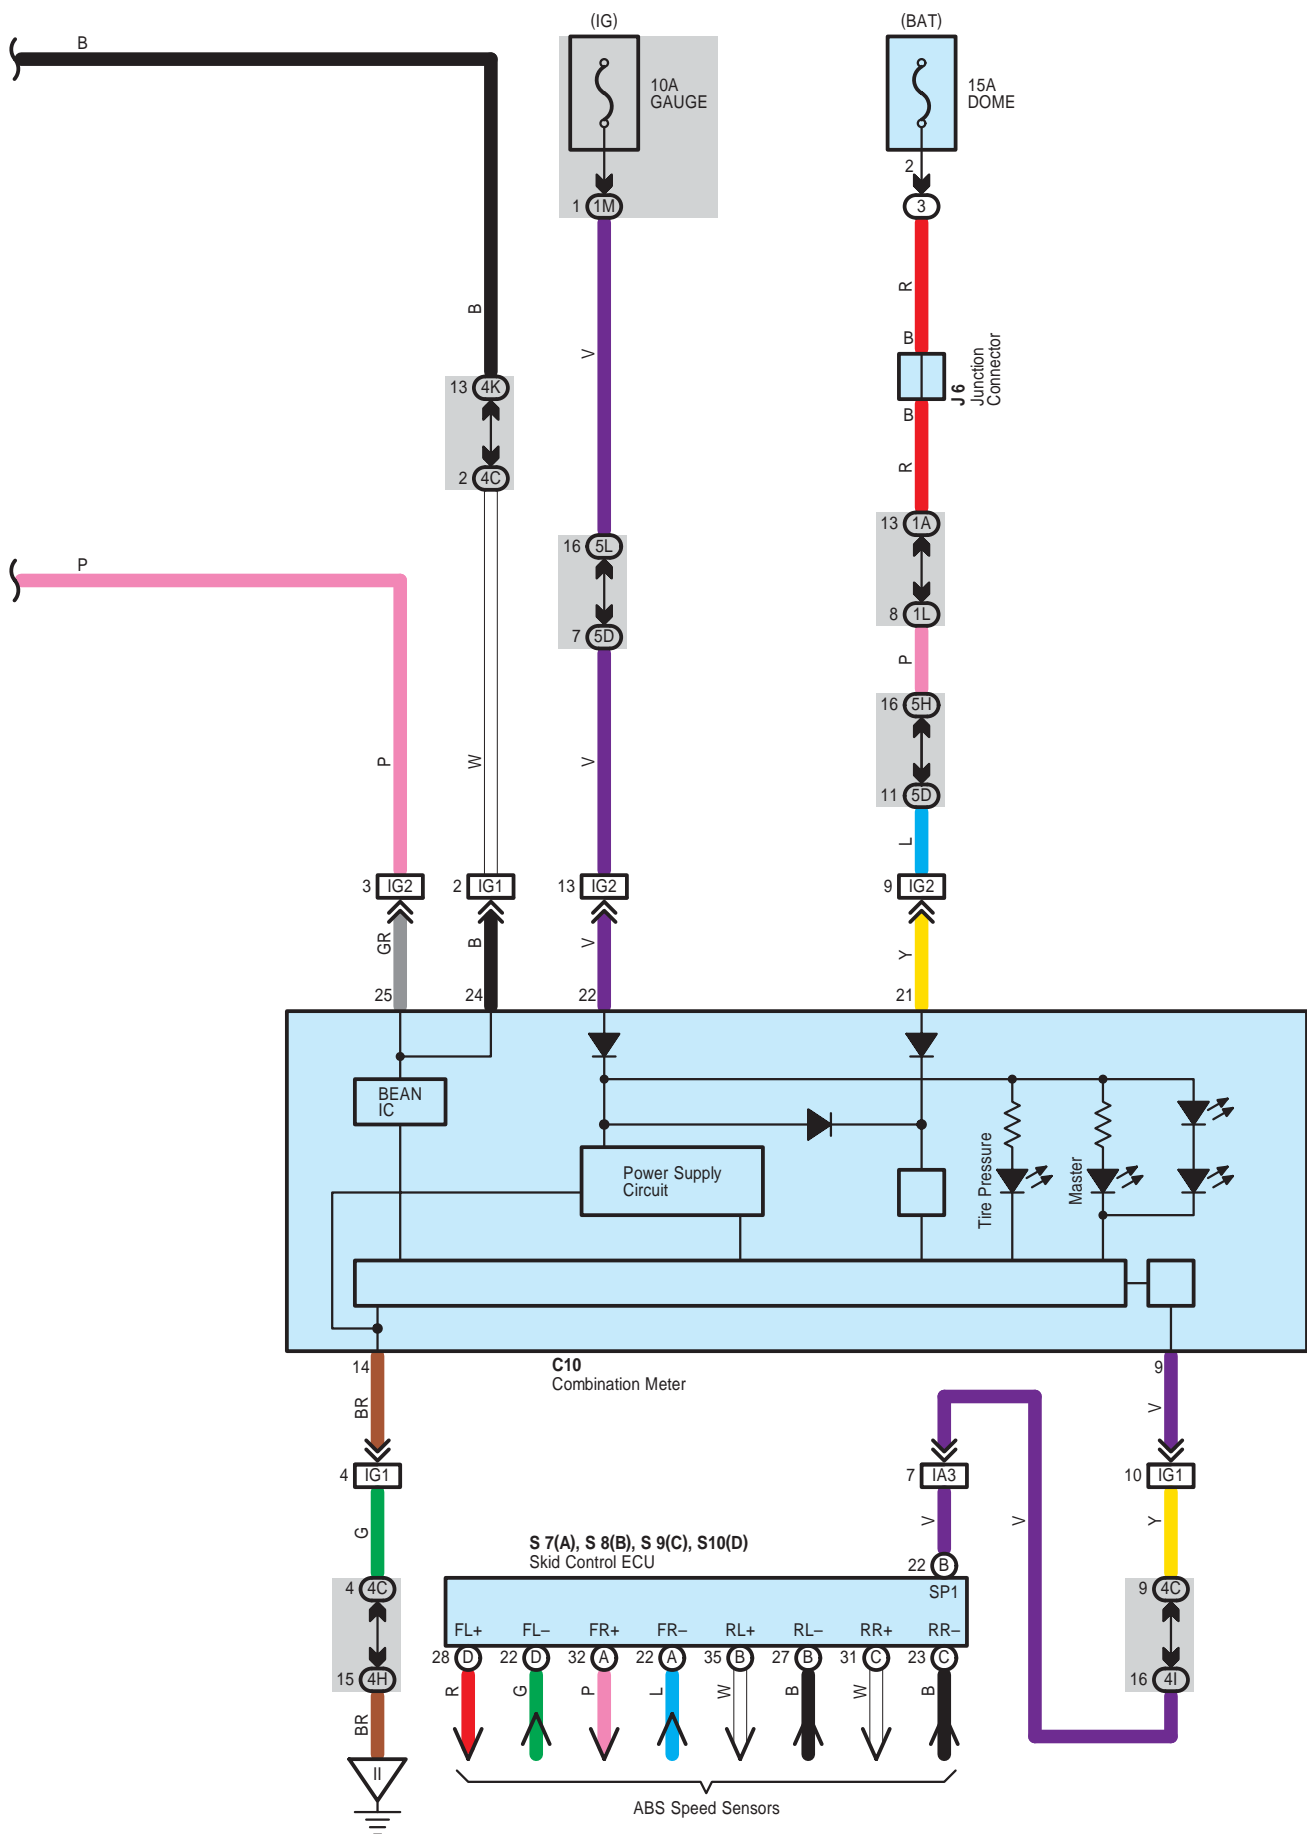

System Outline

- * In the tire pressure warning system, the warning light illuminates to alert the driver about the low tire pressure when the vehicle continues driving with one of the four tires under such low pressure to cause possible driving disturbance.
- * The air pressure sensors installed in the wheels measure air pressure in the tires directly.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	48	J25	50	T4	51
B5	A 48	P6	51	T5	51
C10	49	S7	A 51	T10	55
G1	49	S8	B 51	T11	51
J6	50	S9	C 51	T12	51
J20	A 50	S10	D 51		
J21	B 50	S11	51		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
1M		
4C	38	
4D		
4F		
4H		
4I		
4K		
4L	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5E		
5G		
5H		
5J		
5K		
5L		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	58	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	59	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IM2	59	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH

