


# Automatic Glare-Resistant EC Mirror

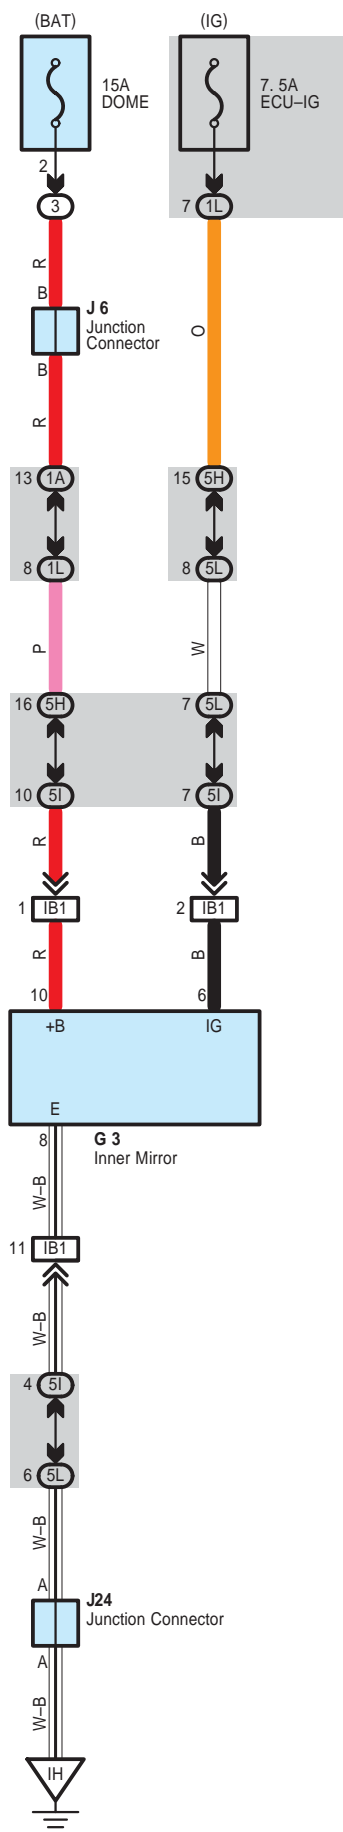

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
G3	53	J6	50	J24	50

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
5H	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5I		
5L		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	58	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)

 : **Ground Points**

Code	See Page	Ground Points Location
IH	58	Cowl Side Panel LH