

VIEWS OF THIS TEXT

Scope of the repair work explanation

- This text explains the welding panel replacement instructions from the vehicle's white body condition. We have abbreviated the explanations of the removal and reinstallation of the equipment parts up to the white body condition and of the installation, inspection, adjustment and final inspection of equipment parts after replacing the weld panel.

Section categories

- Each section has been divided as shown below.

Section Title	Contents	Examples
INTRODUCTION	Explanation of general body repair. Views of weld panel replacement instructions.	Cautionary items. Views of weld panel replacement instructions.
BODY PANEL REPLACEMENT	Instructions for replacing the weld panels from the white body condition, from which bolted parts have been removed, with individual supply parts.	Front side member replacement. Quarter panel replacement.
BODY DIMENSIONS	Body aligning measurements.	Dimension diagrams.
PAINT • COATING	Scope and type of anti-rust treatment, etc. together with weld panel replacement.	Under coat. Body sealer.

Abbreviation of contents in this text.

- The following essential procedures have been abbreviated. When actually working, conduct this work properly.
 - (1) Jack and lift operations.
 - (2) Clean and wash removed parts, if necessary.
 - (3) Visual inspection.

NOTE: The Vehicle Lift and Support Locations sections and For Vehicles Equipped With SRS Airbag and Seat Belt Pretensioner sections refer to the TOYOTA PRIUS Repair Manual.

