

BRAKE CONTROL WARNING LIGHT CIRCUIT (DOES NOT LIGHT UP)

INSPECTION PROCEDURE

1 INSPECT CAN COMMUNICATION SYSTEM (SEE PAGE [05-2597](#))

(a) Is the DTC output for CAN communication system?

Result:

DTC is not output	A
DTC is output	B

B

**REPAIR CAN COMMUNICATION SYSTEM
(SEE PAGE [05-261 1](#))**

A

2 INSPECT MULTIPLEX COMMUNICATION SYSTEM (SEE PAGE [05-2541](#))

(a) Is the DTC output for Multiplex communication system?

Result:

DTC is not output	A
DTC is output	B

B

**REPAIR MULTIPLEX COMMUNICATION
SYSTEM (SEE PAGE [05-2550](#))**

A

REPAIR OR REPLACE COMBINATION METER ASSY (SEE PAGE [05-1985](#))