

DTC	C1300/-	MALFUNCTION IN ECU
------------	----------------	---------------------------

CIRCUIT DESCRIPTION

The skid control ECU outputs this DTC if malfunctions are found in the circuit inside the computer by self-diagnosis.

DTC No.	Detailed Code	DTC Detecting Condition	Trouble Area
C1300/-	-	Malfunction in skid control ECU	Skid control ECU

INSPECTION PROCEDURE

1	CHECK DTC
----------	------------------

- (a) Clear the DTCs (see page [05-973](#)).
- (b) Turn the power switch ON (READY).
- (c) Check the same DTCs are recorded.

Result:

DTC is output	A
DTC is not output	B

B

**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE [05-964](#))**

A

REPLACE SKID CONTROL ECU ASSY (SEE PAGE 32-68)

NOTICE:

When replacing the skid control ECU assy, perform initialization of linear solenoid valve and calibration (see page [05-956](#)).