

## CHECK FOR INTERMITTENT PROBLEMS

### 1. CHECK FOR INTERMITTENT PROBLEMS

- (a) Perform a simulation test (see page [01-37](#) ).
  - (1) In the simulation test, reproduce the driving condition at the trouble occurrence according to the customer's comments and freeze frame data recorded with DTCs.
- (b) Check the connector(s) and terminal(s) (see page [01-47](#) ).
- (c) Wiggle the harness and connector(s) (see page [01-47](#) ).