

## CHECK FOR INTERMITTENT PROBLEMS

### 1. CHECK FOR INTERMITTENT PROBLEMS

- (a) Perform a simulation test (see page [01-37](#) ).
  - (1) In the simulation test, reproduce the driving condition at the trouble occurrence according to the customer's comments and freeze frame data recorded with DTCs, such as an opening angle of the accelerator pedal, SOC, engine coolant temperature, engine rpm, and MG1/MG2 rpm and torque.
- (b) Check the connector(s) and terminal(s) (see page [01-47](#) ).
- (c) Wiggle the harness and connector(s) (see page [01-47](#) ).