

## PROBLEM SYMPTOMS TABLE

When the malfunction is not confirmed in the diagnostic trouble code check and the problem still can not be confirmed in the basic inspection, use this table and troubleshoot according to the priority order given below.

Symptom	Suspected Area	See page
Engine does not crank (Does not start)	26.MG1 27.Hybrid system 28.Immobilizer 29.Push start system	- 05-404 05-2321 -
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. Spark plug 4. Immobilizer system 5. Injector 6. ECM 7. Crankshaft position sensor circuit	05-366 05-373 18-3 05-2321 11-7 10-5 05-177
No complete combustion (Does not start)	1. Fuel pump control circuit 2. Spark plug 3. Immobilizer system 4. Injector 5. Crankshaft position sensor circuit	05-373 18-3 05-2321 11-7 05-177
Engine cranks normally but difficult to start	1. Fuel pump control circuit 2. Compression 3. Spark plug 4. Injector 5. Crankshaft position sensor circuit	05-373 14-1 18-3 11-7 05-177
Difficult to start with cold engine	1. Fuel pump control circuit 2. Spark plug 3. Injector 4. Crankshaft position sensor circuit	05-373 18-3 11-7 05-177
Difficult to start with hot engine	1. Fuel pump control circuit 2. Spark plug 3. Injector 4. Crankshaft position sensor circuit	05-373 18-3 11-7 05-177
High engine idle speed (Poor idling)	1. ECM power source circuit 2. Electronic throttle control system	05-366 05-13
Low engine idle speed (Poor idling)	1. Fuel pump control circuit 2. Electronic throttle control system 3. Injector	05-373 05-13 11-7
Rough idling (Poor idling)	1. Compression 2. Electronic throttle control system 3. Injector 4. Fuel pump control circuit 5. Spark plug	14-1 05-13 11-7 05-373 18-3
Hunting (Poor idling)	1. ECM power source circuit 2. Electronic throttle control system 3. Fuel pump control circuit	05-366 05-13 05-373
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. Injector 3. Spark plug 4. HV transaxle	05-373 11-7 18-3 -
Surging (Poor driveability)	1. Fuel pump control circuit 2. Spark plug 3. Injector	05-373 18-3 11-7

Symptom	Suspected Area	See page
Engine stalls soon after starting	1. Fuel pump control circuit	<a href="#">05-373</a>
	2. Electronic throttle control system	<a href="#">05-13</a>
	3. Immobilizer	<a href="#">05-2321</a>
	4. Crankshaft position sensor circuit	<a href="#">05-177</a>
Unable to refuel/Difficult to refuel	1. ORVR system	