

SUPPLEMENTAL RESTRAINT SYSTEM

05IX5-01

PRECAUTION

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following system after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-28

NOTICE:

- When the warning lamp is illuminated or the battery has been disconnected and reconnected, pressing the power switch may not start the system on the first try. If so, press the power switch again.
- With the power switch's power mode changed to ON (IG), disconnect the battery. If the key is not in the key slot during reconnection, DTC B2799 may be output.

1. HANDLING PRECAUTIONS FOR AIRBAG SENSOR

HINT:

The airbag sensors include the airbag ECU assy, airbag sensor front LH, airbag sensor front RH, side airbag sensor assy LH, side airbag sensor assy RH, airbag sensor rear LH, airbag sensor rear RH and seat position airbag sensor.

- (a) Make sure that the power switch is off and wait at least 90 seconds after disconnecting the negative (-) terminal cable of the battery when performing the following.
 - (1) Replacement of the airbag sensors
 - (2) Adjustment of the front or rear door a vehicle equipped with a front seat airbag and curtain shield airbag
- (b) When connecting or disconnecting the connectors, ensure that the airbag sensors have already been installed in the vehicle.
- (c) Do not use airbag sensors that have been dropped during the operation or transportation.
- (d) When installing the airbag sensors, ensure that they are affixed using the specified torque.
- (e) Do not disassemble the airbag sensors.